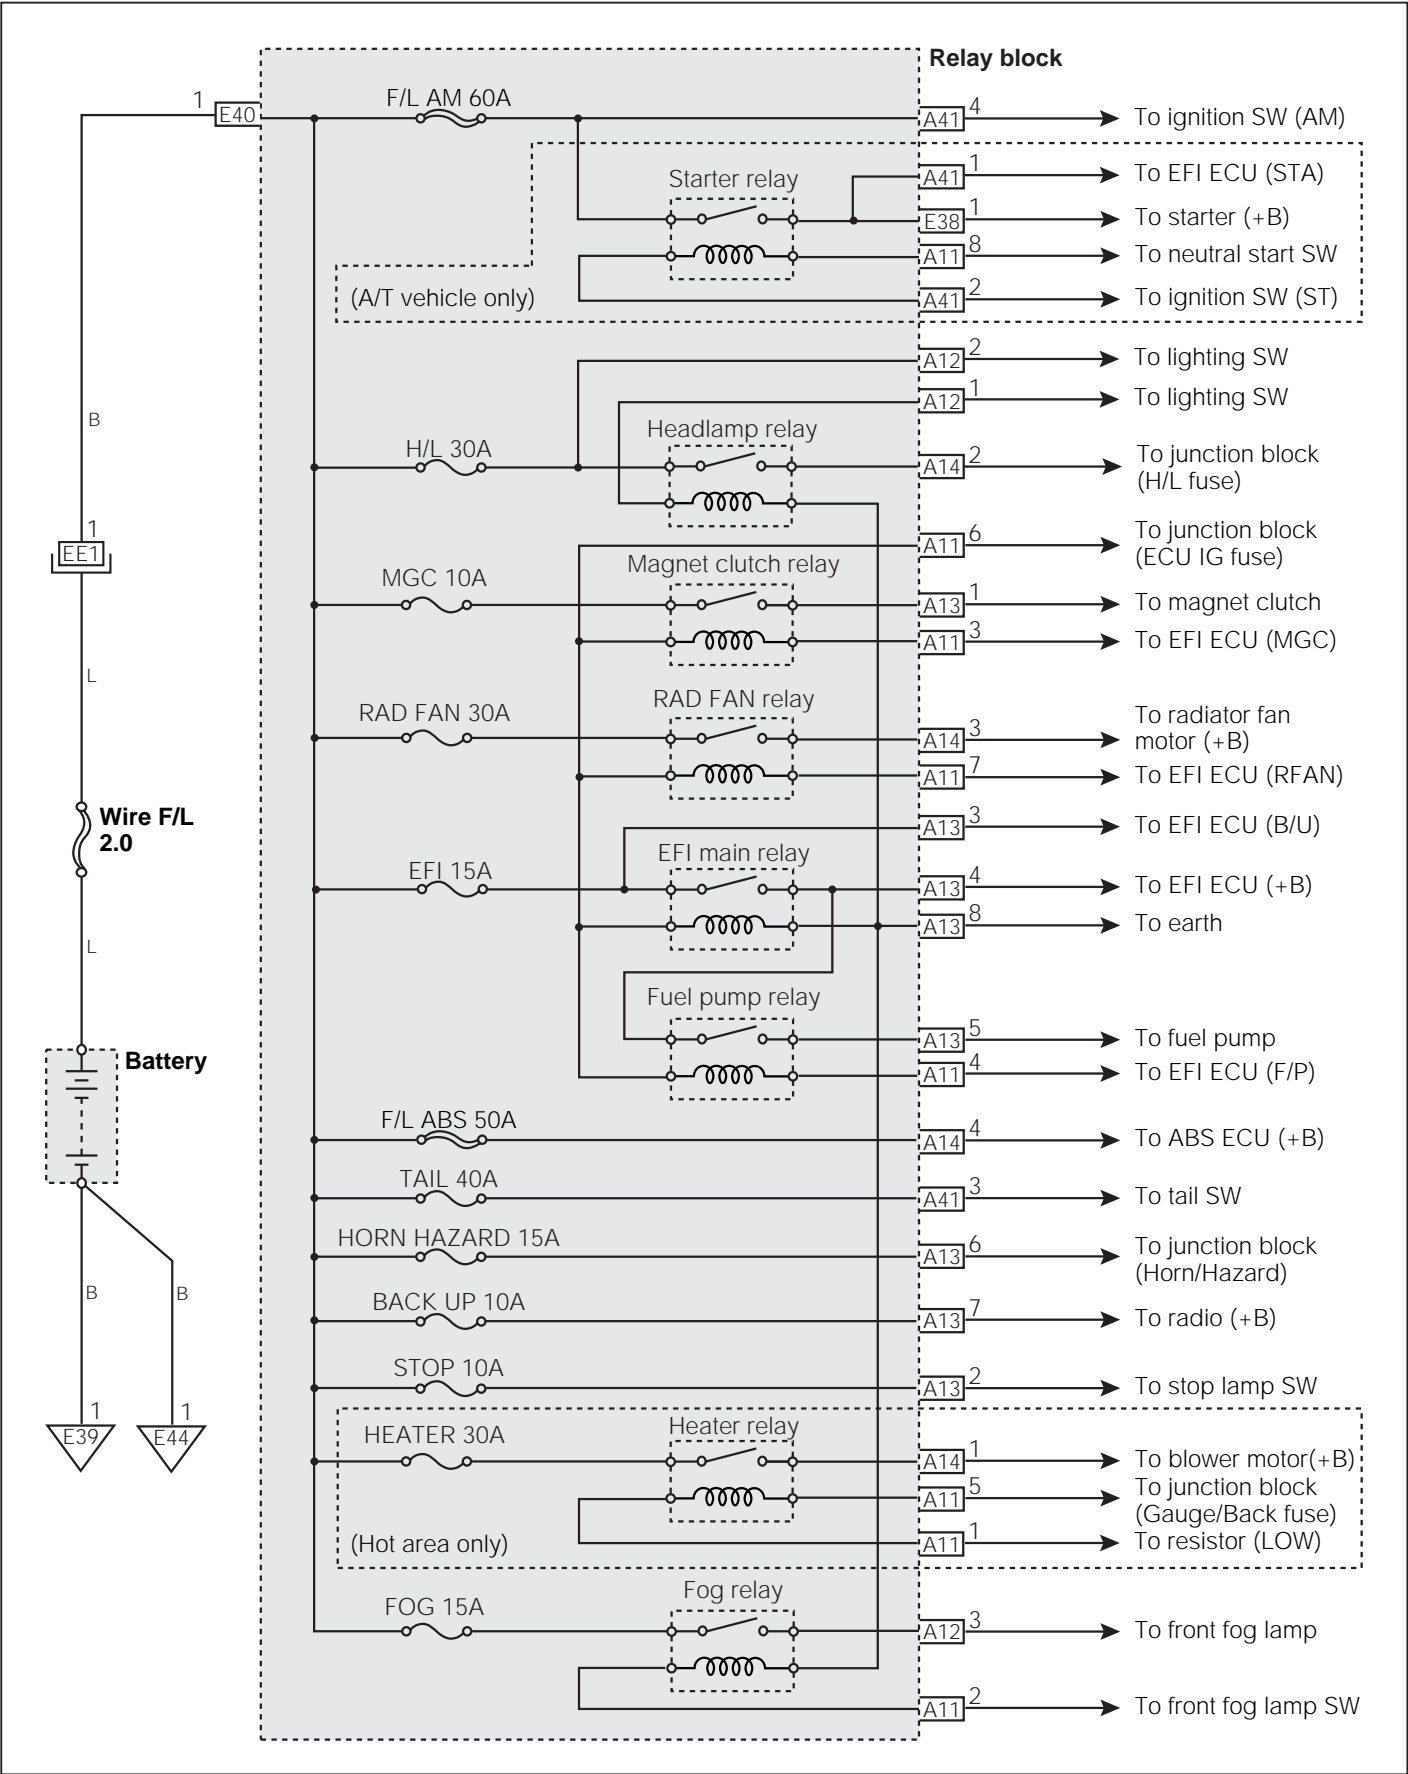



HARNESS & WIRING DIAGRAM

WIRING DIAGRAM	HW-2	INTERIOR LAMP &	
POWER SOURCE / RELAY BLOCK (RHD)	HW-2	LUGGAGE ROOM LAMP (RHD)	HW-65
POWER SOURCE / RELAY BLOCK (LHD)	HW-3	GAUGE, TACHO METER &	
POWER SOURCE /		VEHICLE SPEED SENSOR	
JUNCTION BLOCK (RHD)	HW-4	(RHD / w/ METER CABLE)	HW-66
POWER SOURCE / JUNCTION BLOCK		GAUGE, TACHO METER &	
(LHD / WIHT DAY-LIGHT SYSTEM)	HW-6	VEHICLE SPEED SENSOR	
POWER SOURCE / JUNCTION BLOCK		(RHD / w/o METER CABLE)	HW-67
(LHD / WIHTOUT DAY-LIGHT SYSTEM)	HW-8	GAUGE, TACHO METER &	
CHARGING SYSTEM (RHD)	HW-10	VEHICLE SPEED SENSOR	
CHARGING SYSTEM (LHD)	HW-11	(LHD / w/ METER CABLE)	HW-68
STARTING SYSTEM (RHD / A/T VEHICLE) ...	HW-12	GAUGE, TACHO METER &	
STARTING SYSTEM (RHD / M/T VEHICLE) ...	HW-13	VEHICLE SPEED SENSOR	
STARTING SYSTEM (LHD / A/T VEHICLE) ...	HW-14	(LHD / w/o METER CABLE)	HW-69
STARTING SYSTEM (LHD / M/T VEHICLE) ...	HW-15	WARNING LAMP (RHD)	HW-70
EFI SYSTEM (RHD / EC ONLY)	HW-16	WARNING LAMP (LHD)	HW-71
EFI SYSTEM (RHD / EXCEPT FOR EU)	HW-20	FRONT WIPER & WASHER (RHD)	HW-72
EFI SYSTEM (LHD / EC ONLY)	HW-24	FRONT WIPER & WASHER (LHD)	HW-73
EFI SYSTEM (LHD / EXCEPT FOR EU)	HW-28	REAR WIPER & WASHER (RHD)	HW-74
A/T CONTROL (RHD)	HW-32	REAR WIPER & WASHER (LHD)	HW-75
A/T CONTROL (LHD)	HW-34	DEFOGGER (RHD)	HW-76
CENTER DIFFERENTIAL LOCK (RHD)	HW-36	DEFOGGER (LHD)	HW-77
CENTER DIFFERENTIAL LOCK (LHD)	HW-37	REAR VIEW MIRROR (RHD)	HW-78
ABS SYSTEM (RHD)	HW-38	REAR VIEW MIRROR (LHD)	HW-79
ABS SYSTEM (LHD)	HW-39	POWER WINDOW (RHD)	HW-80
SRS AIRBAG SYSTEM (RHD)	HW-40	POWER WINDOW (LHD)	HW-82
SRS AIRBAG SYSTEM (LHD)	HW-41	ITC SYSTEM (RHD)	HW-84
HEAD LAMP (RHD)	HW-42	ITC SYSTEM (LHD)	HW-88
HEAD LAMP (LHD / EGYPT ONLY)	HW-43	IMMOBILIZER SYSTEM & HORN (RHD)	HW-92
HEAD LAMP (LHD / EXCEPT FOR EGYPT) ...	HW-44	IMMOBILIZER SYSTEM & HORN (LHD)	HW-93
HEAD LAMP LEVELING SYSTEM (RHD)	HW-46	HEATER & VENTILATION	
HEAD LAMP LEVELING SYSTEM (LHD)	HW-47	(RHD / w/ HEATER RELAY)	HW-94
DAY-LIGHT SYSTEM (LHD)	HW-48	HEATER & VENTILATION	
FRONT FOG LAMP (RHD)	HW-50	(RHD / w/o HEATER RELAY)	HW-95
FRONT FOG LAMP (LHD)	HW-51	HEATER & VENTILATION	
REAR FOG LAMP (RHD)	HW-52	(LHD / w/ HEATER RELAY)	HW-96
REAR FOG LAMP (LHD)	HW-53	HEATER & VENTILATION	
TAIL & LICENSE PLATE LAMP (LHD)	HW-54	(LHD / w/o HEATER RELAY)	HW-97
TAIL & LICENSE PLATE LAMP (RHD)	HW-56	CLOCK (RHD)	HW-98
HAZARD WARNING &		CLOCK (LHD)	HW-99
TURN SIGNAL LAMP (RHD)	HW-58	RADIO & CIGARETTE LIGHTER (RHD)	HW-100
HAZARD WARNING &		RADIO & CIGARETTE LIGHTER (LHD)	HW-101
TURN SIGNAL LAMP (LHD)	HW-59	DATA LINK CONNECTOR (RHD)	HW-102
STOP LAMP (RHD)	HW-60	DATA LINK CONNECTOR (LHD)	HW-103
STOP LAMP (LHD)	HW-61	CONNECTOR LIST	HW-104
BACK UP LAMP (RHD)	HW-62	LOCATION OF CONNECTORS	HW-127
BACK UP LAMP (LHD)	HW-63	RHD VEHICLE	HW-127
INTERIOR LAMP &		LHD VEHICLE	HW-129
LUGGAGE ROOM LAMP (RHD)	HW-64		


WIRING DIAGRAM
POWER SOURCE / RELAY BLOCK (RHD)




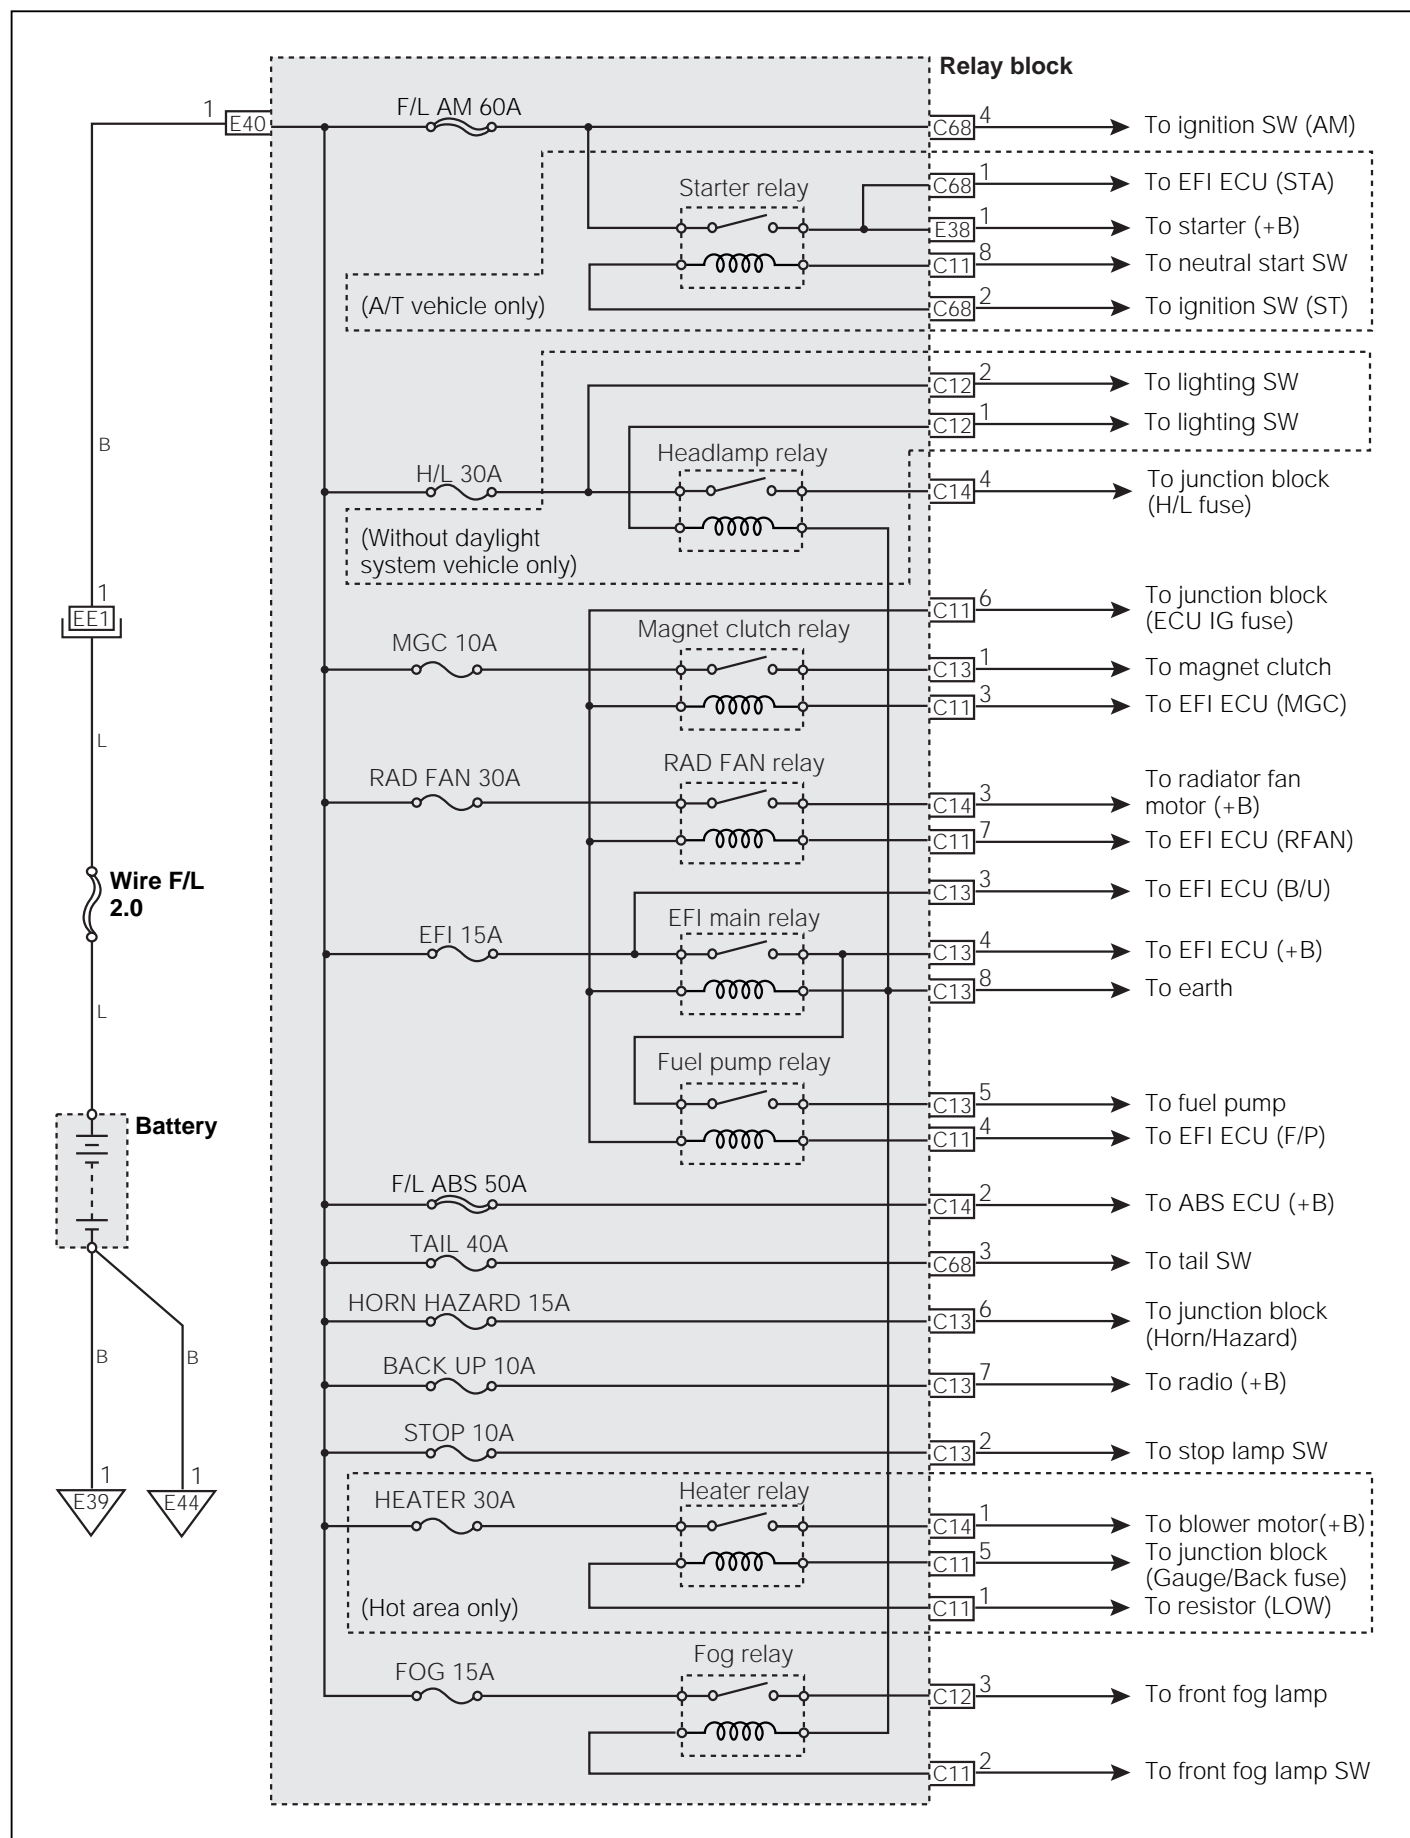POWER SOURCE / RELAY BLOCK (LHD)




POWER SOURCE / JUNCTION BLOCK (RHD)

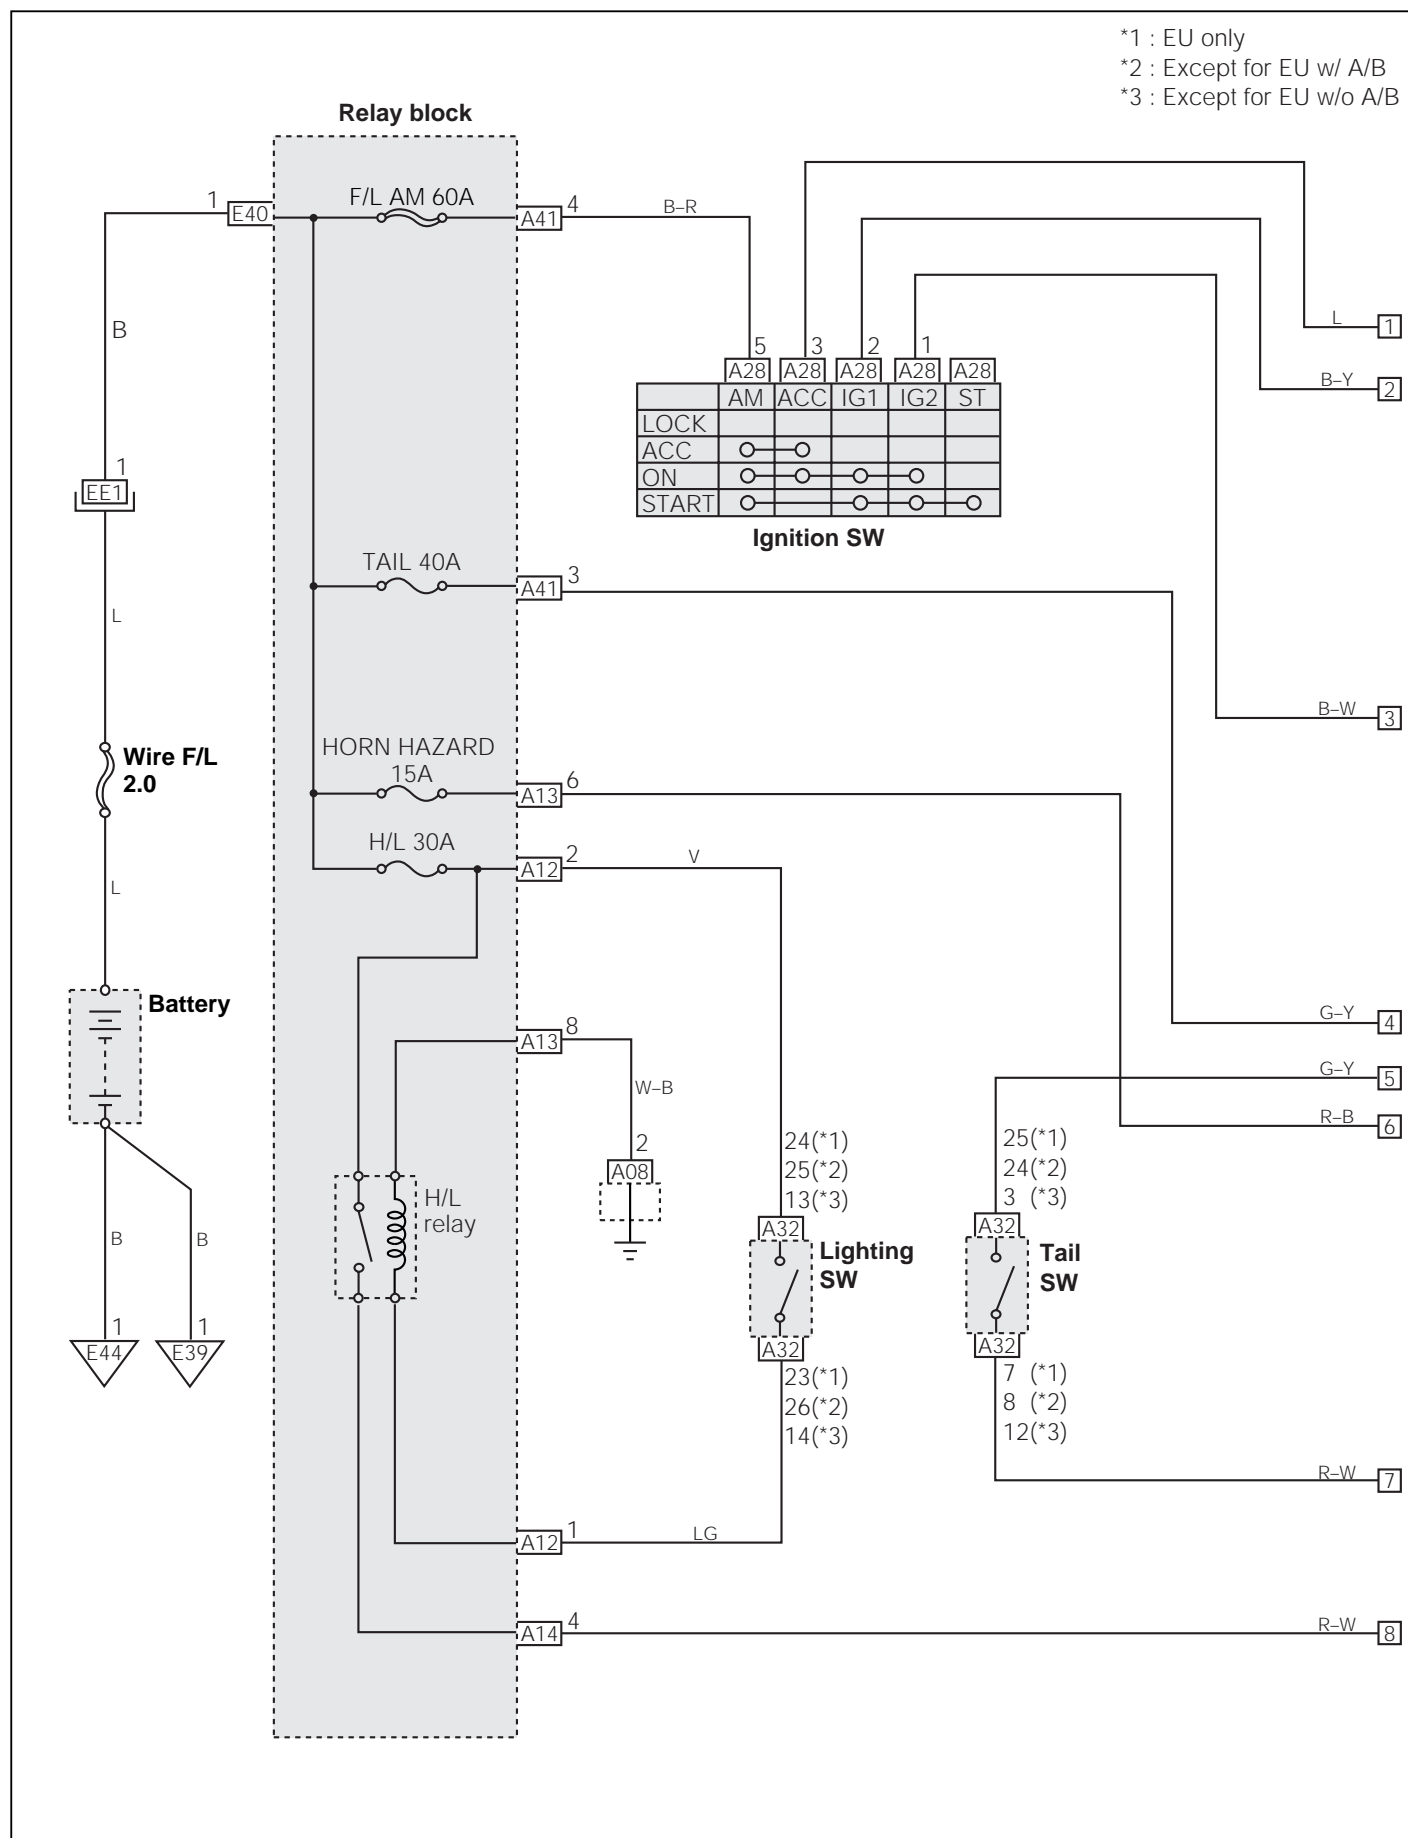

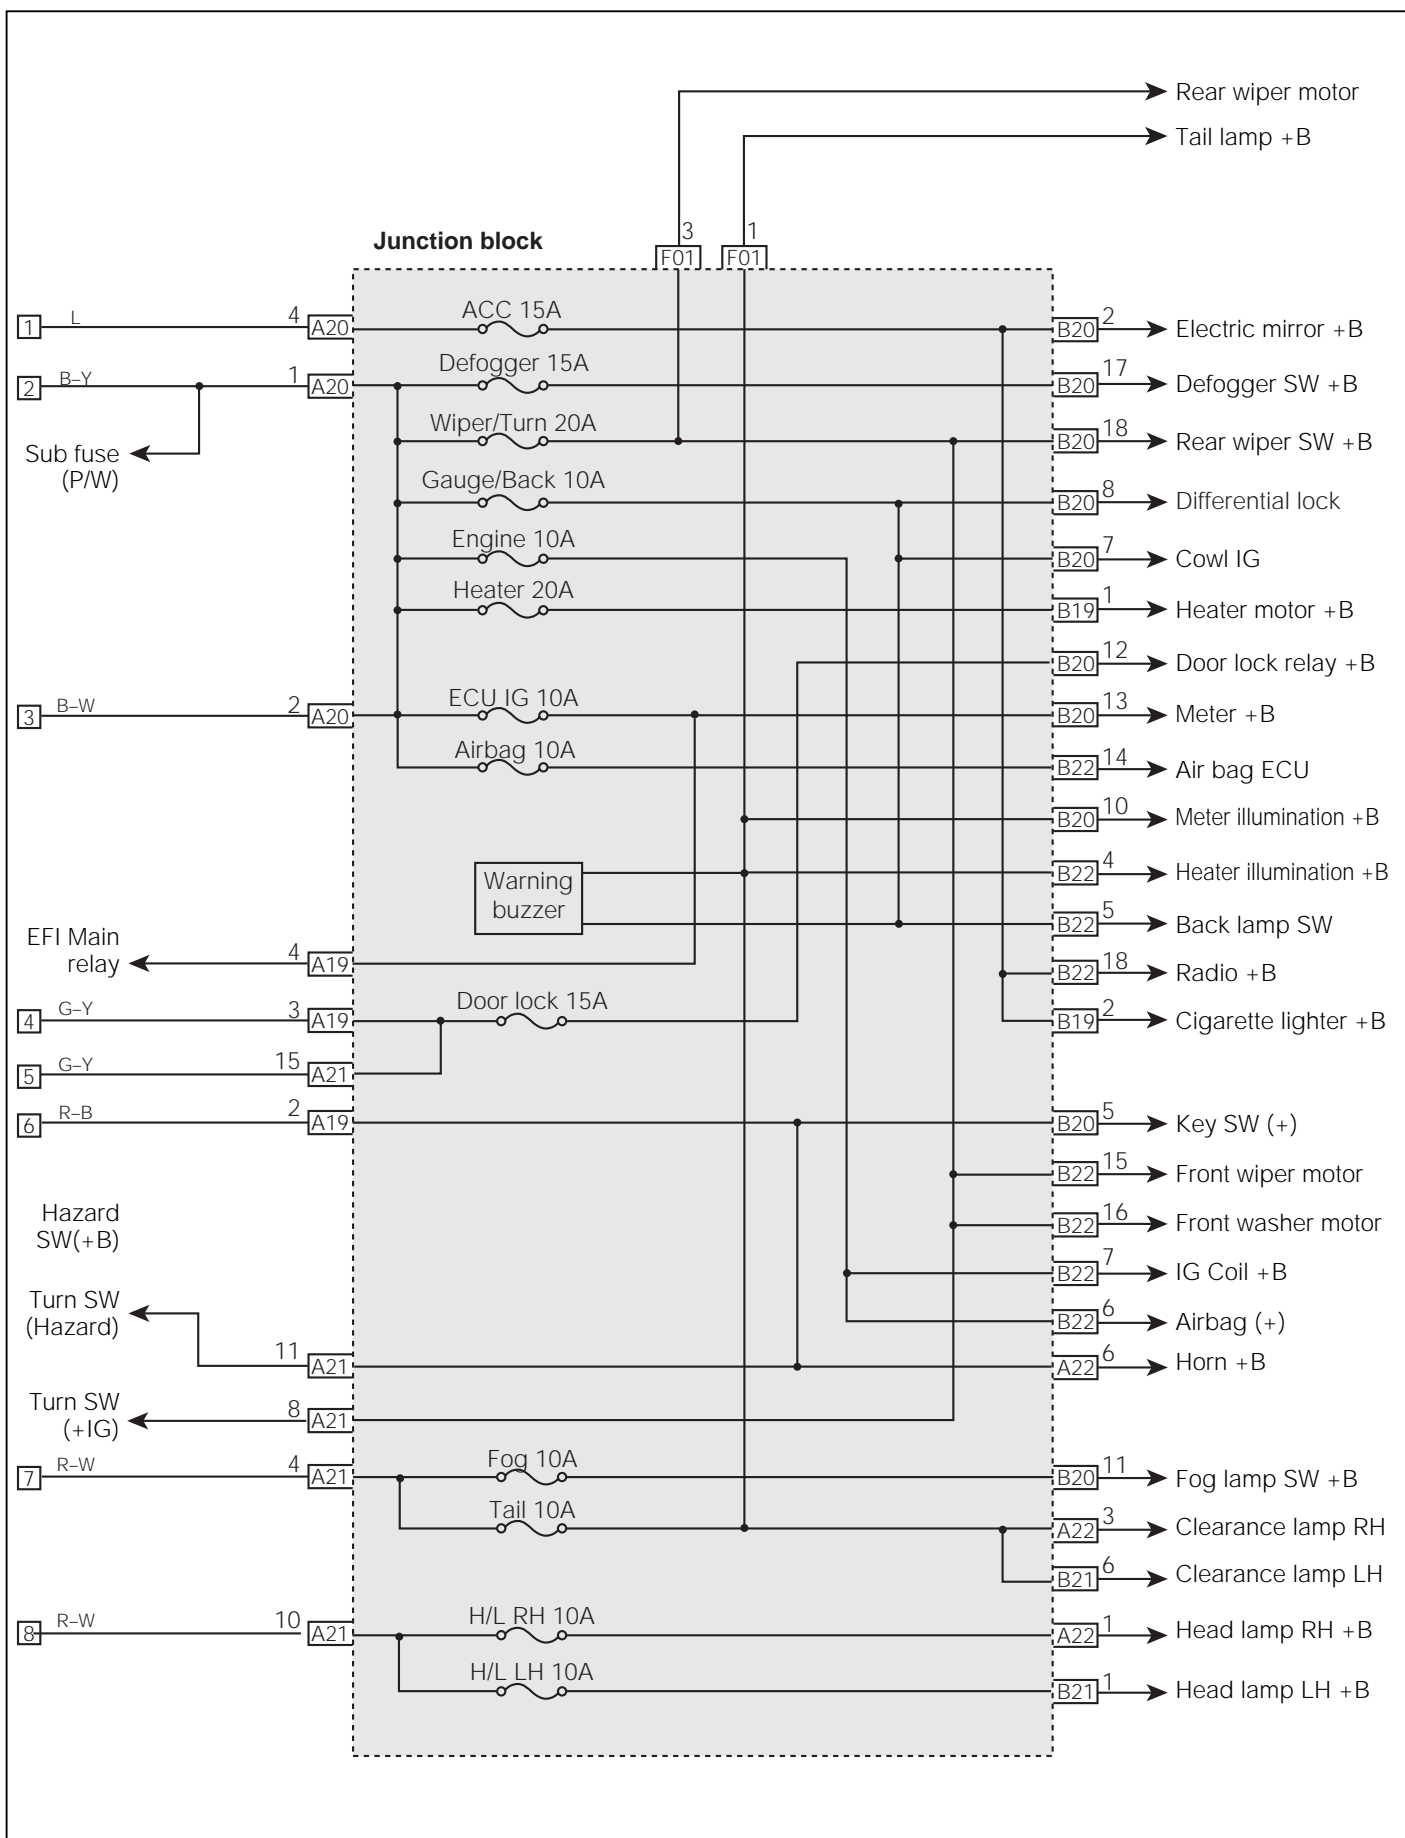


HW-6

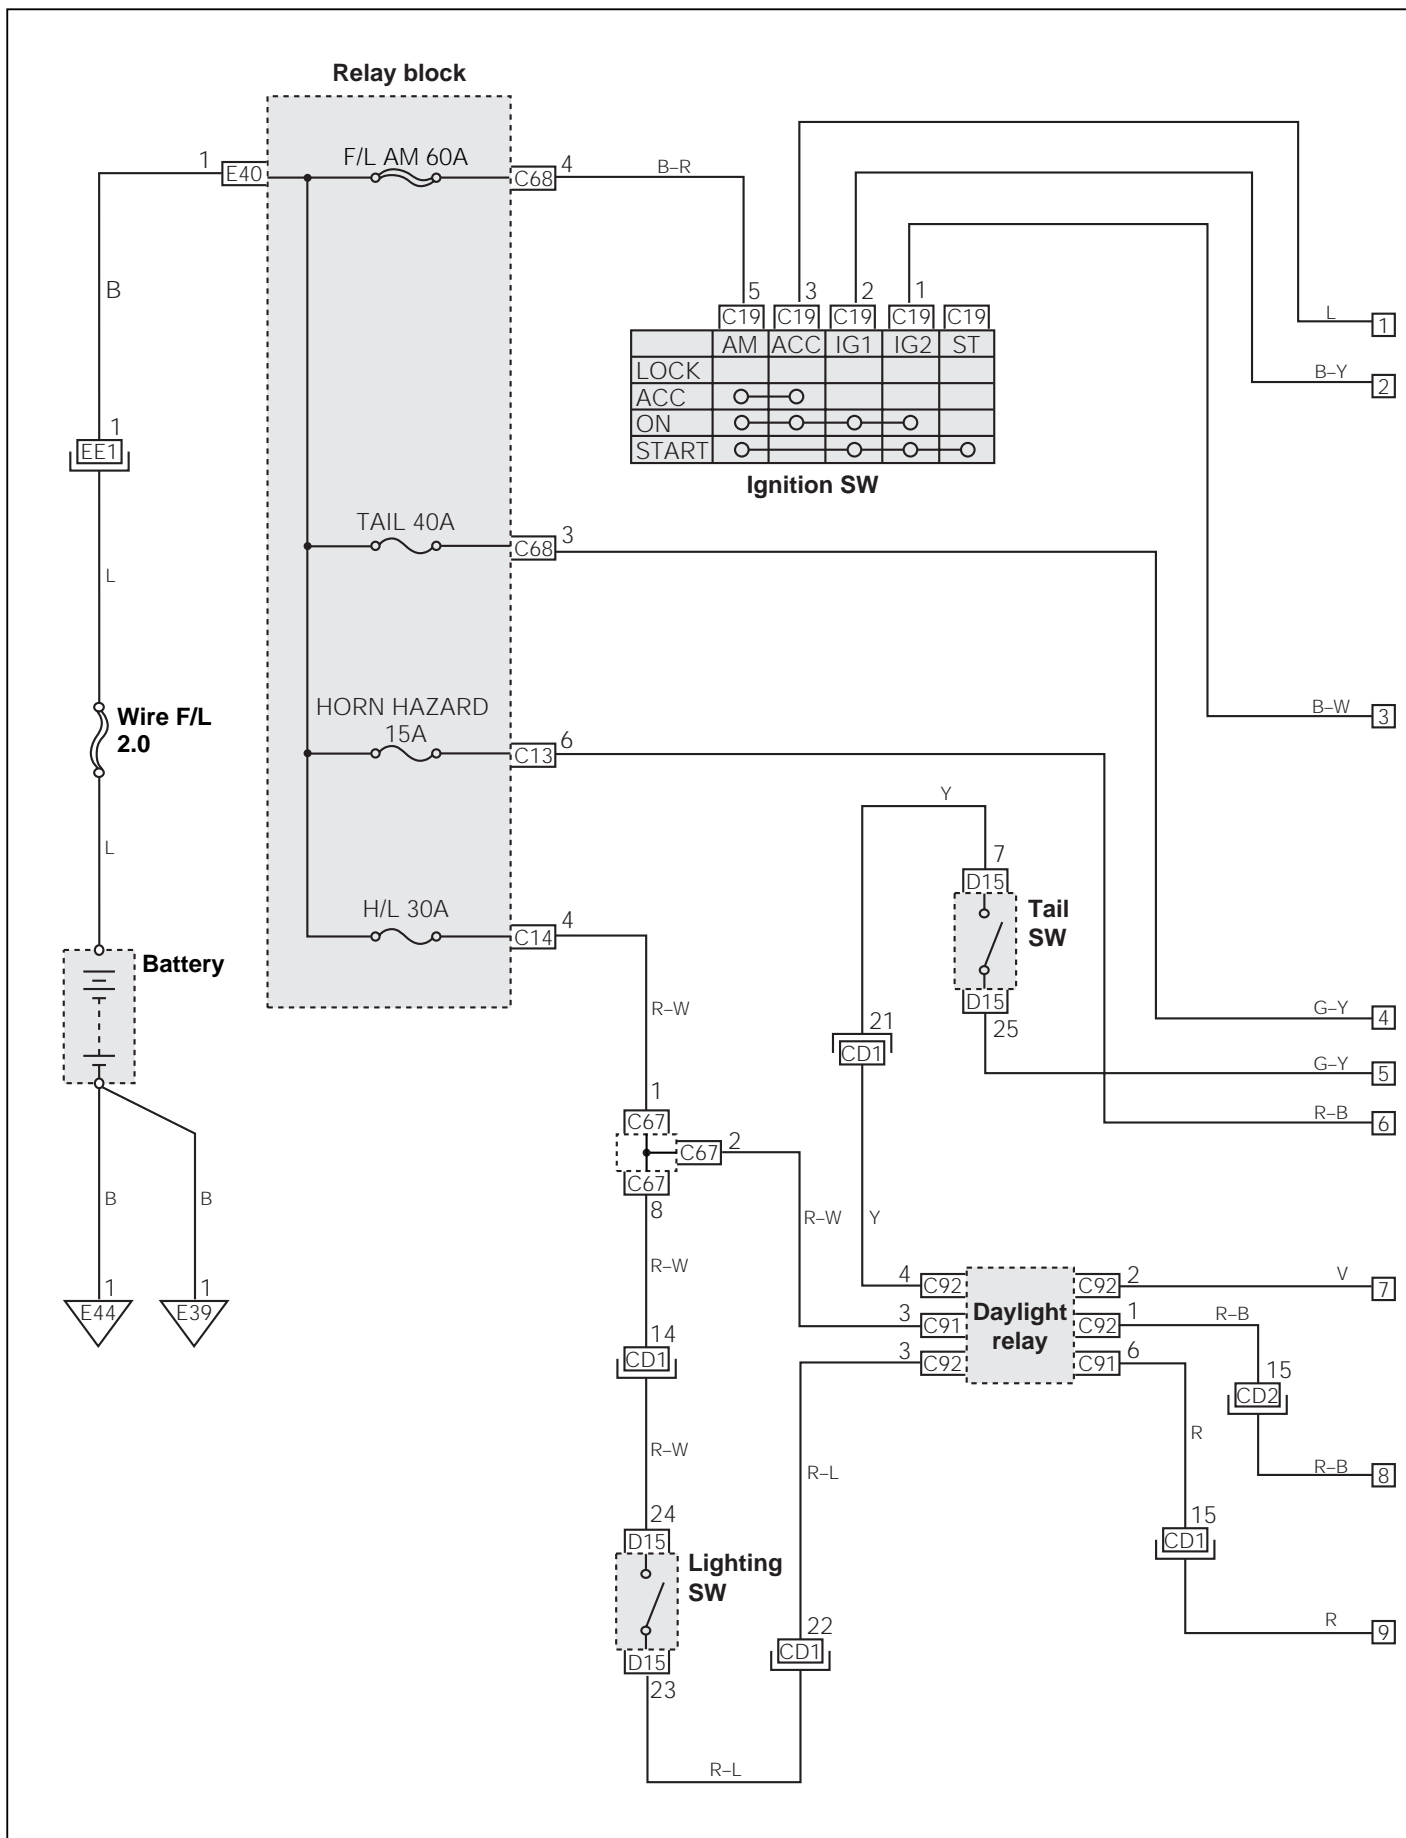POWER SOURCE / JUNCTION BLOCK (LHD / w/ DAY-LIGHT SYSTEM) -1




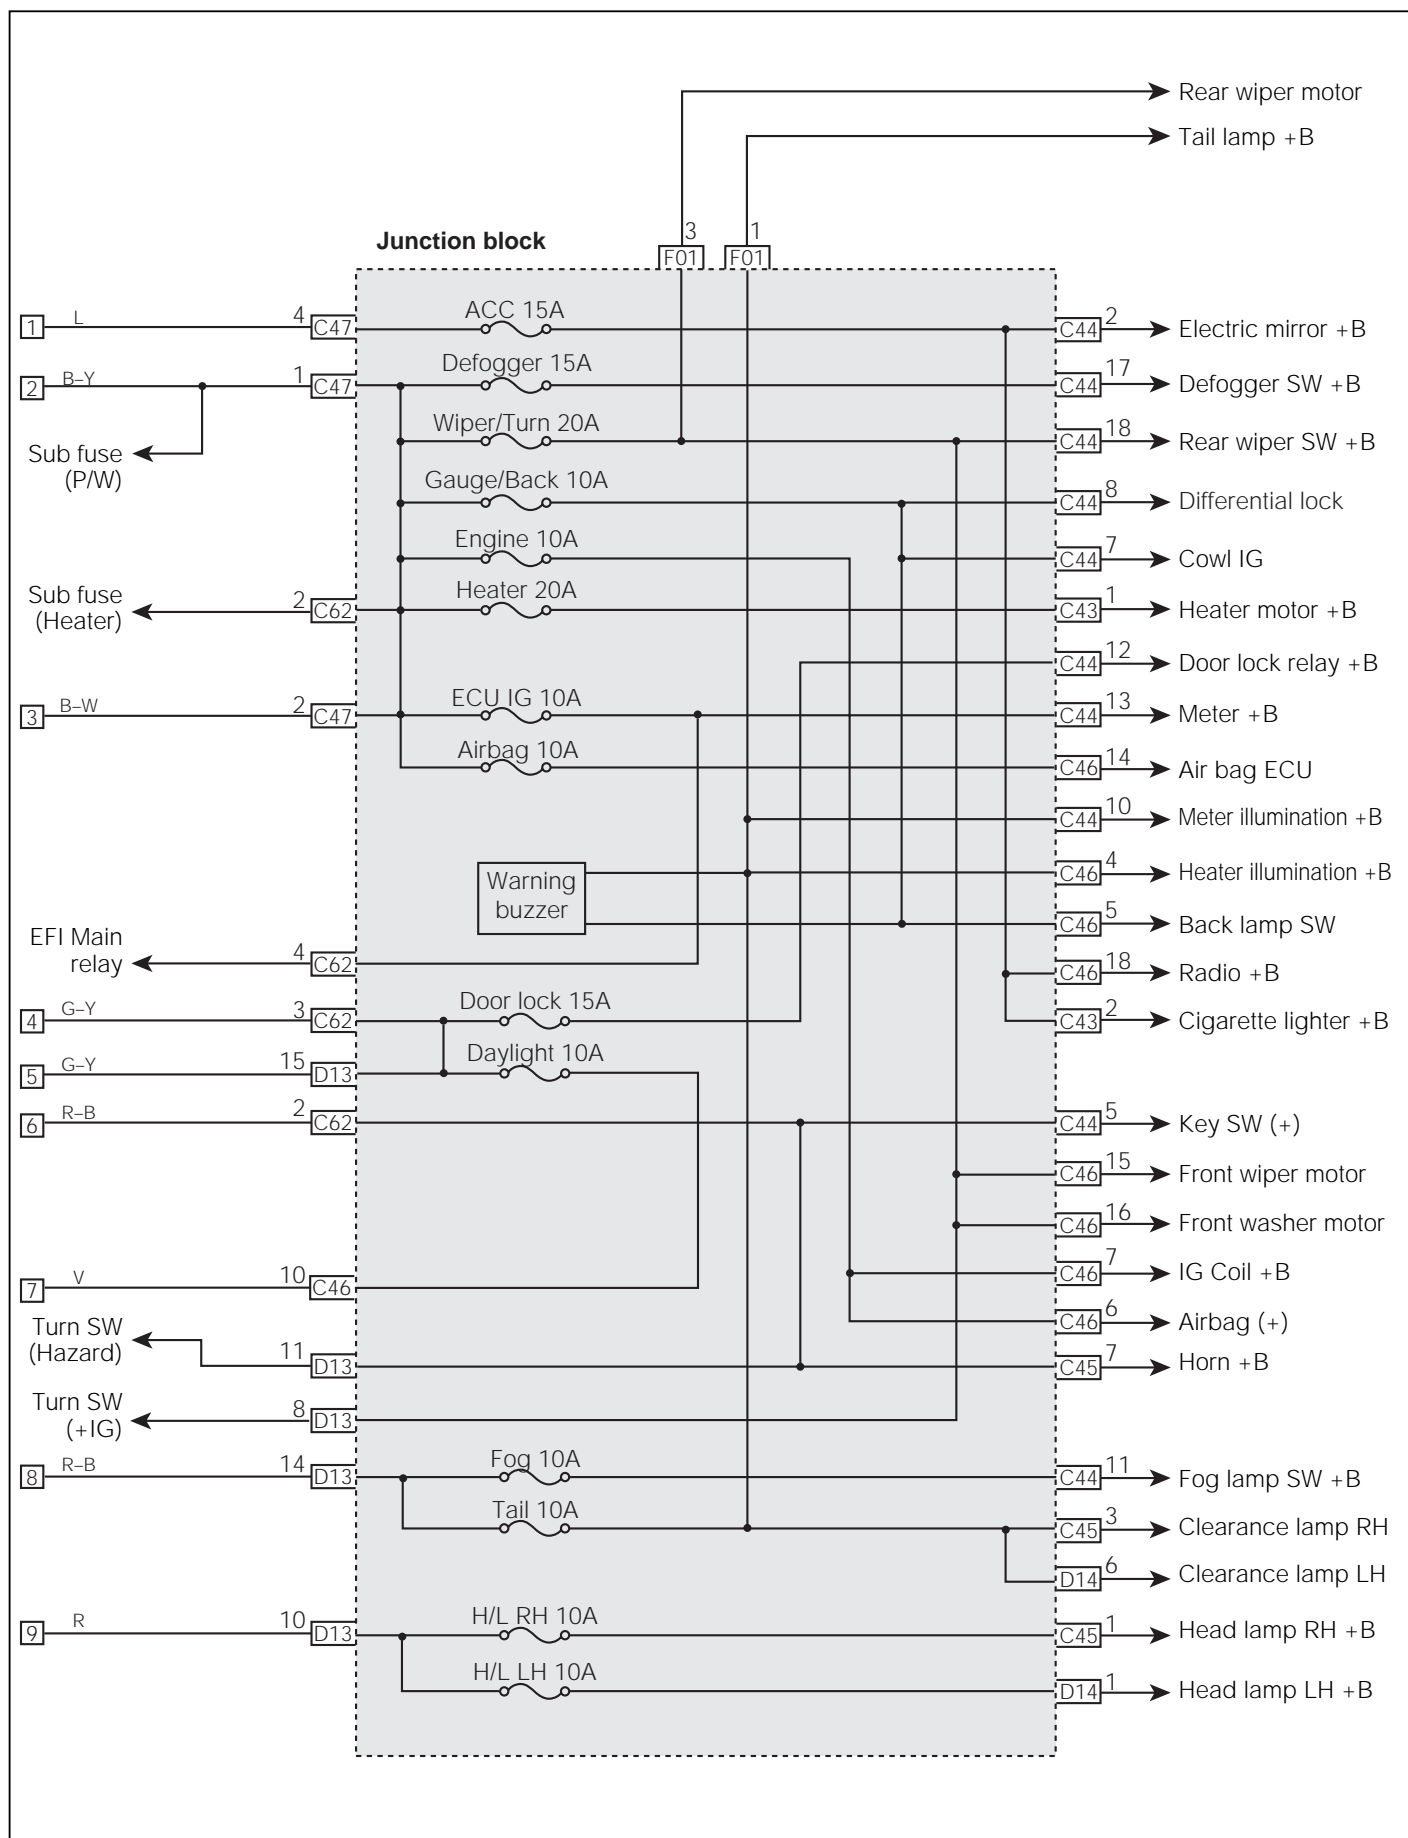POWER SOURCE / JUNCTION BLOCK (LHD / w/ DAY-LIGHT SYSTEM) -2




HW-8

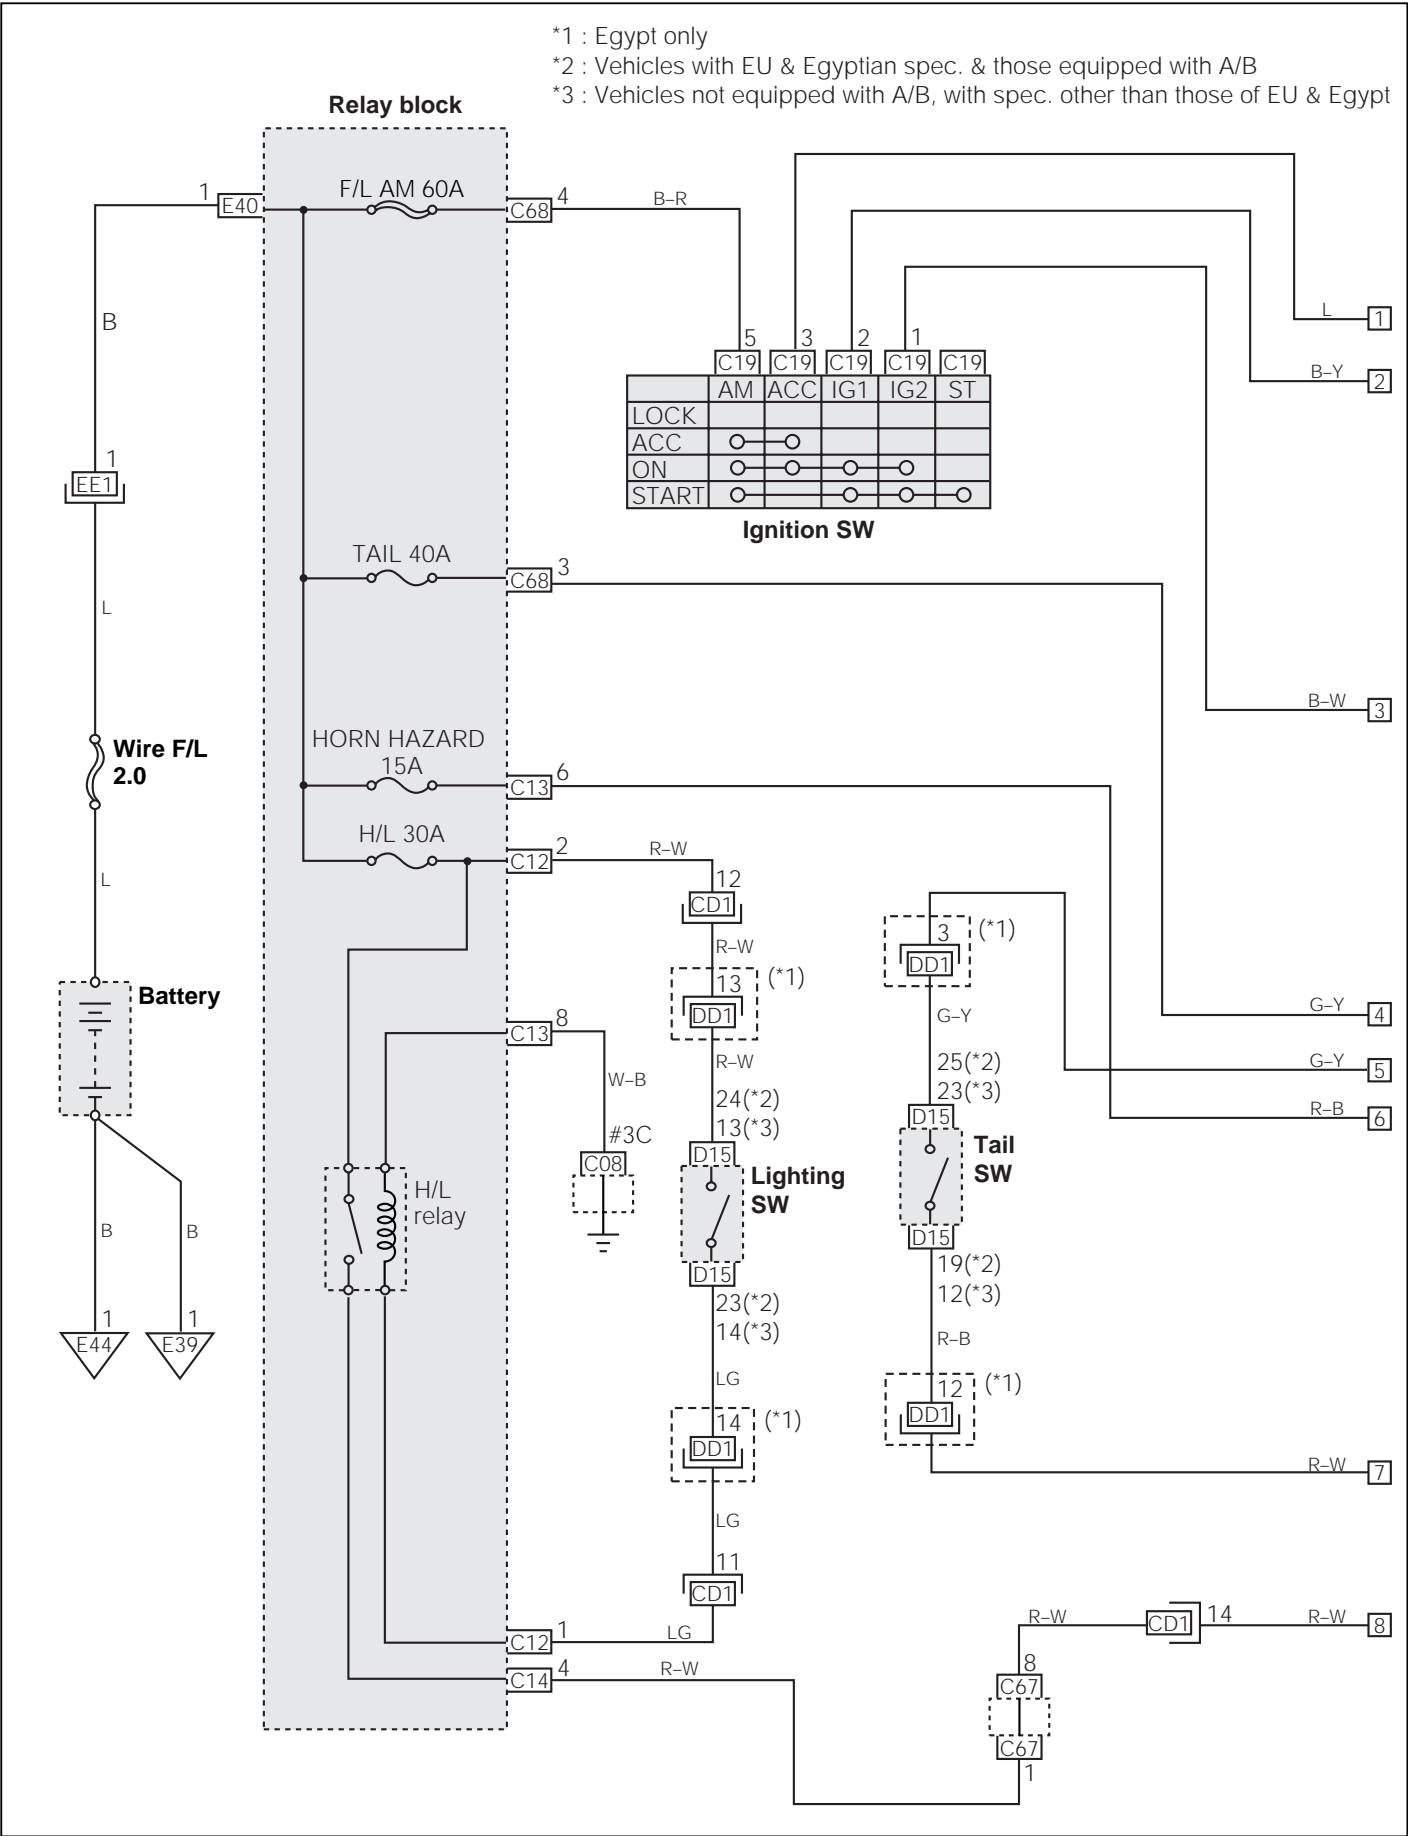
POWER SOURCE / JUNCTION BLOCK (LHD / w/o DAY-LIGHT SYSTEM) -1



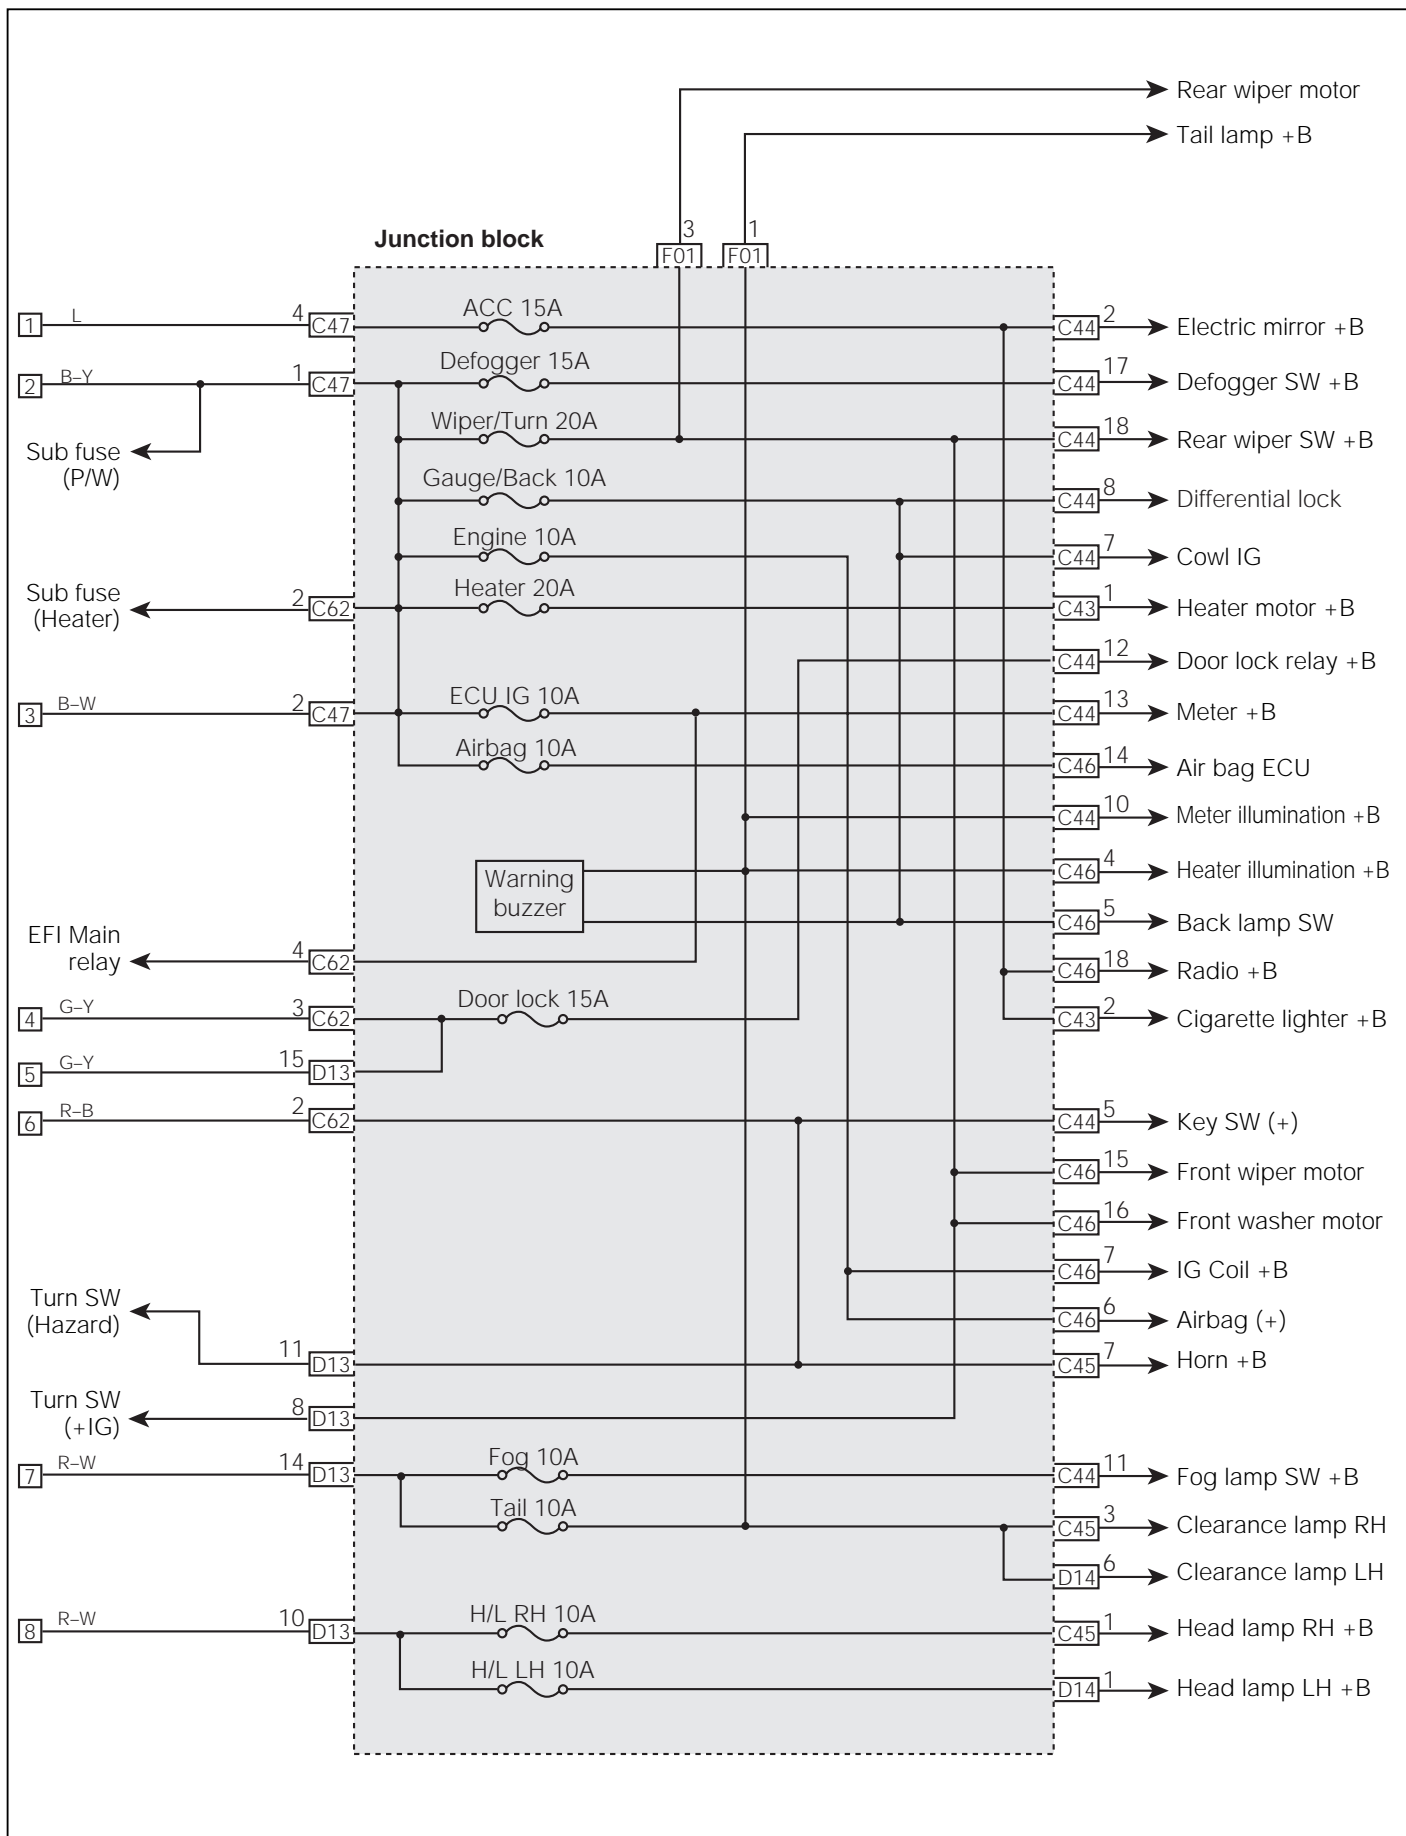
POWER SOURCE / JUNCTION BLOCK (LHD / w/o DAY-LIGHT SYSTEM) -2



CHARGING SYSTEM (RHD)

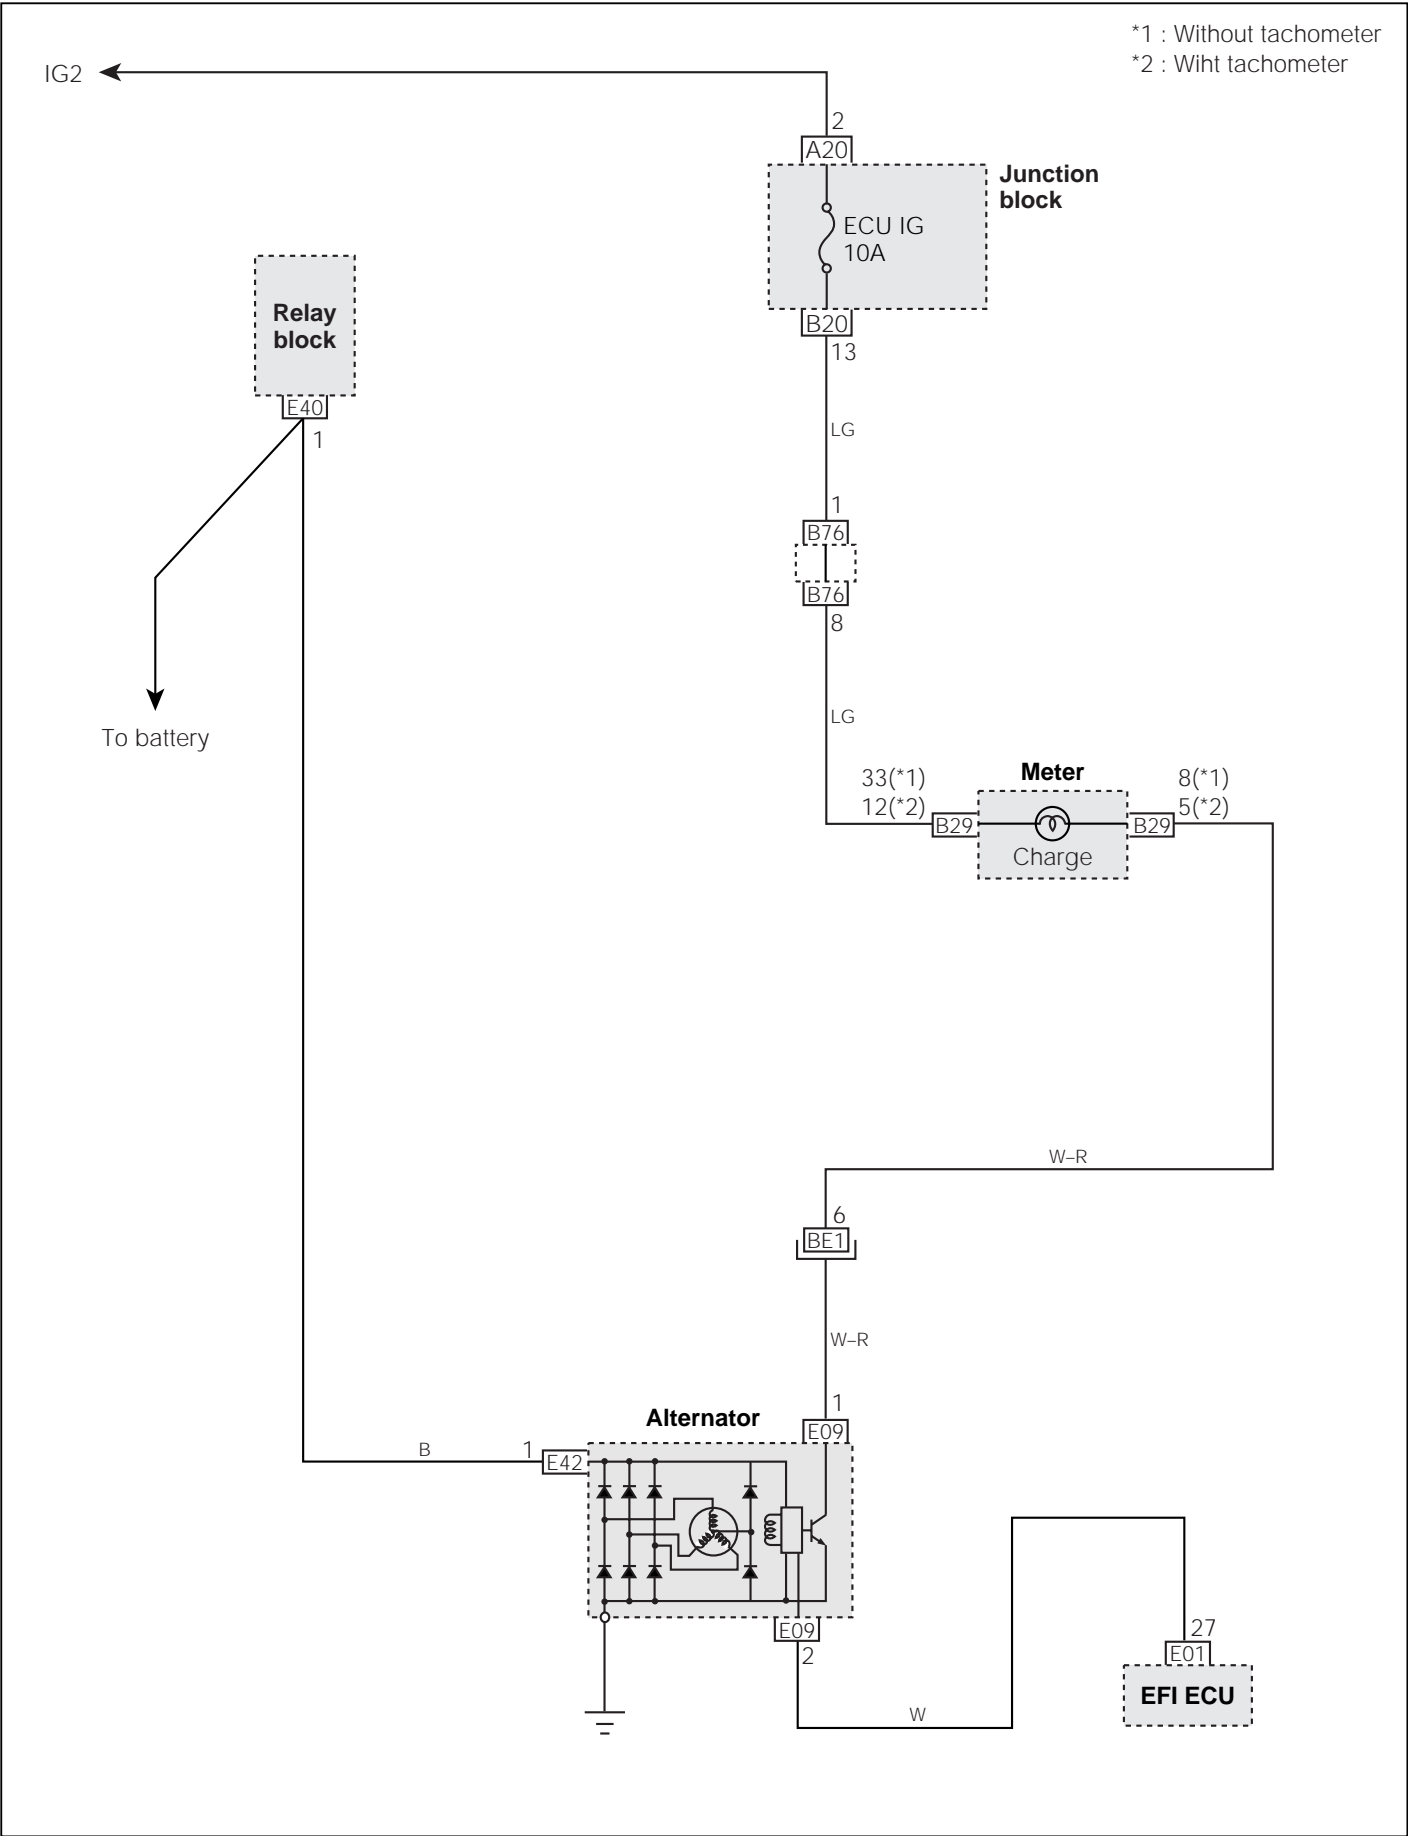


CHARGING SYSTEM (LHD)

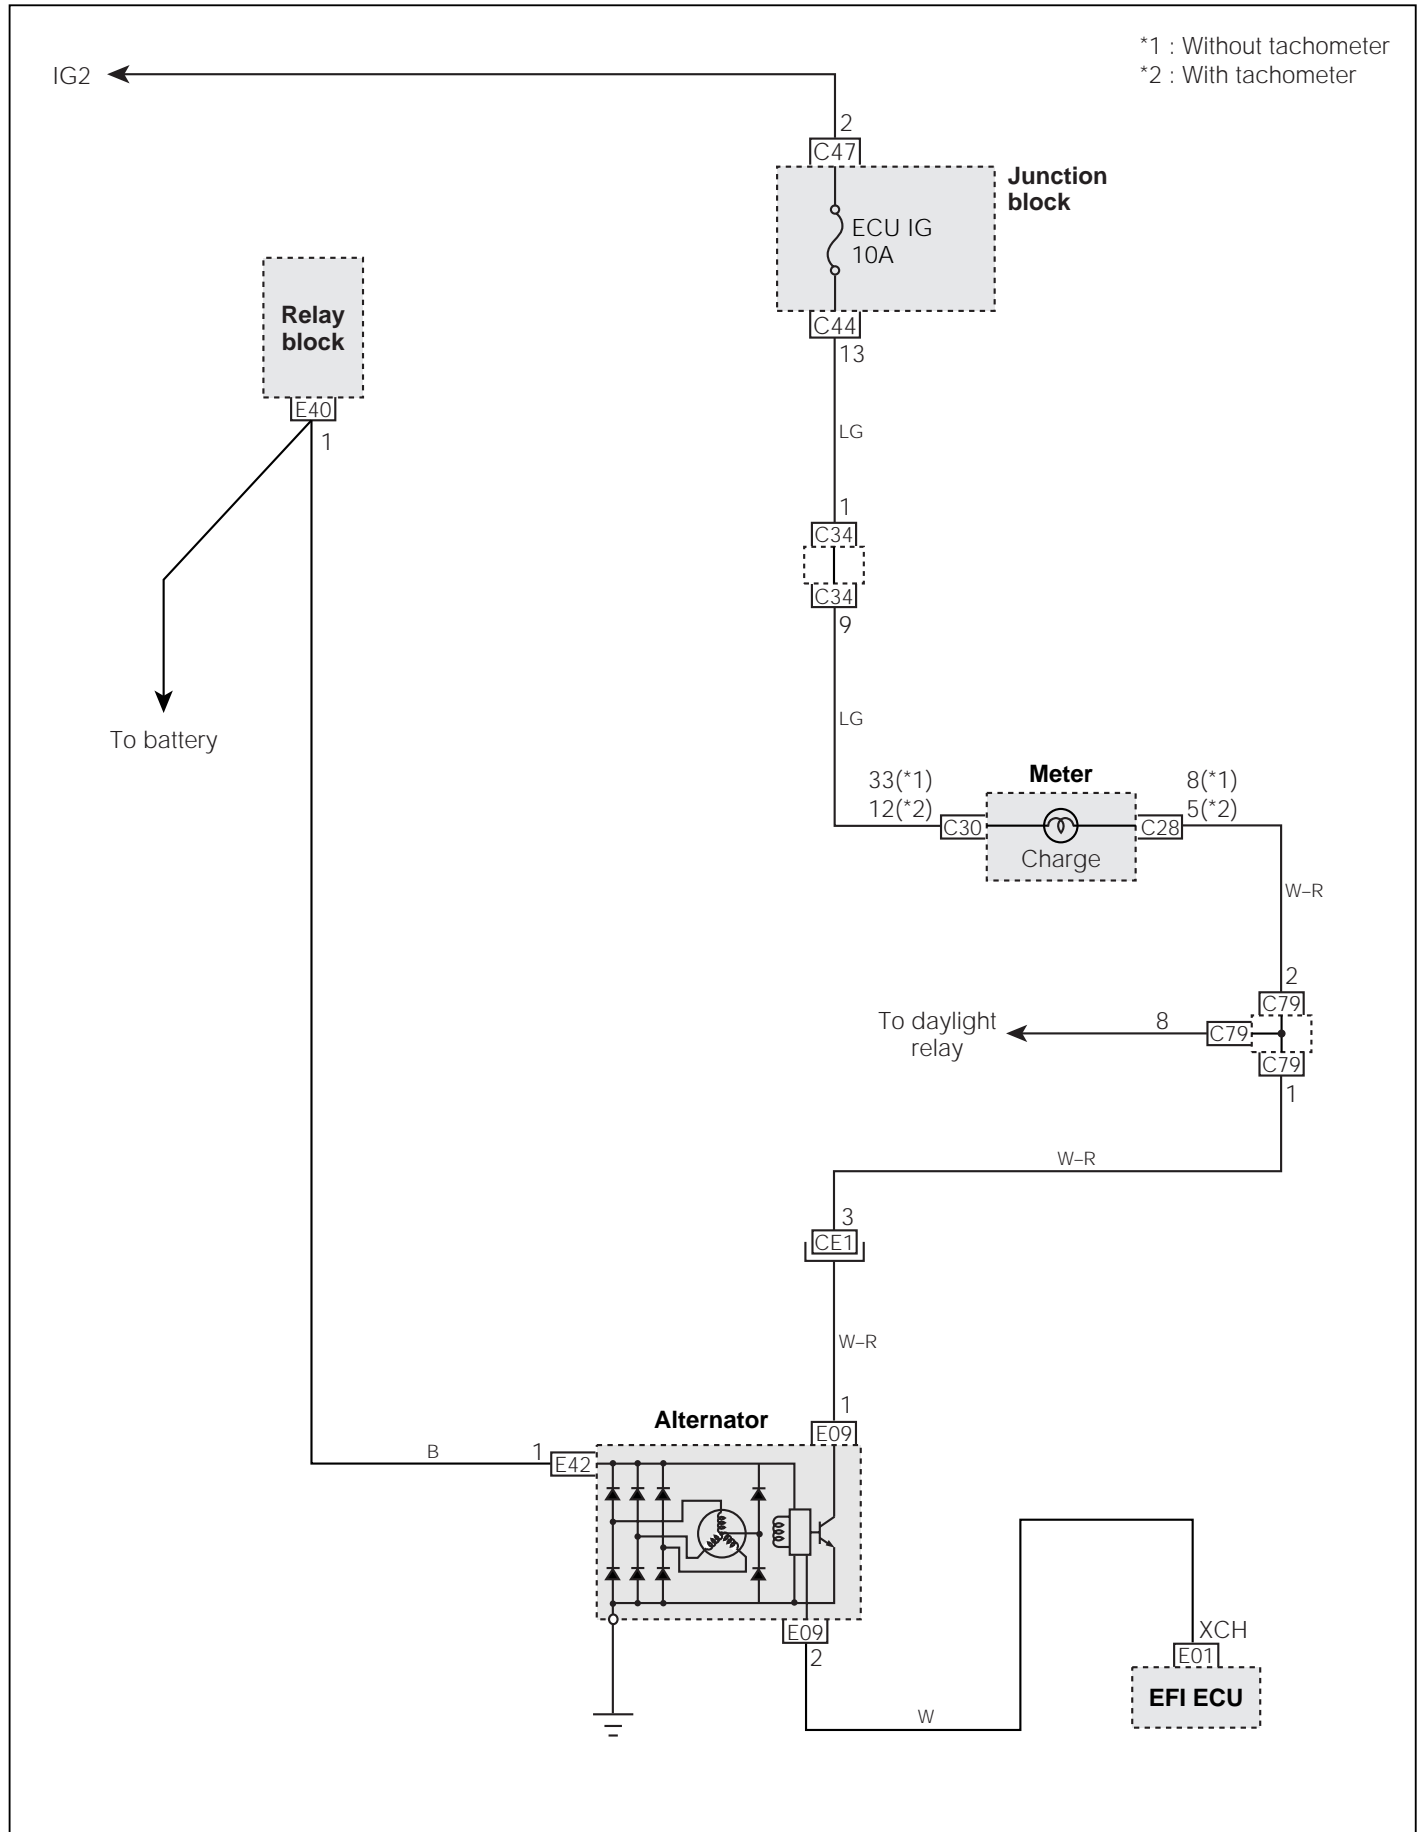


HW-12

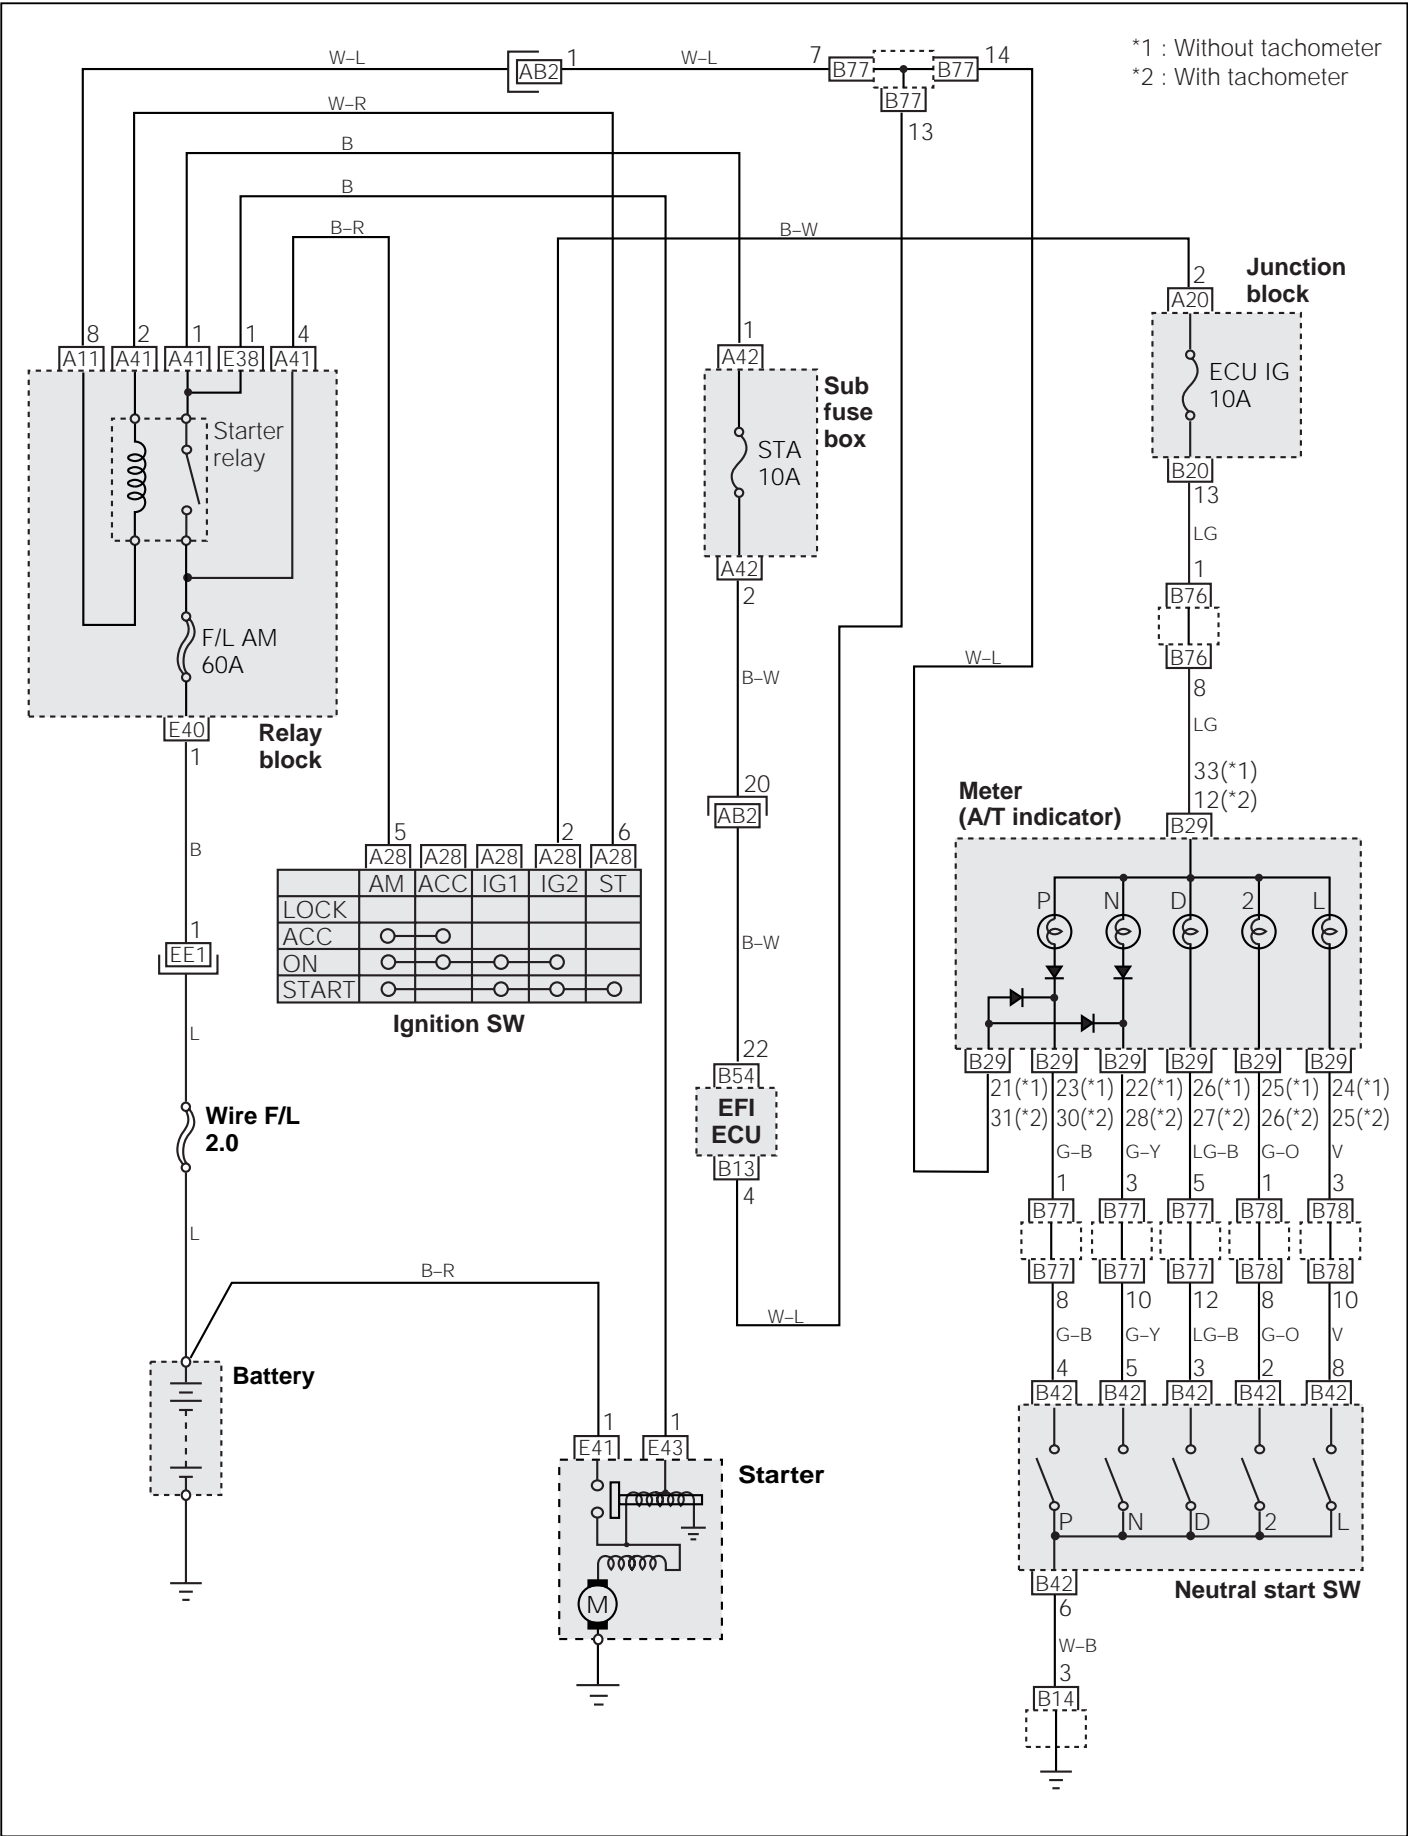STARTING SYSTEM (RHD / A/T VEHICLE)




STARTING SYSTEM (RHD / M/T VEHICLE)

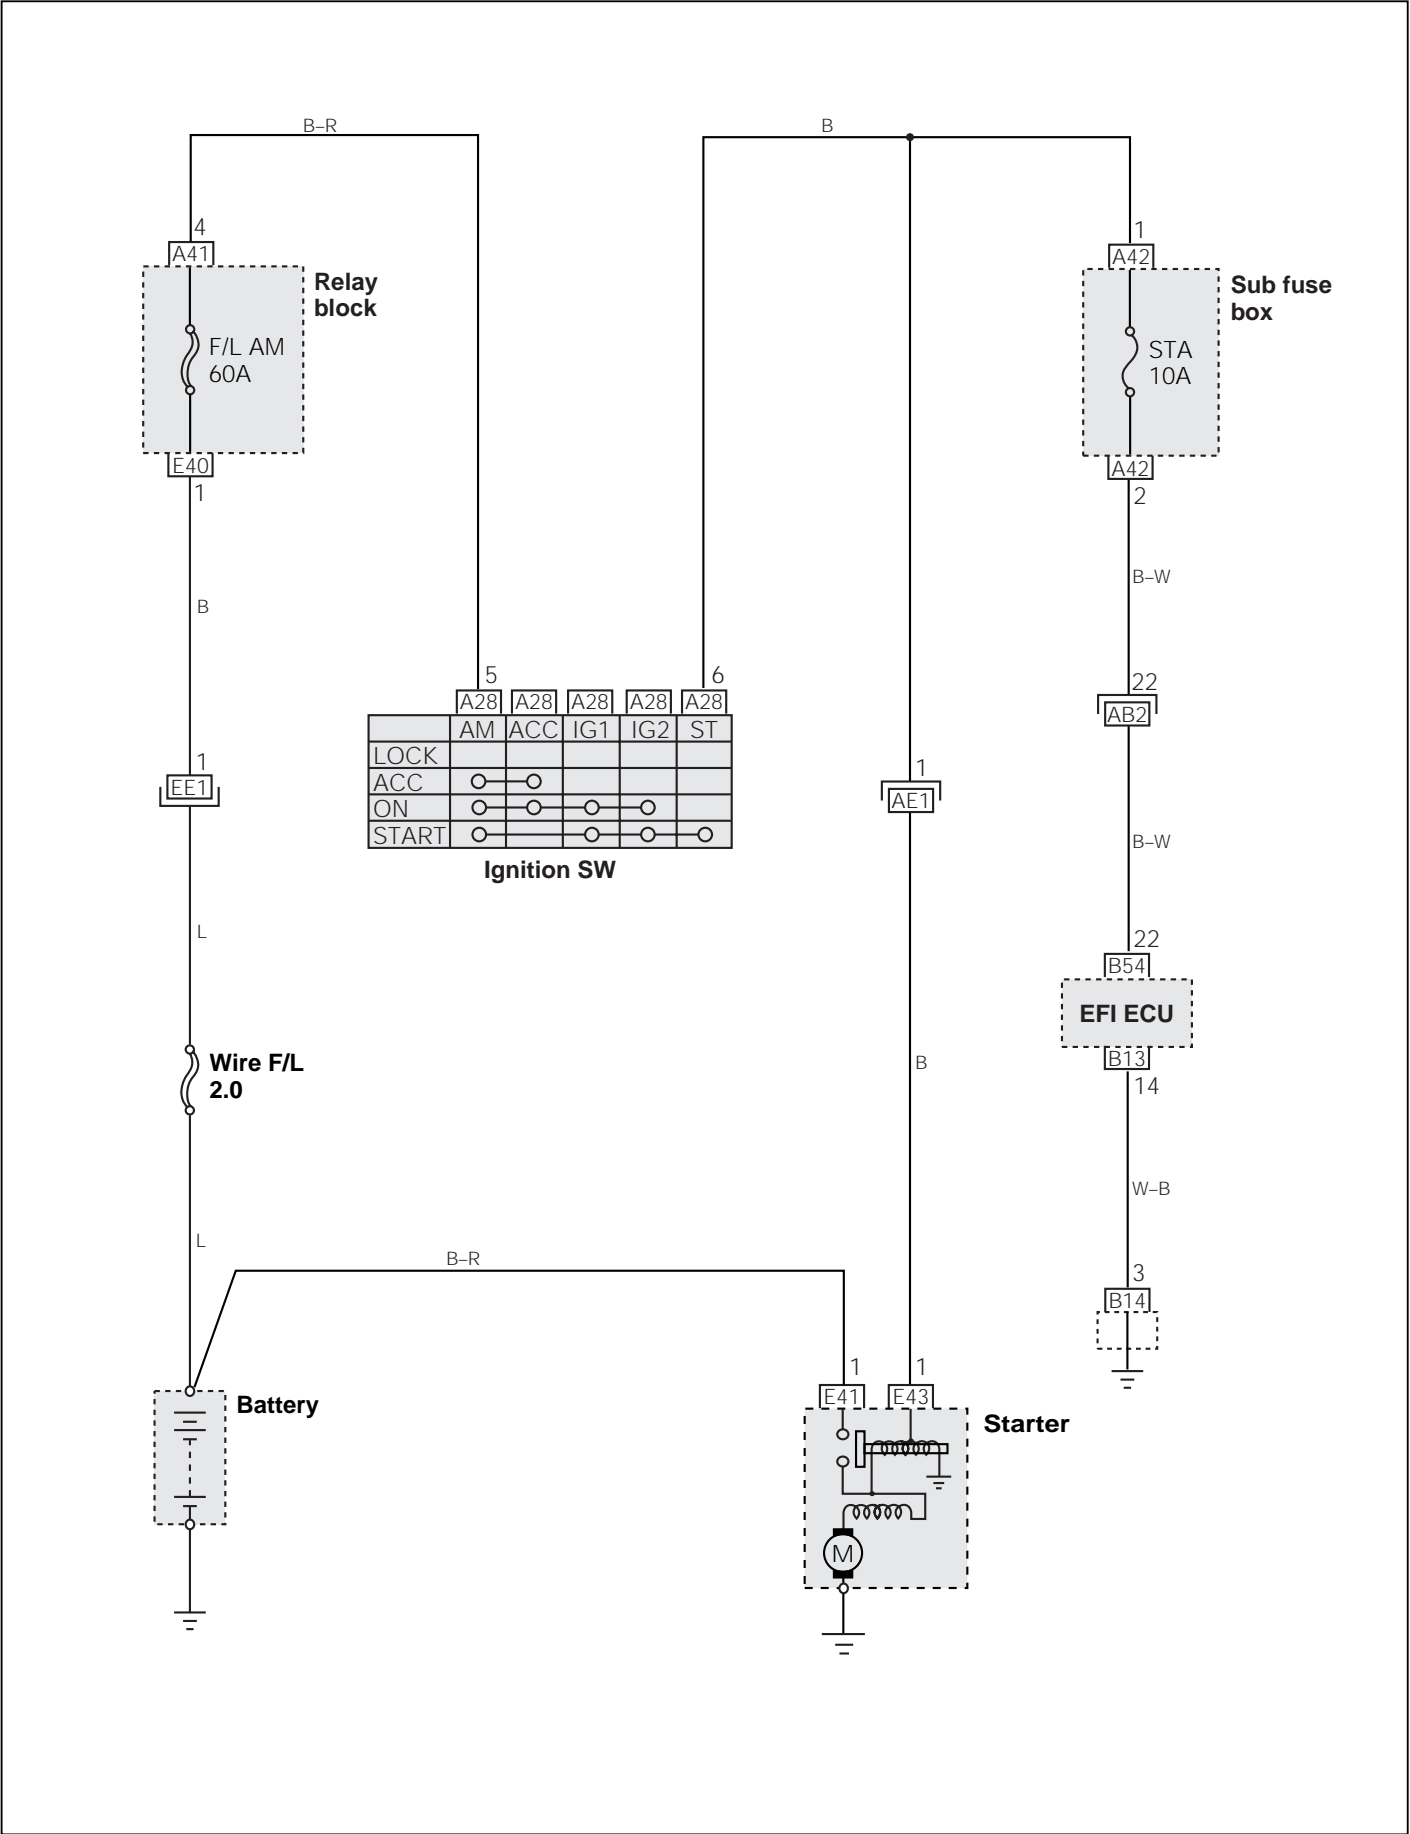


HW-14

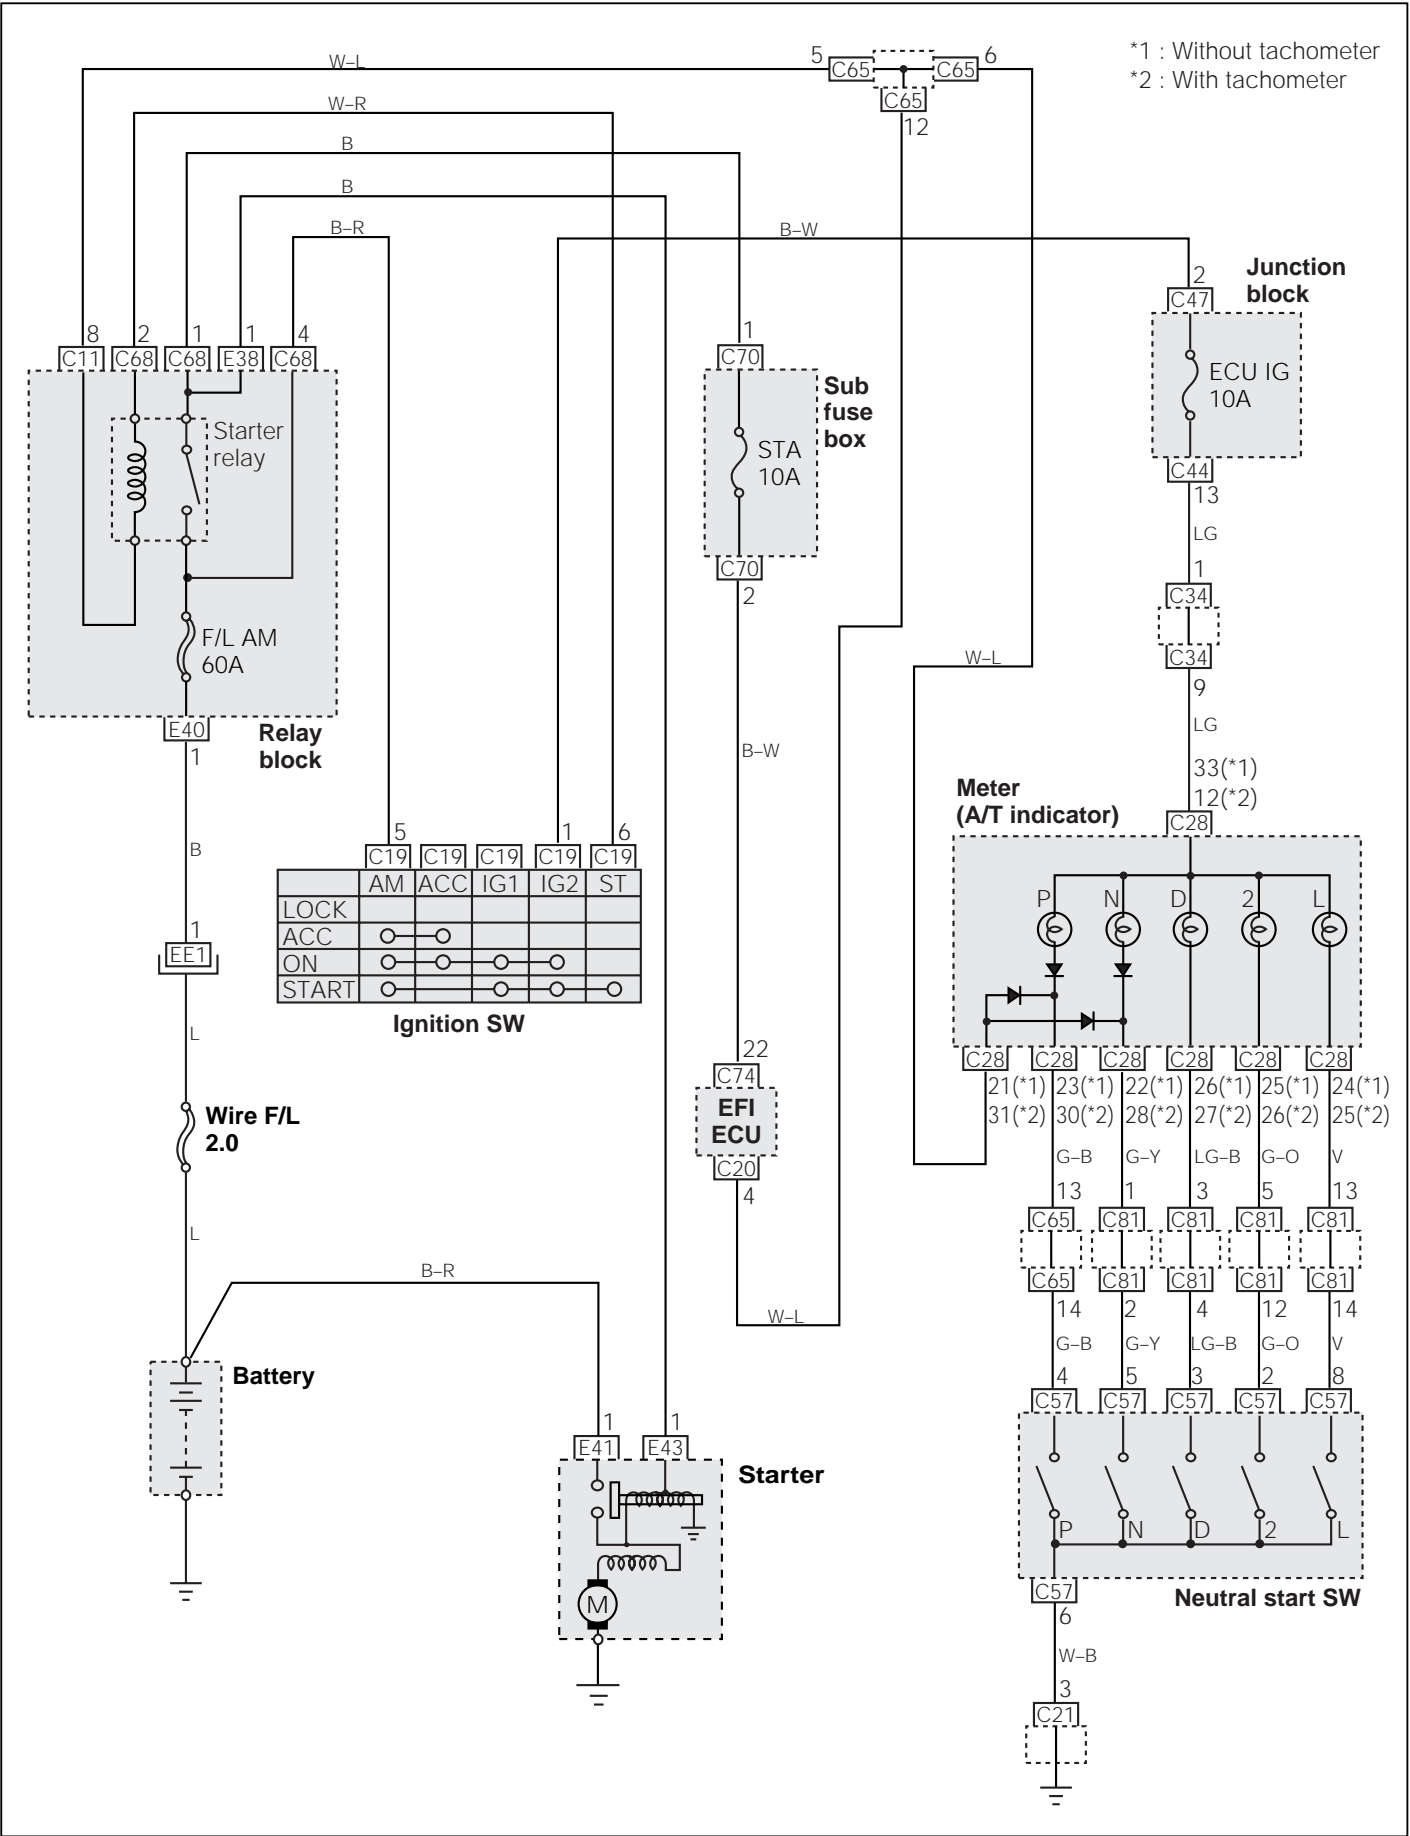
STARTING SYSTEM (LHD / A/T VEHICLE)




STARTING SYSTEM (LHD / M/T VEHICLE)

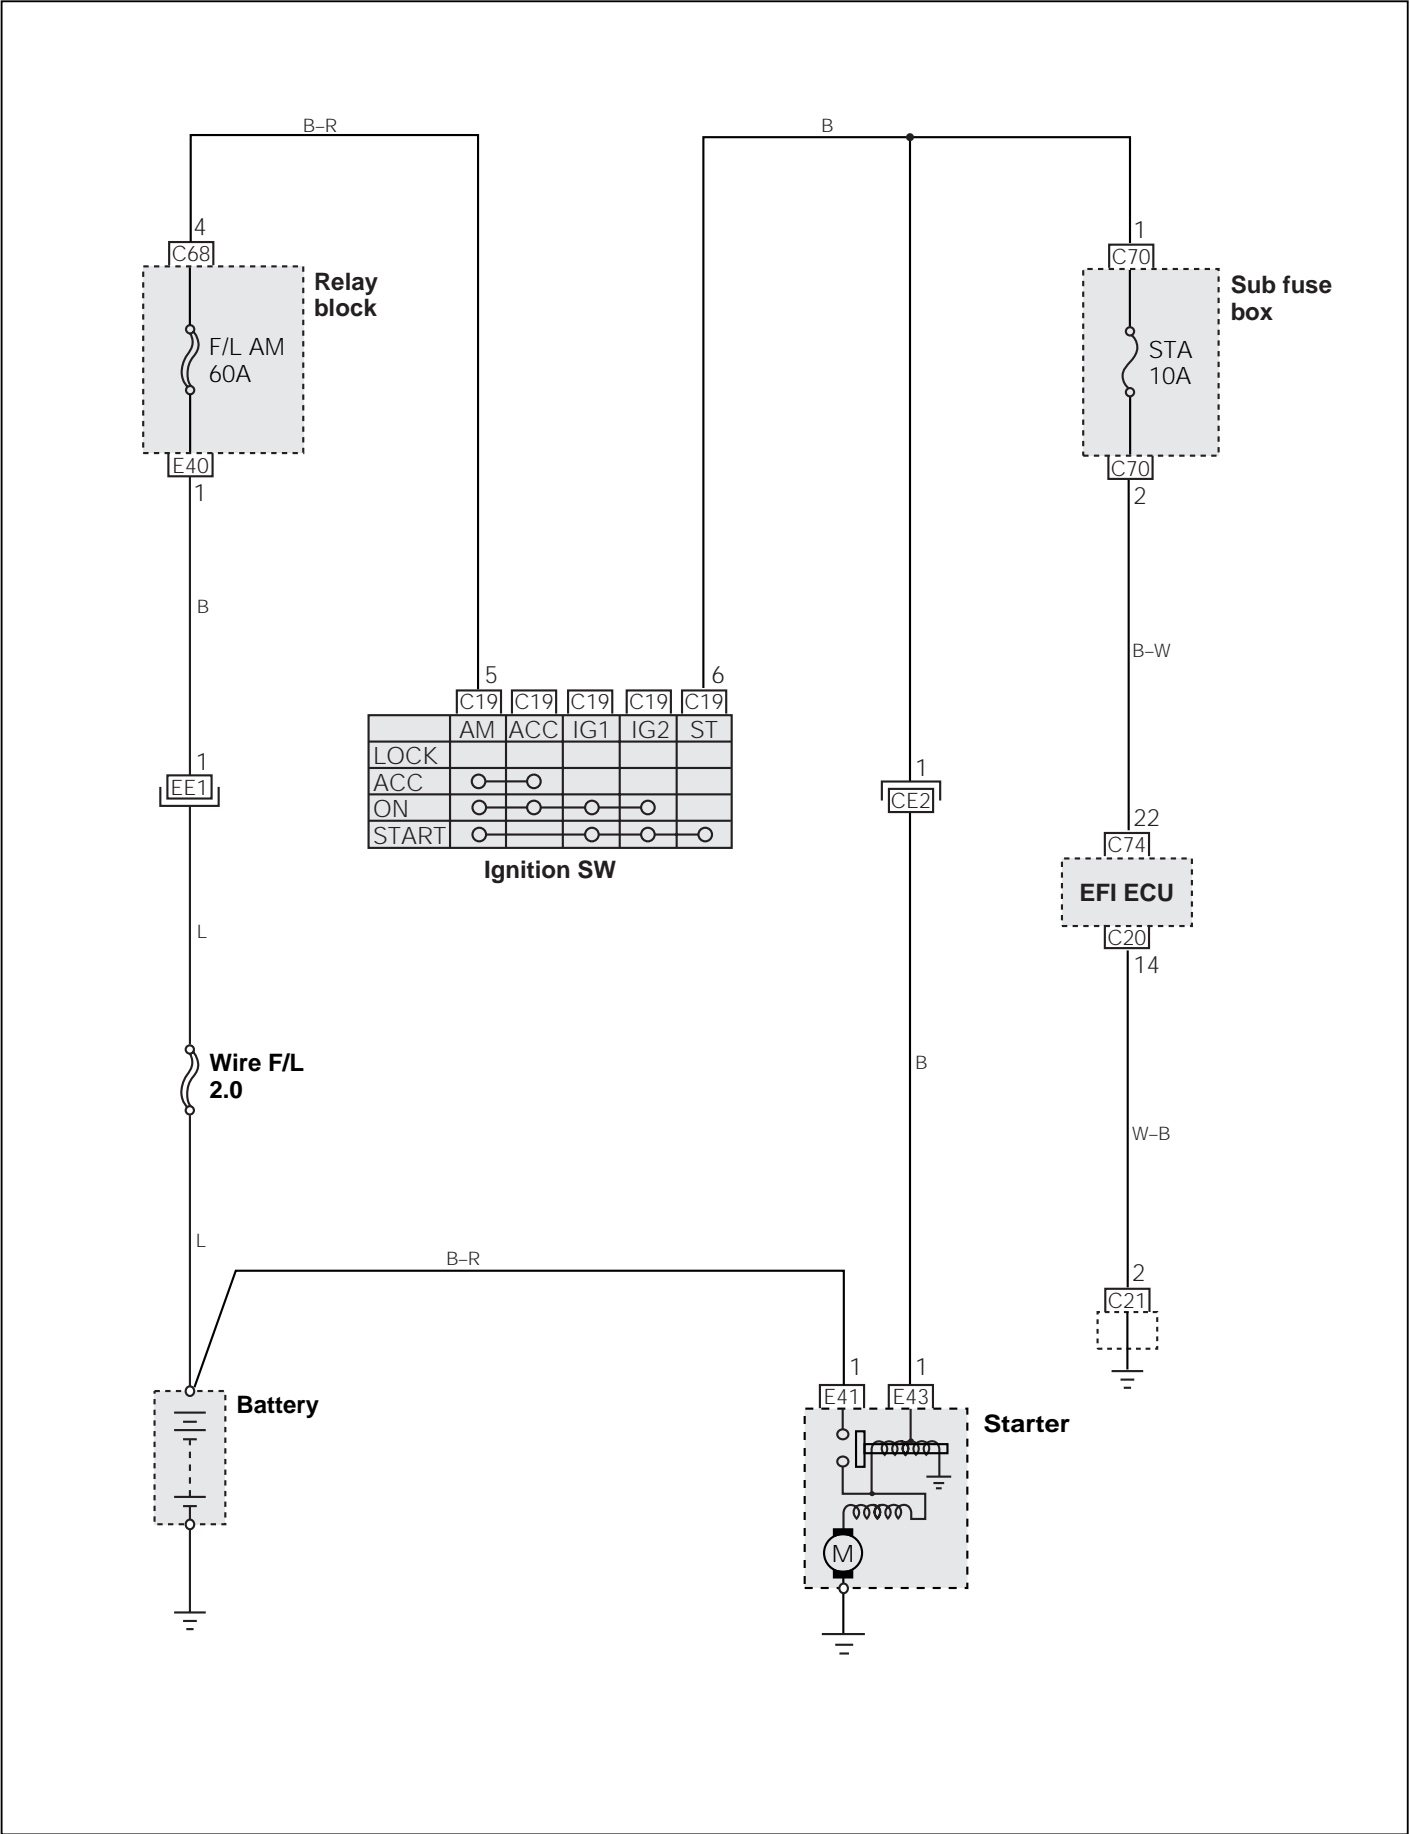

EFI SYSTEM (RHD / EU ONLY) -1

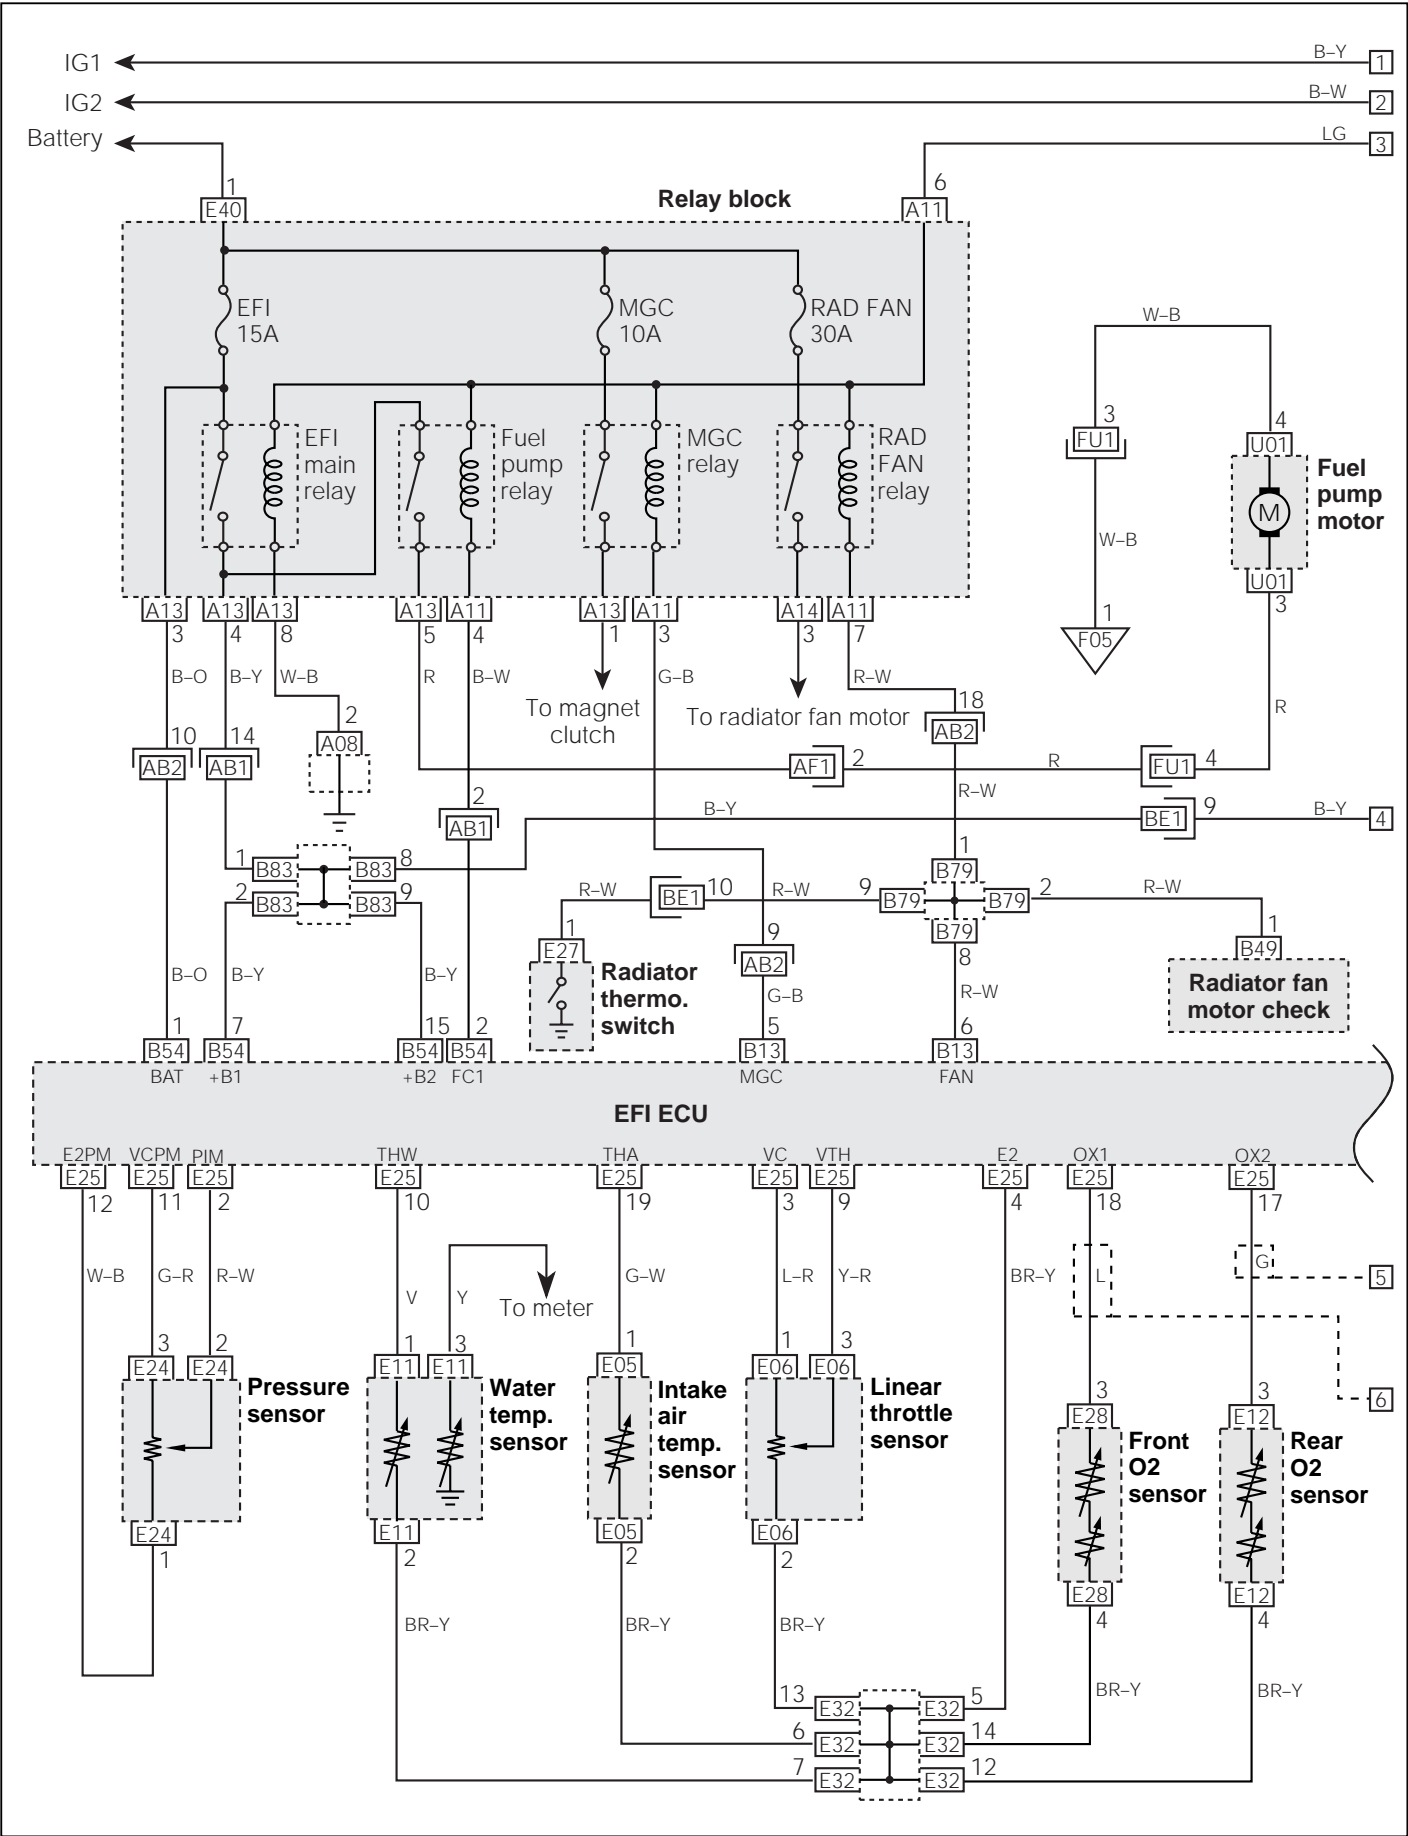


EFI SYSTEM (RHD / EU ONLY) -2

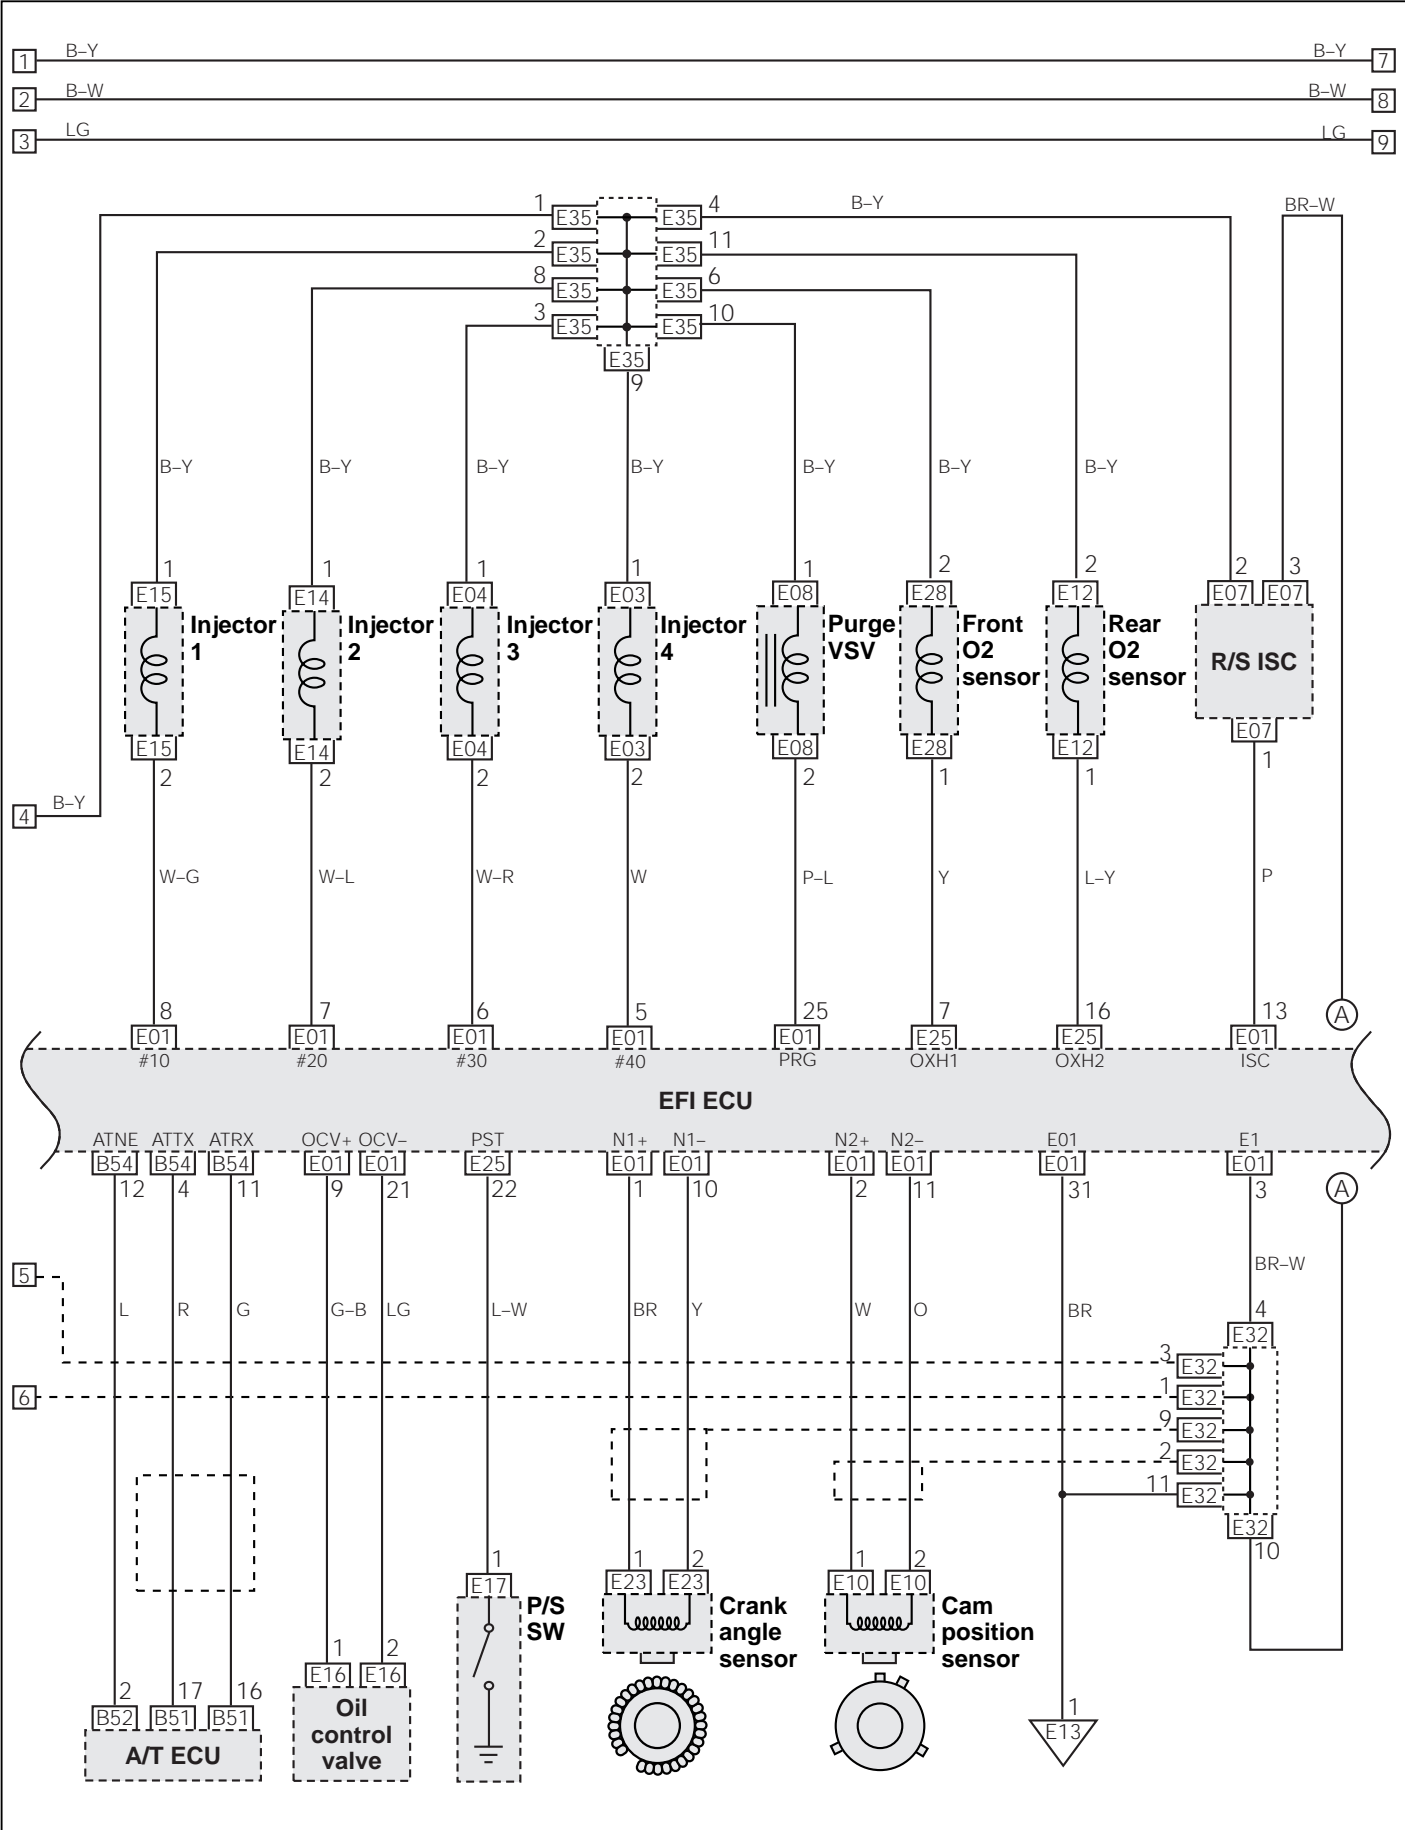


HW-18

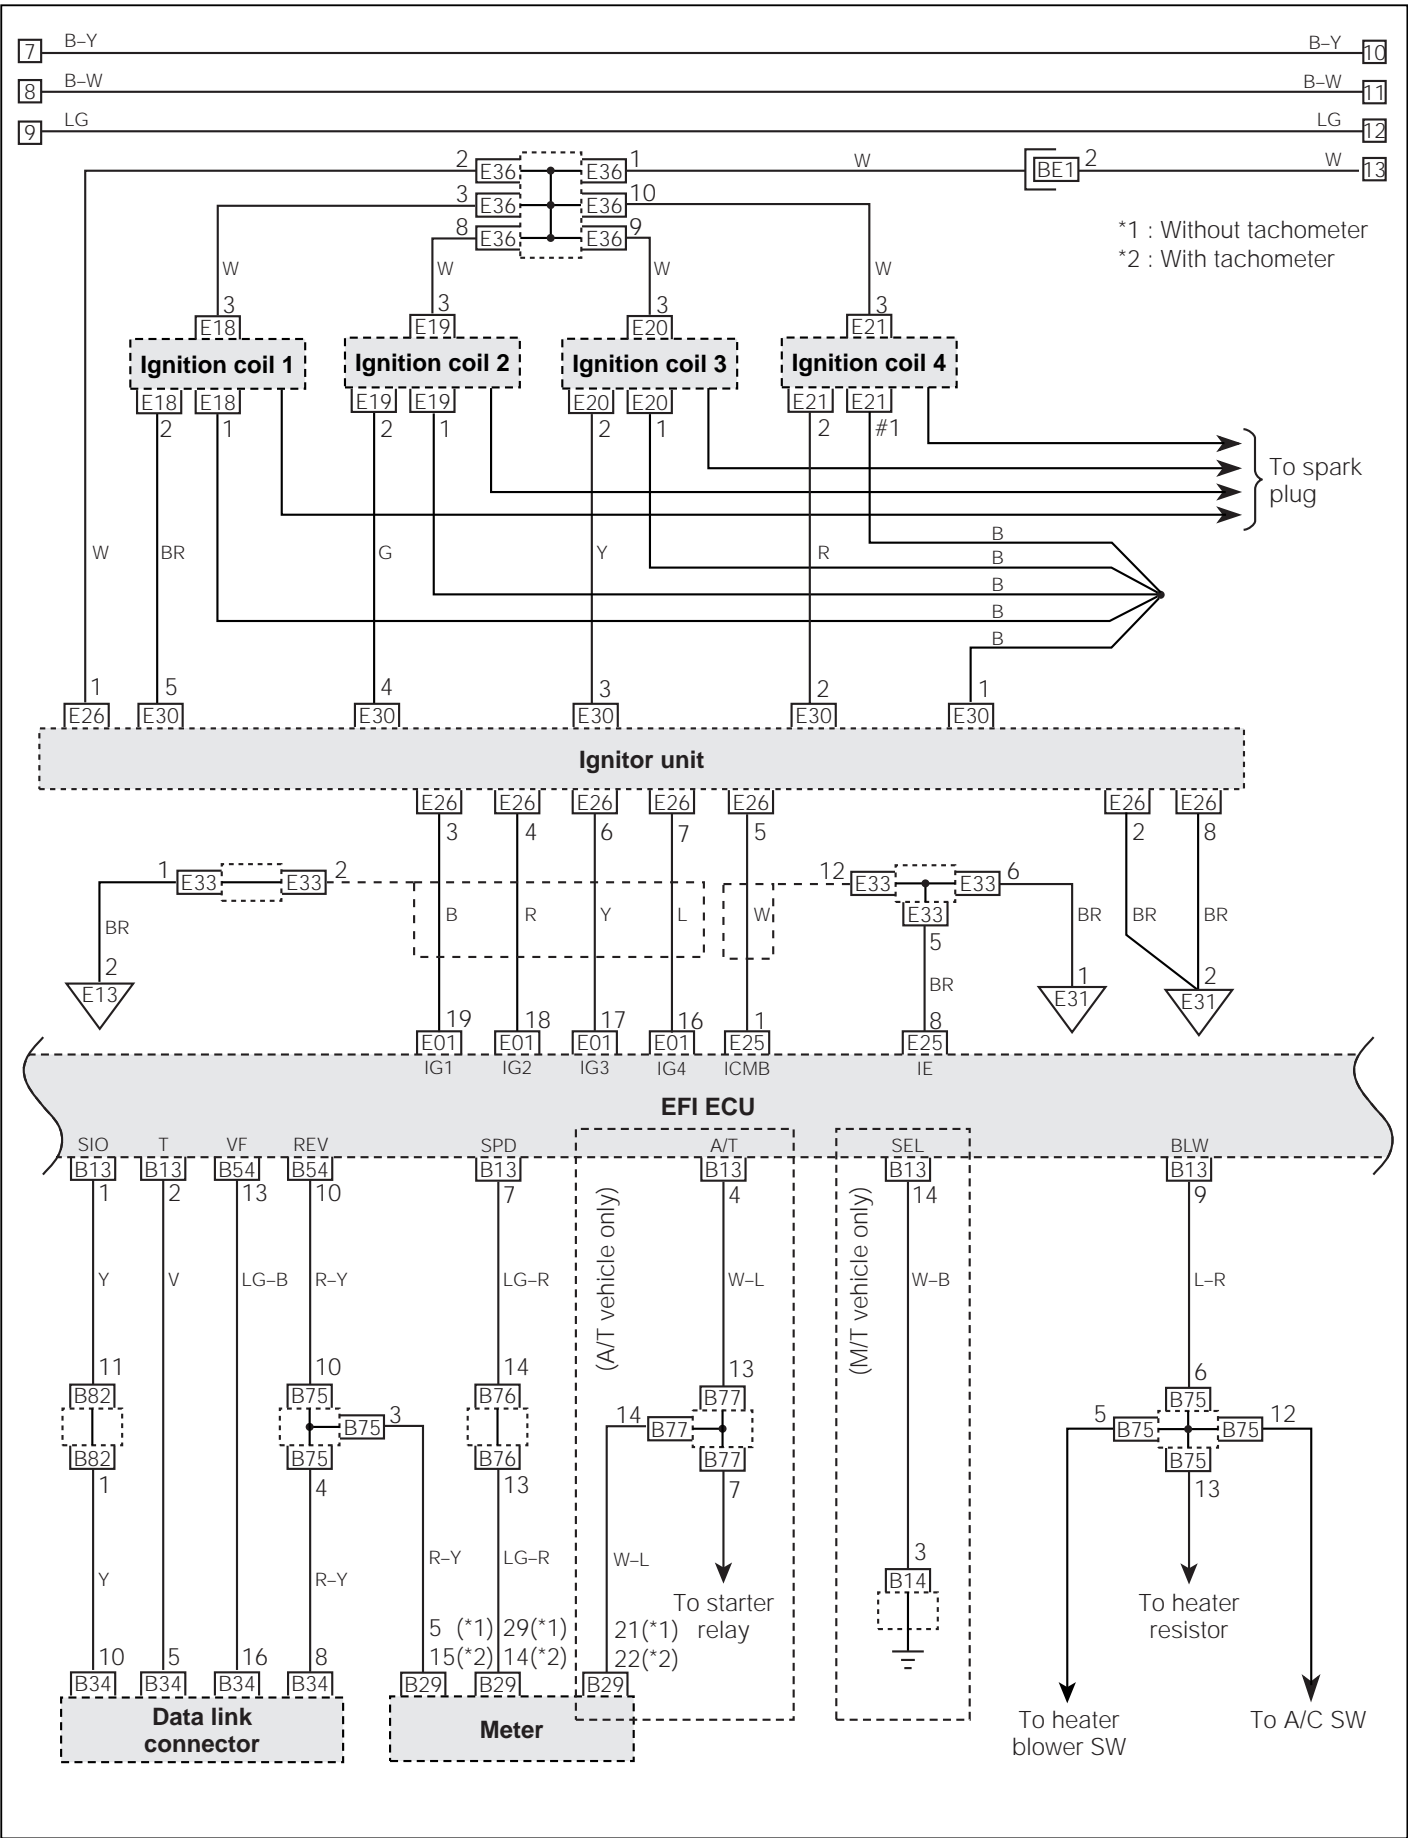
EFI SYSTEM (RHD / EU ONLY) -3




EFI SYSTEM (RHD / EXCEPT FOR EU) -1

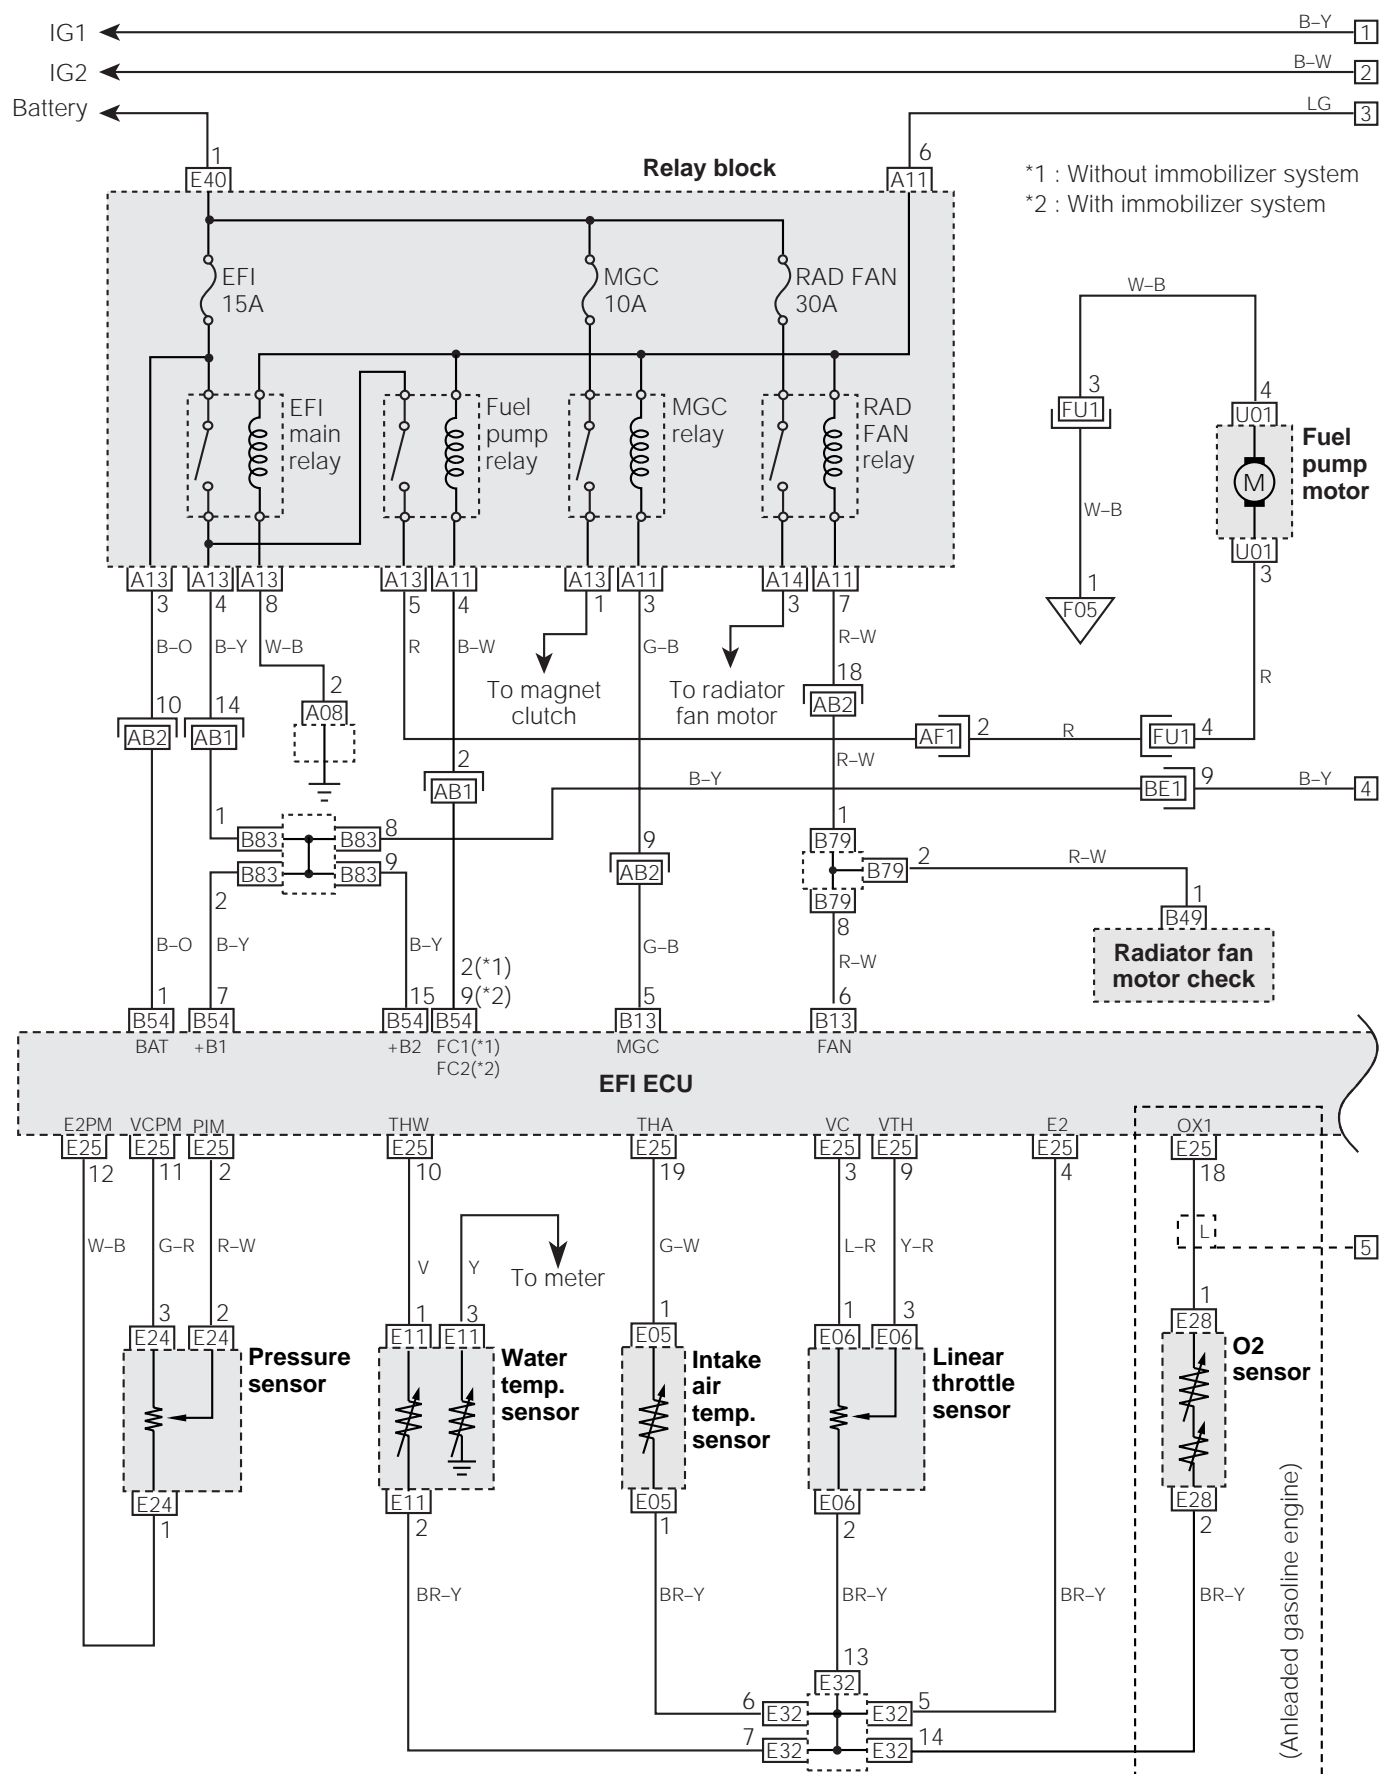


EFI SYSTEM (RHD / EXCEPT FOR EU) -2

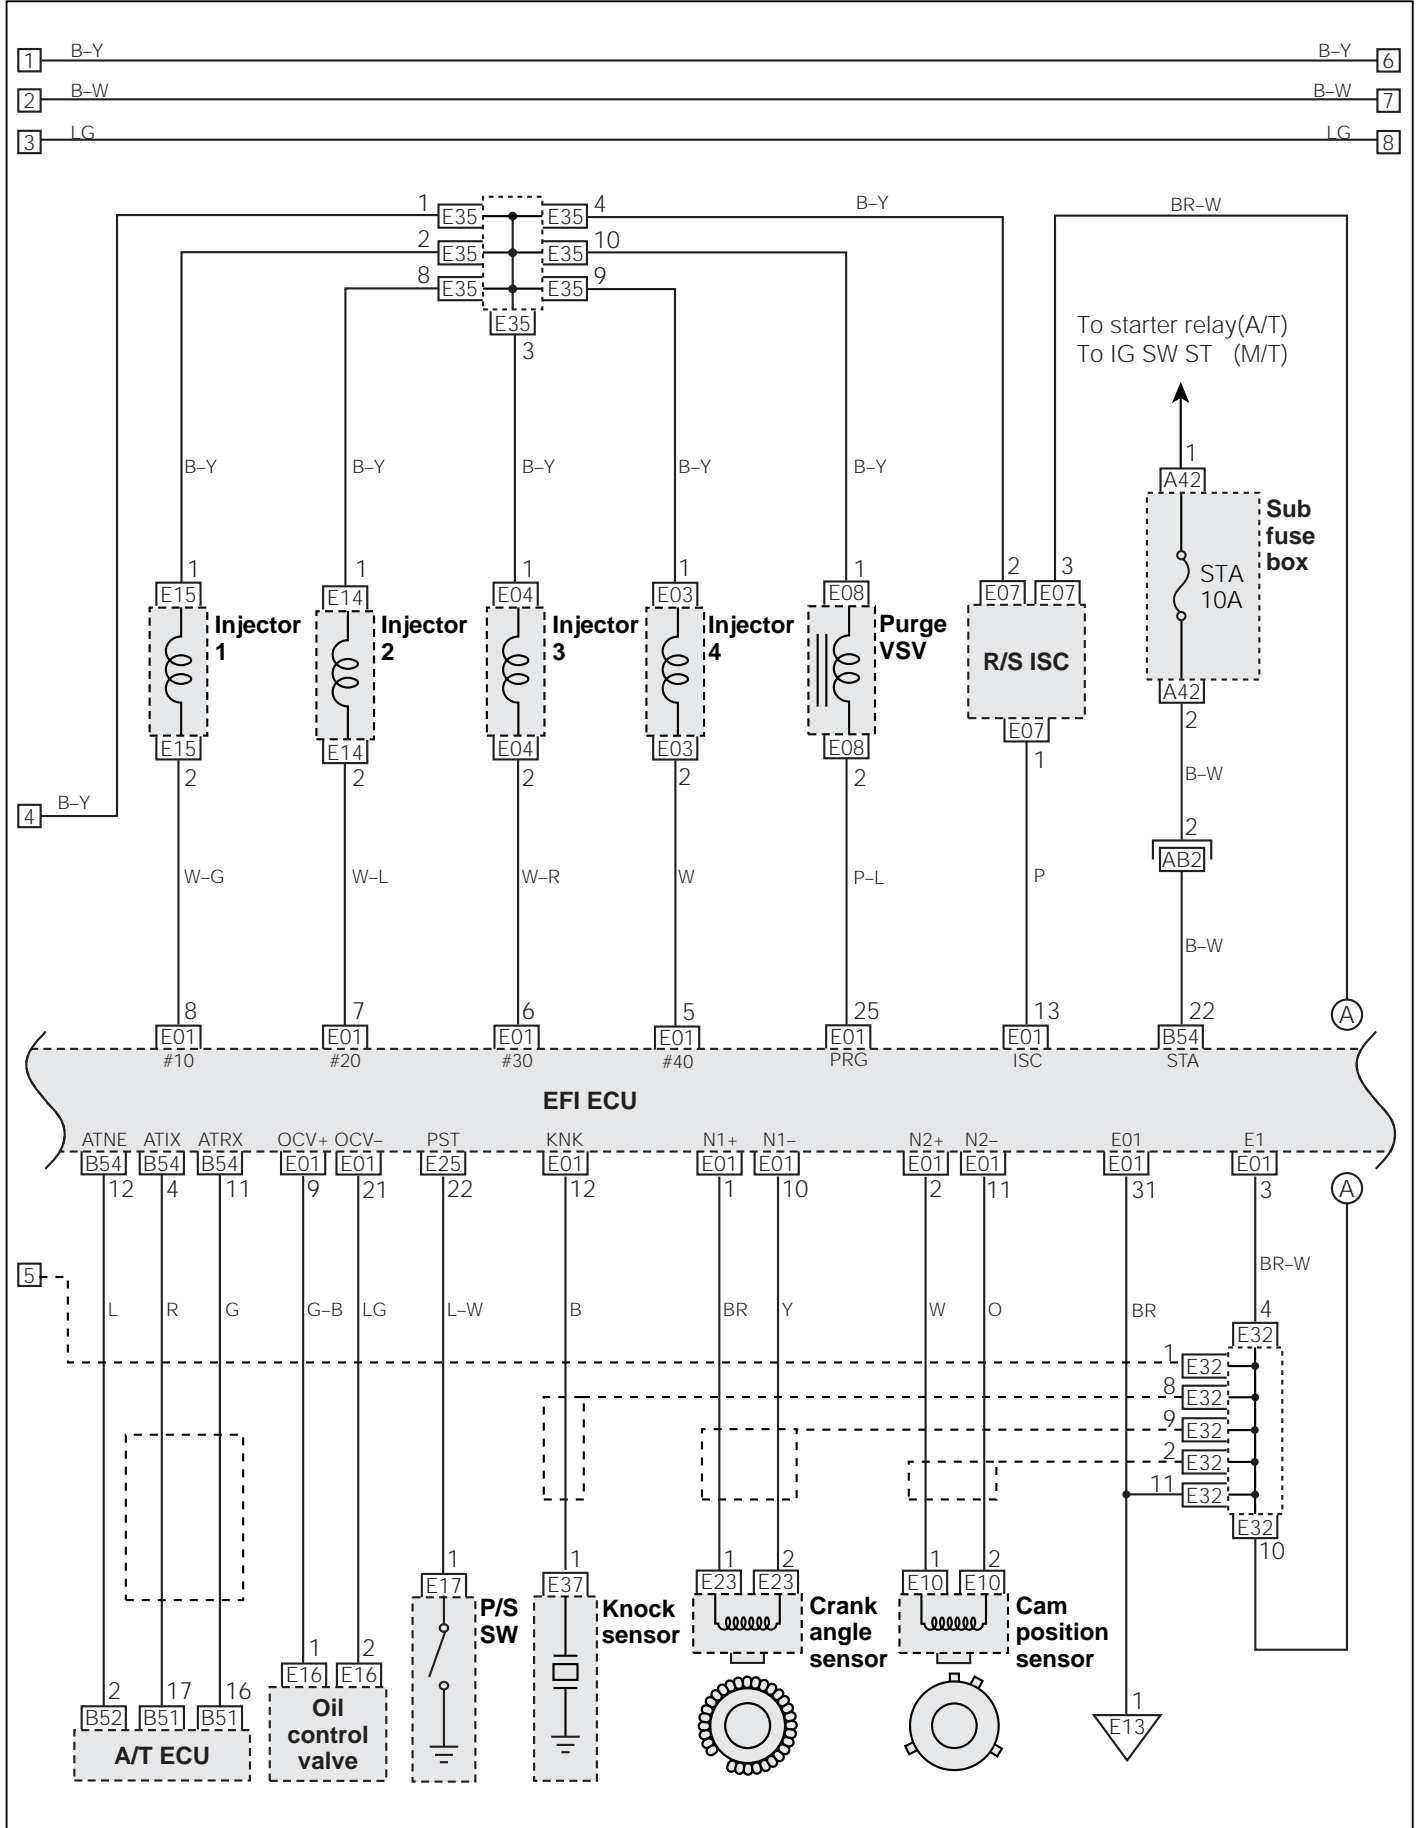


EFI SYSTEM (RHD / EXCEPT FOR EU) -3

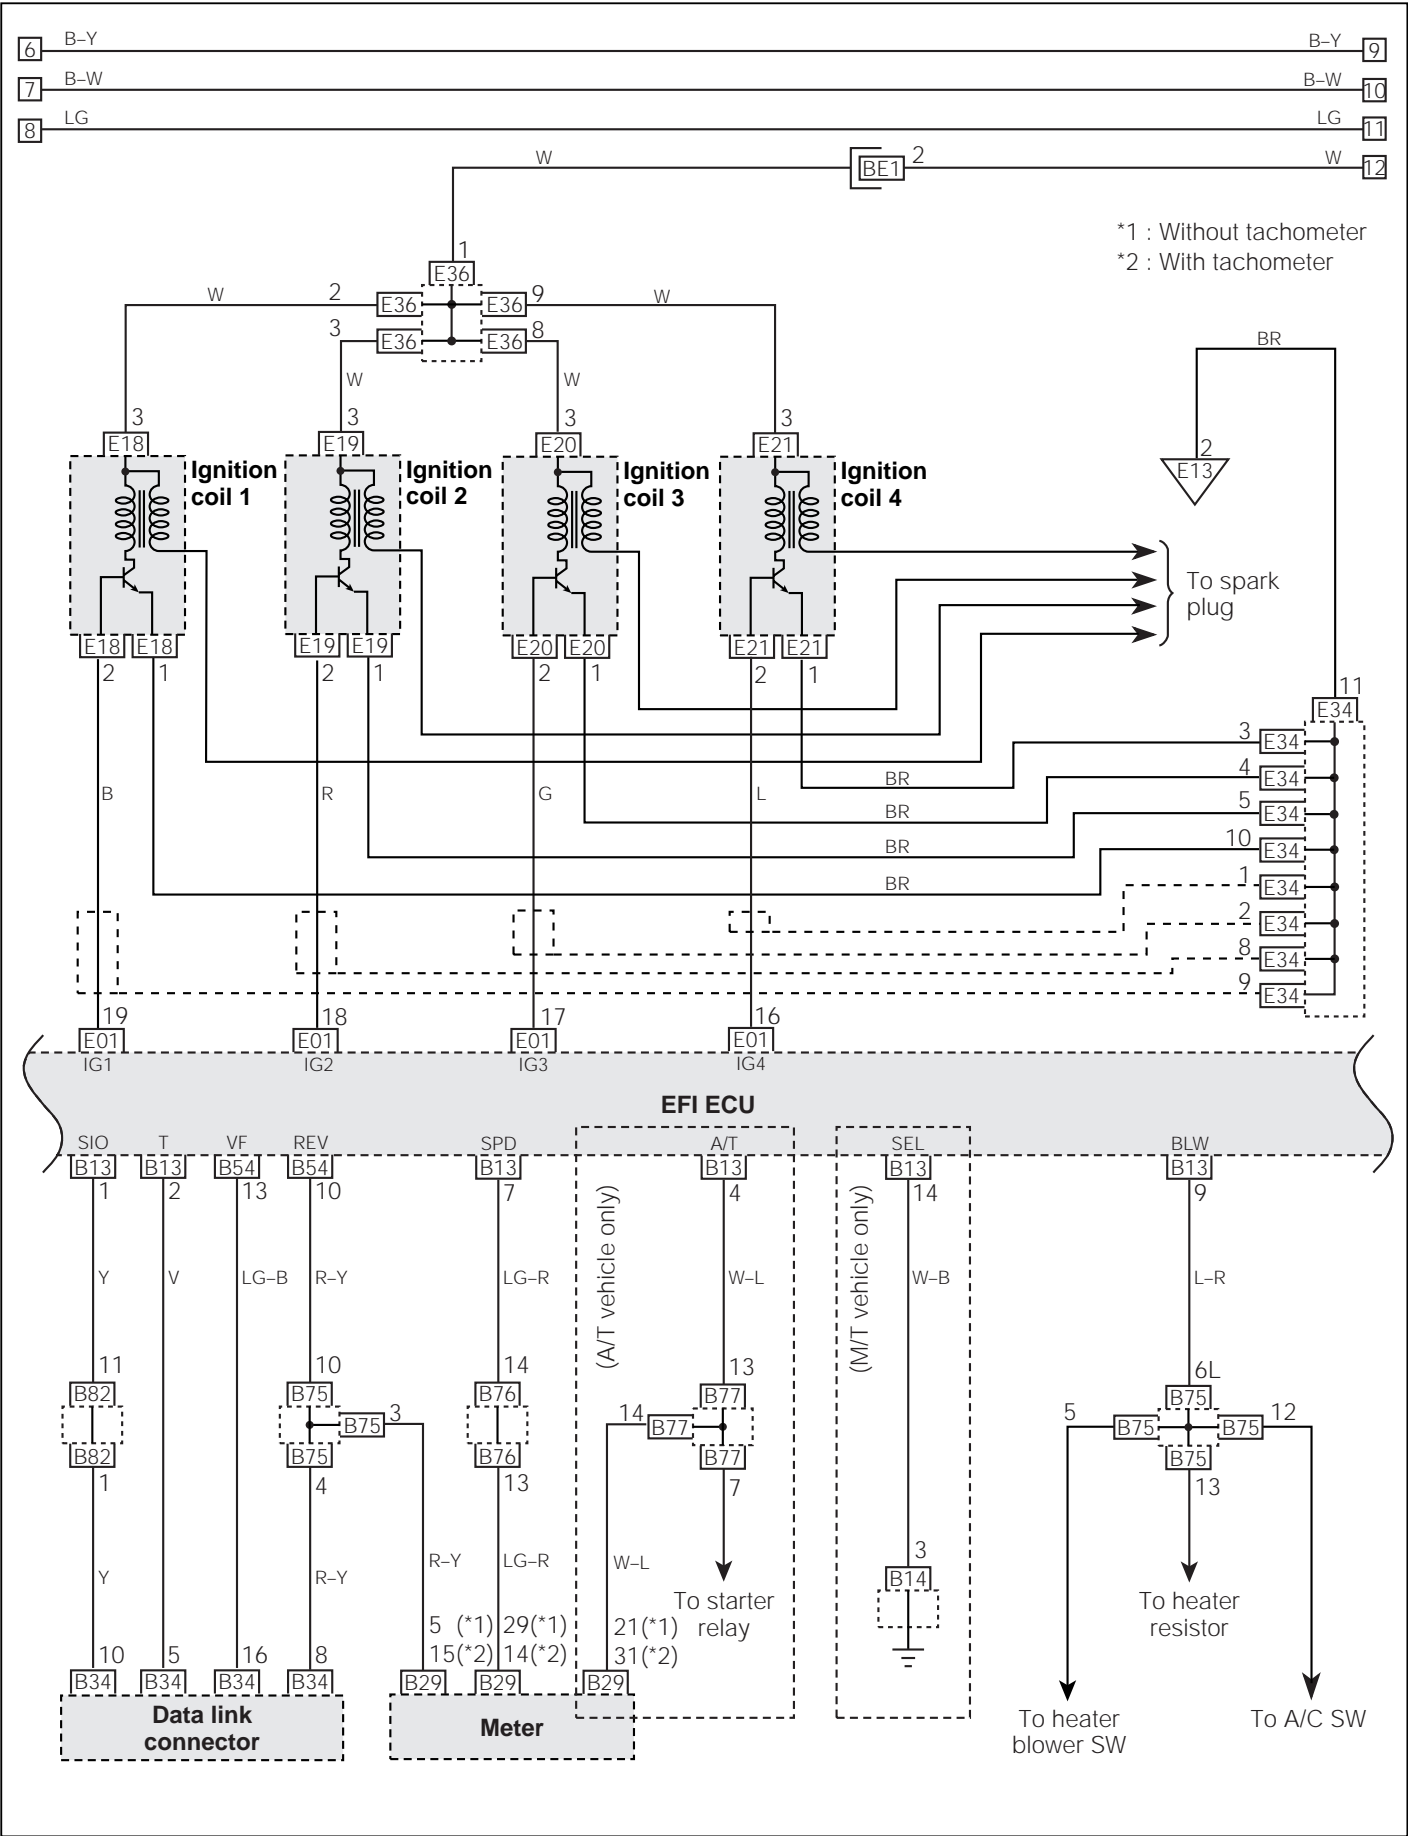


EFI SYSTEM (RHD / EXCEPT FOR EU) -4

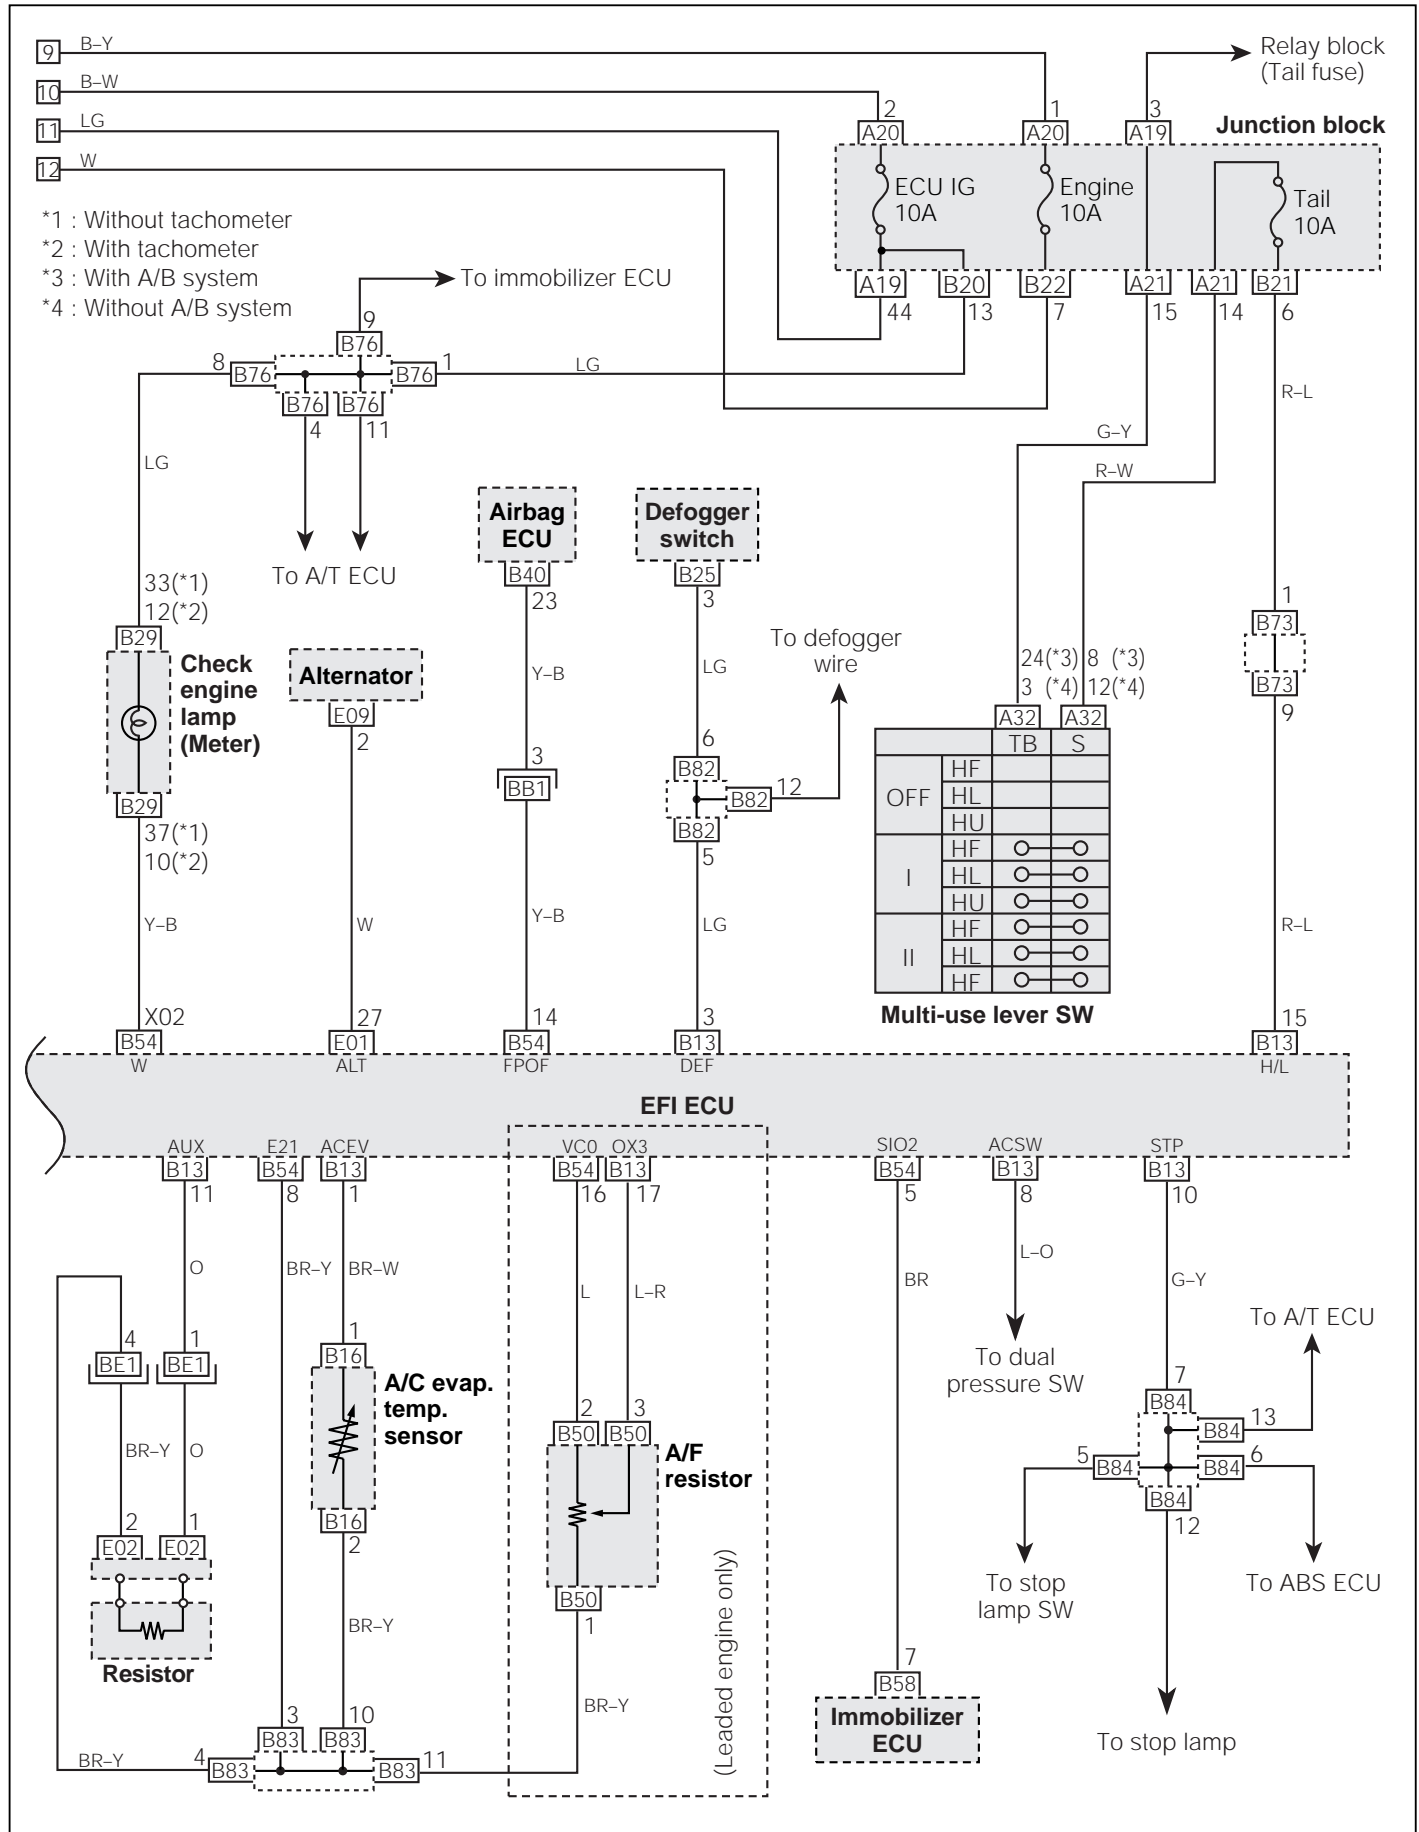


EFI SYSTEM (LHD / EU ONLY) -1

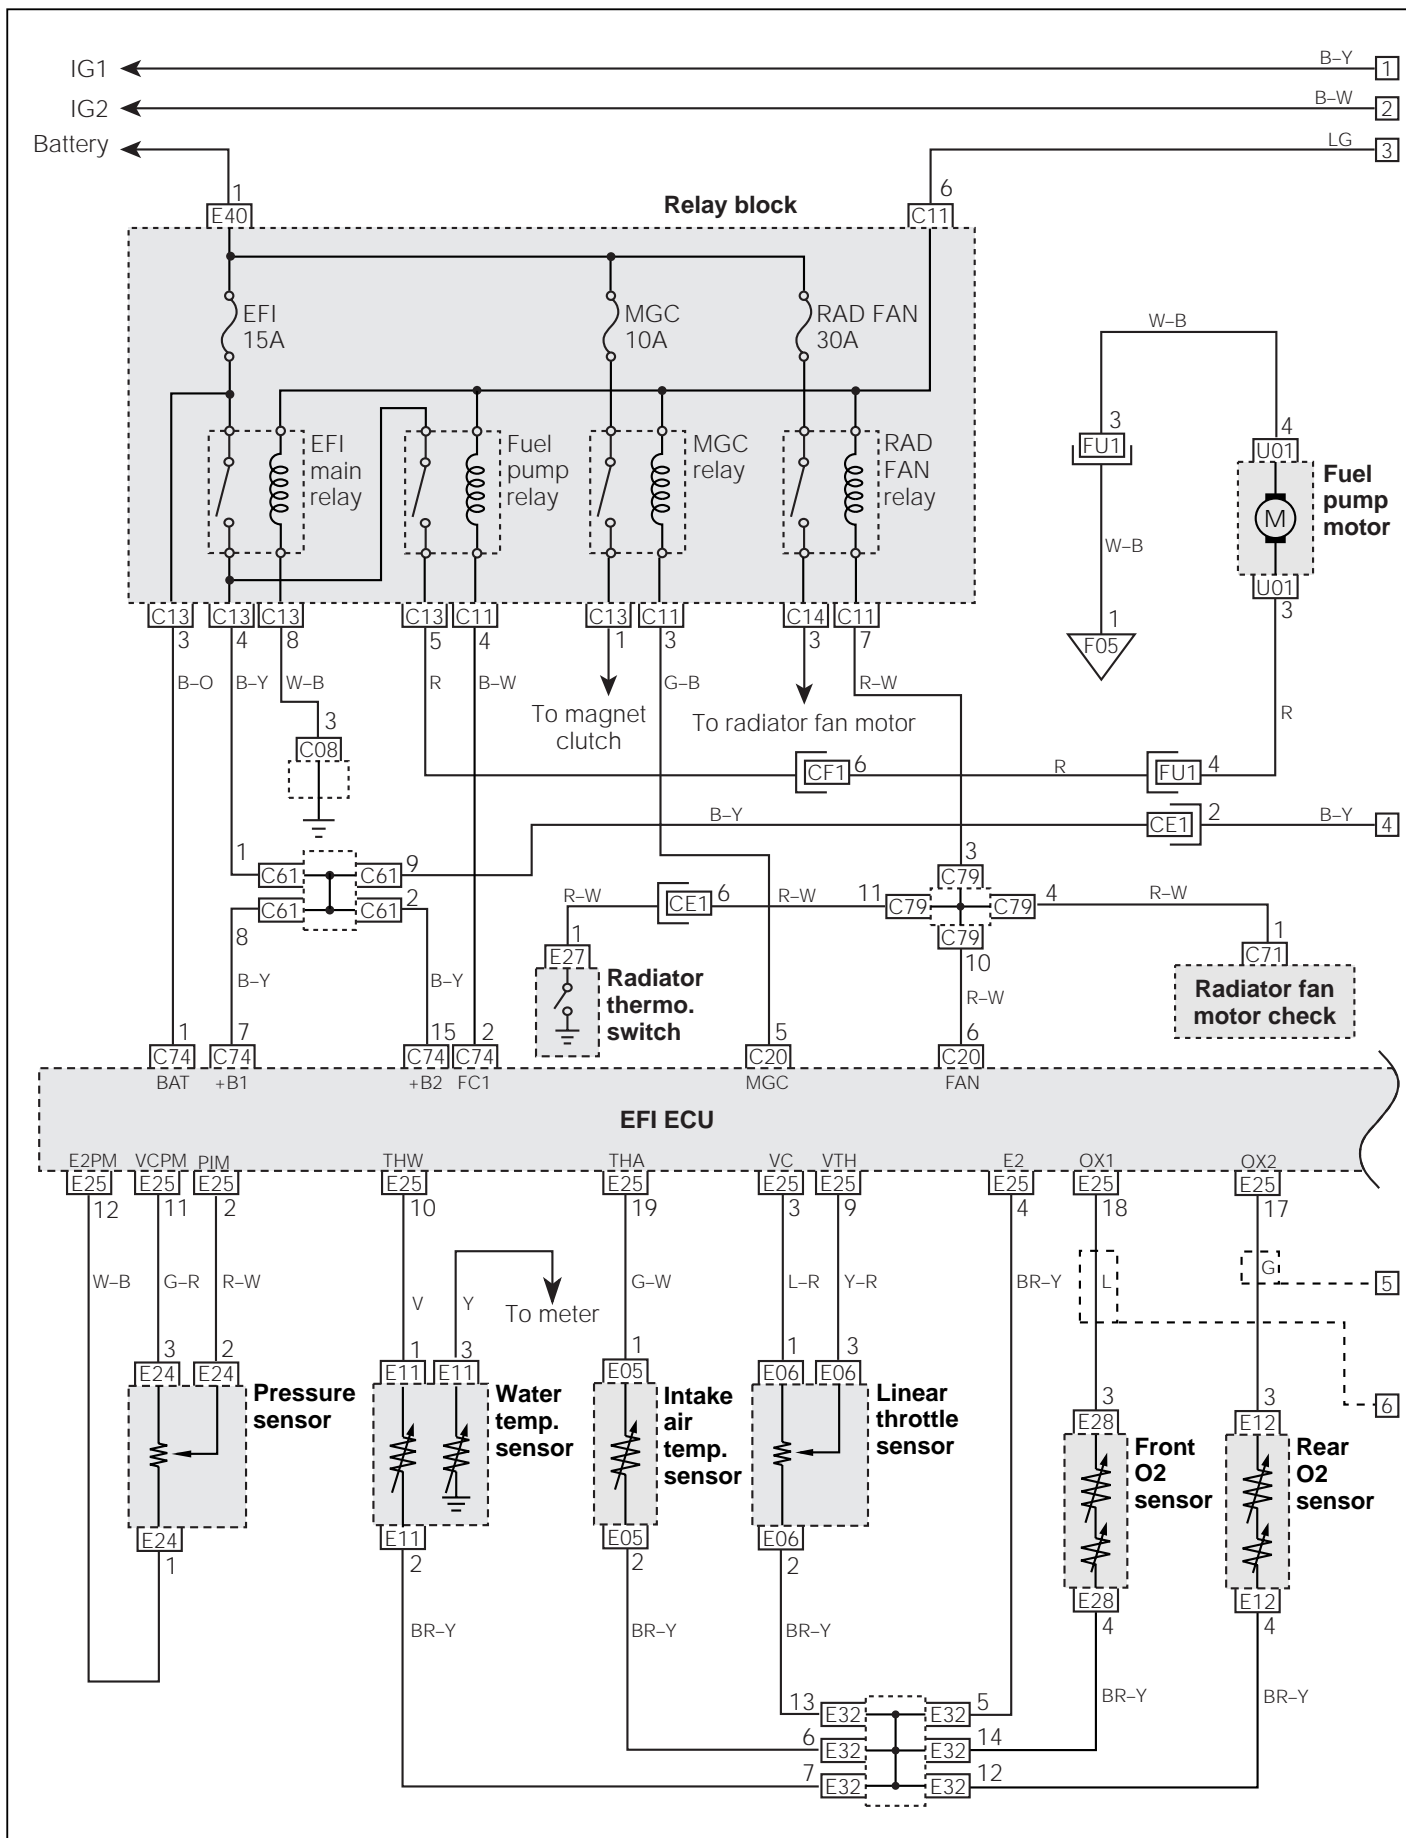

EFI SYSTEM (LHD / EU ONLY) -2

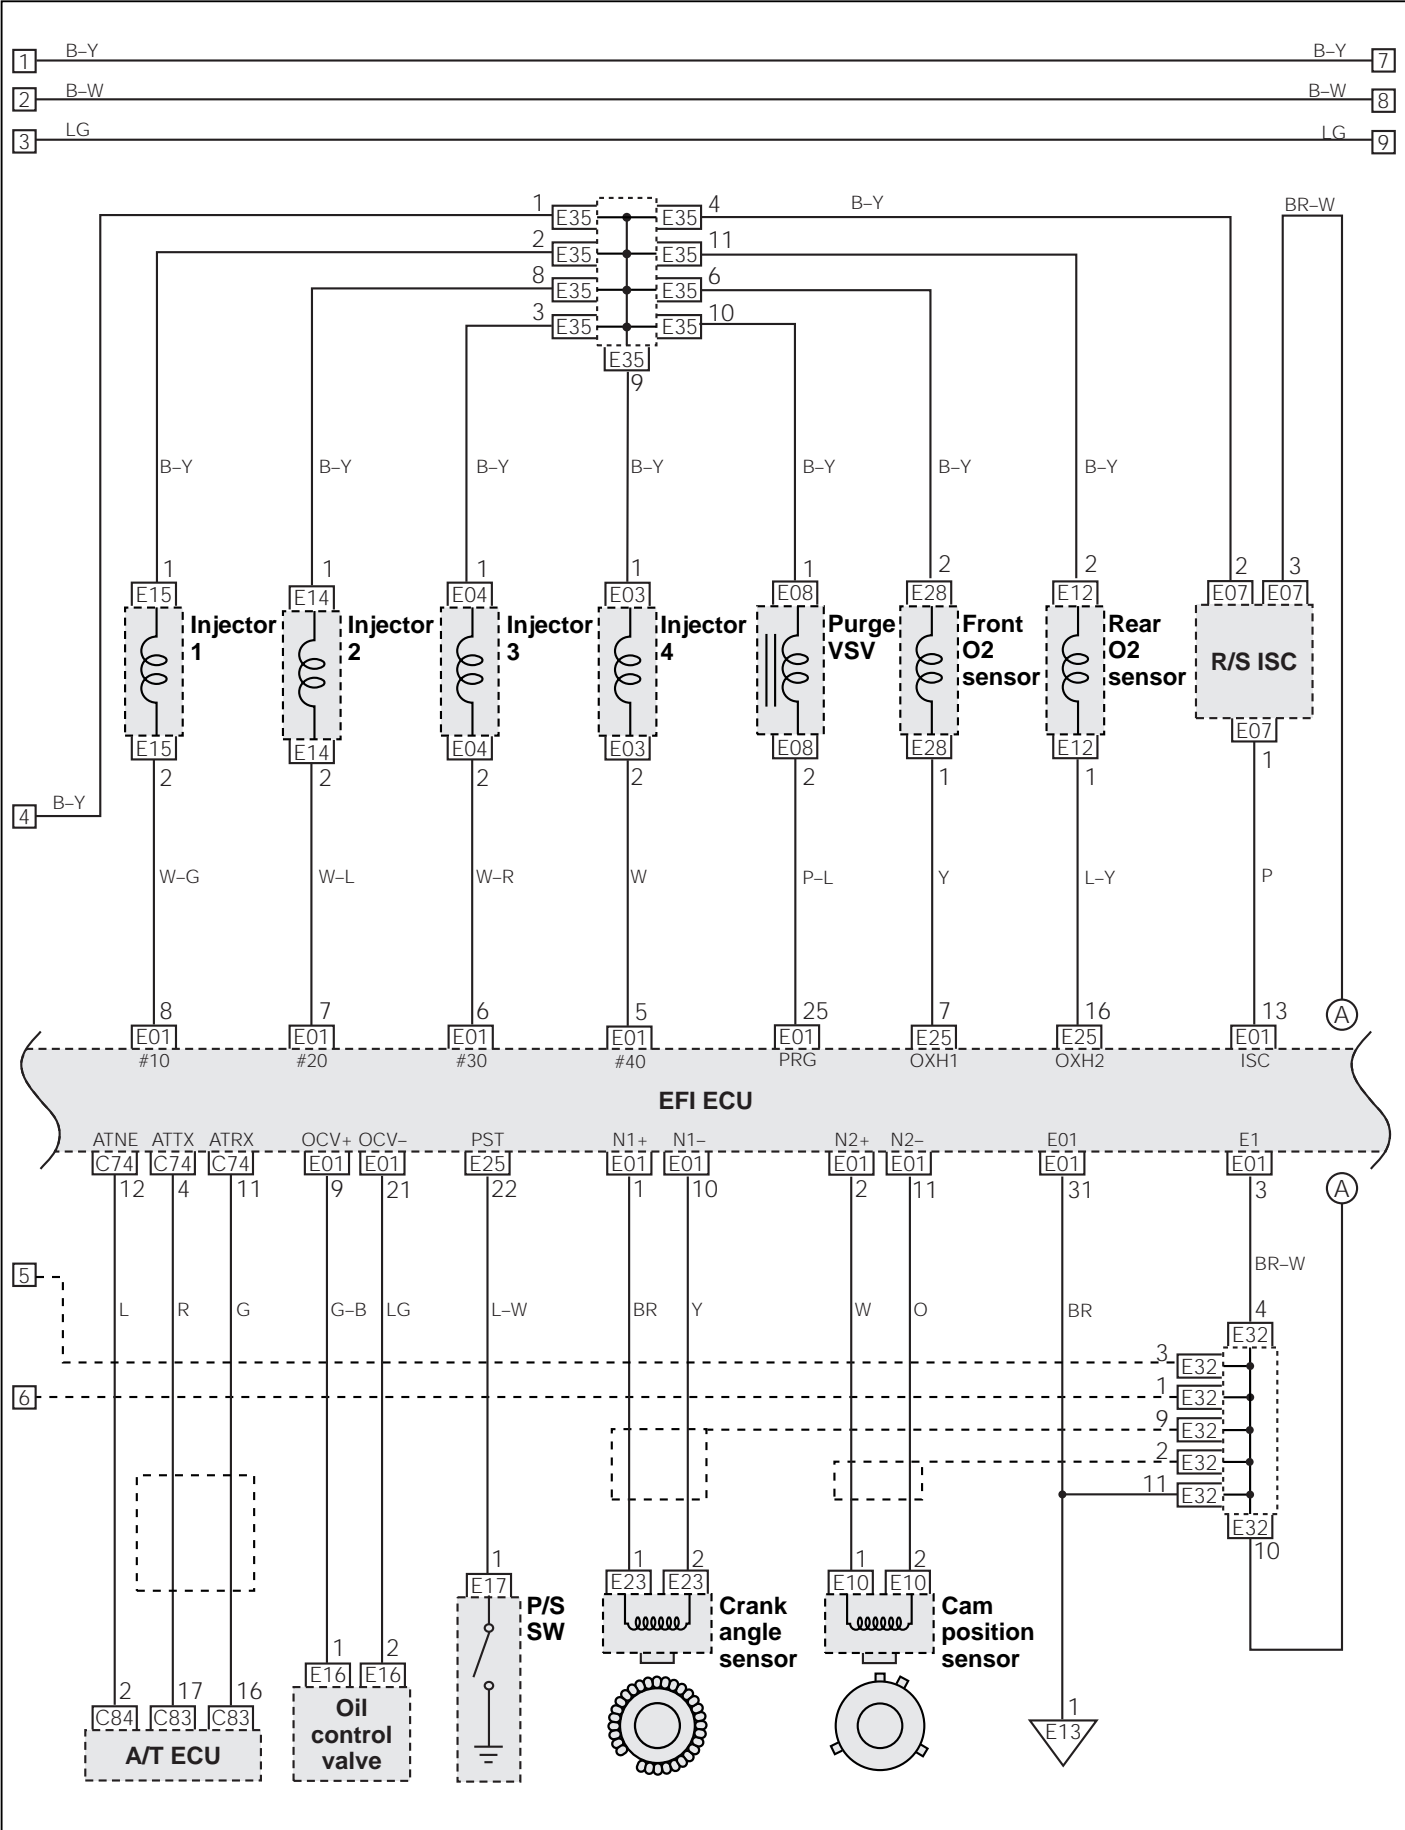


EFI SYSTEM (LHD / EU ONLY) -3

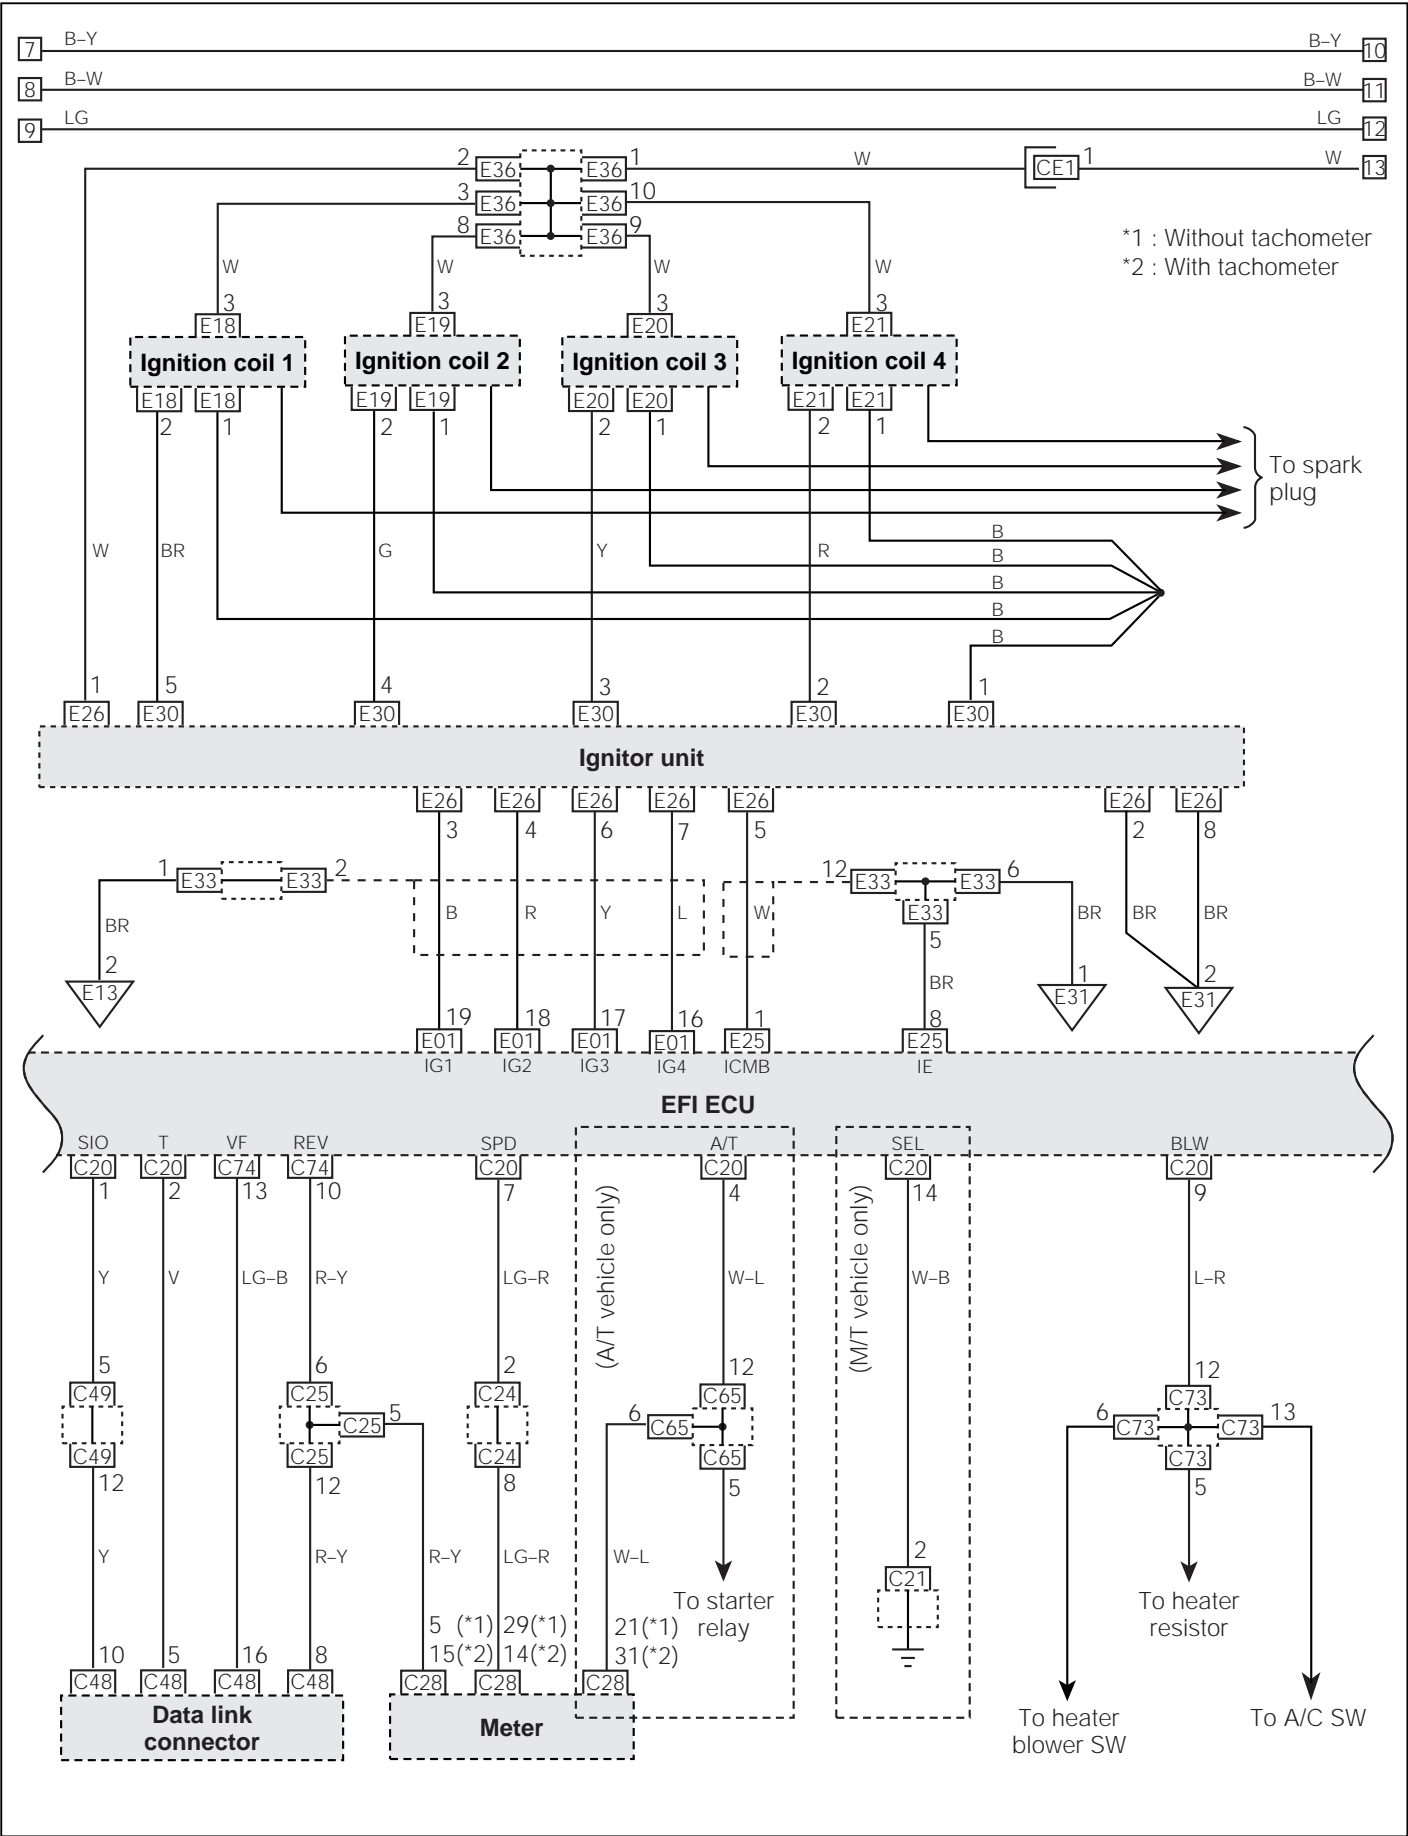




EFI SYSTEM (LHD / EXCEPT FOR EU) -1

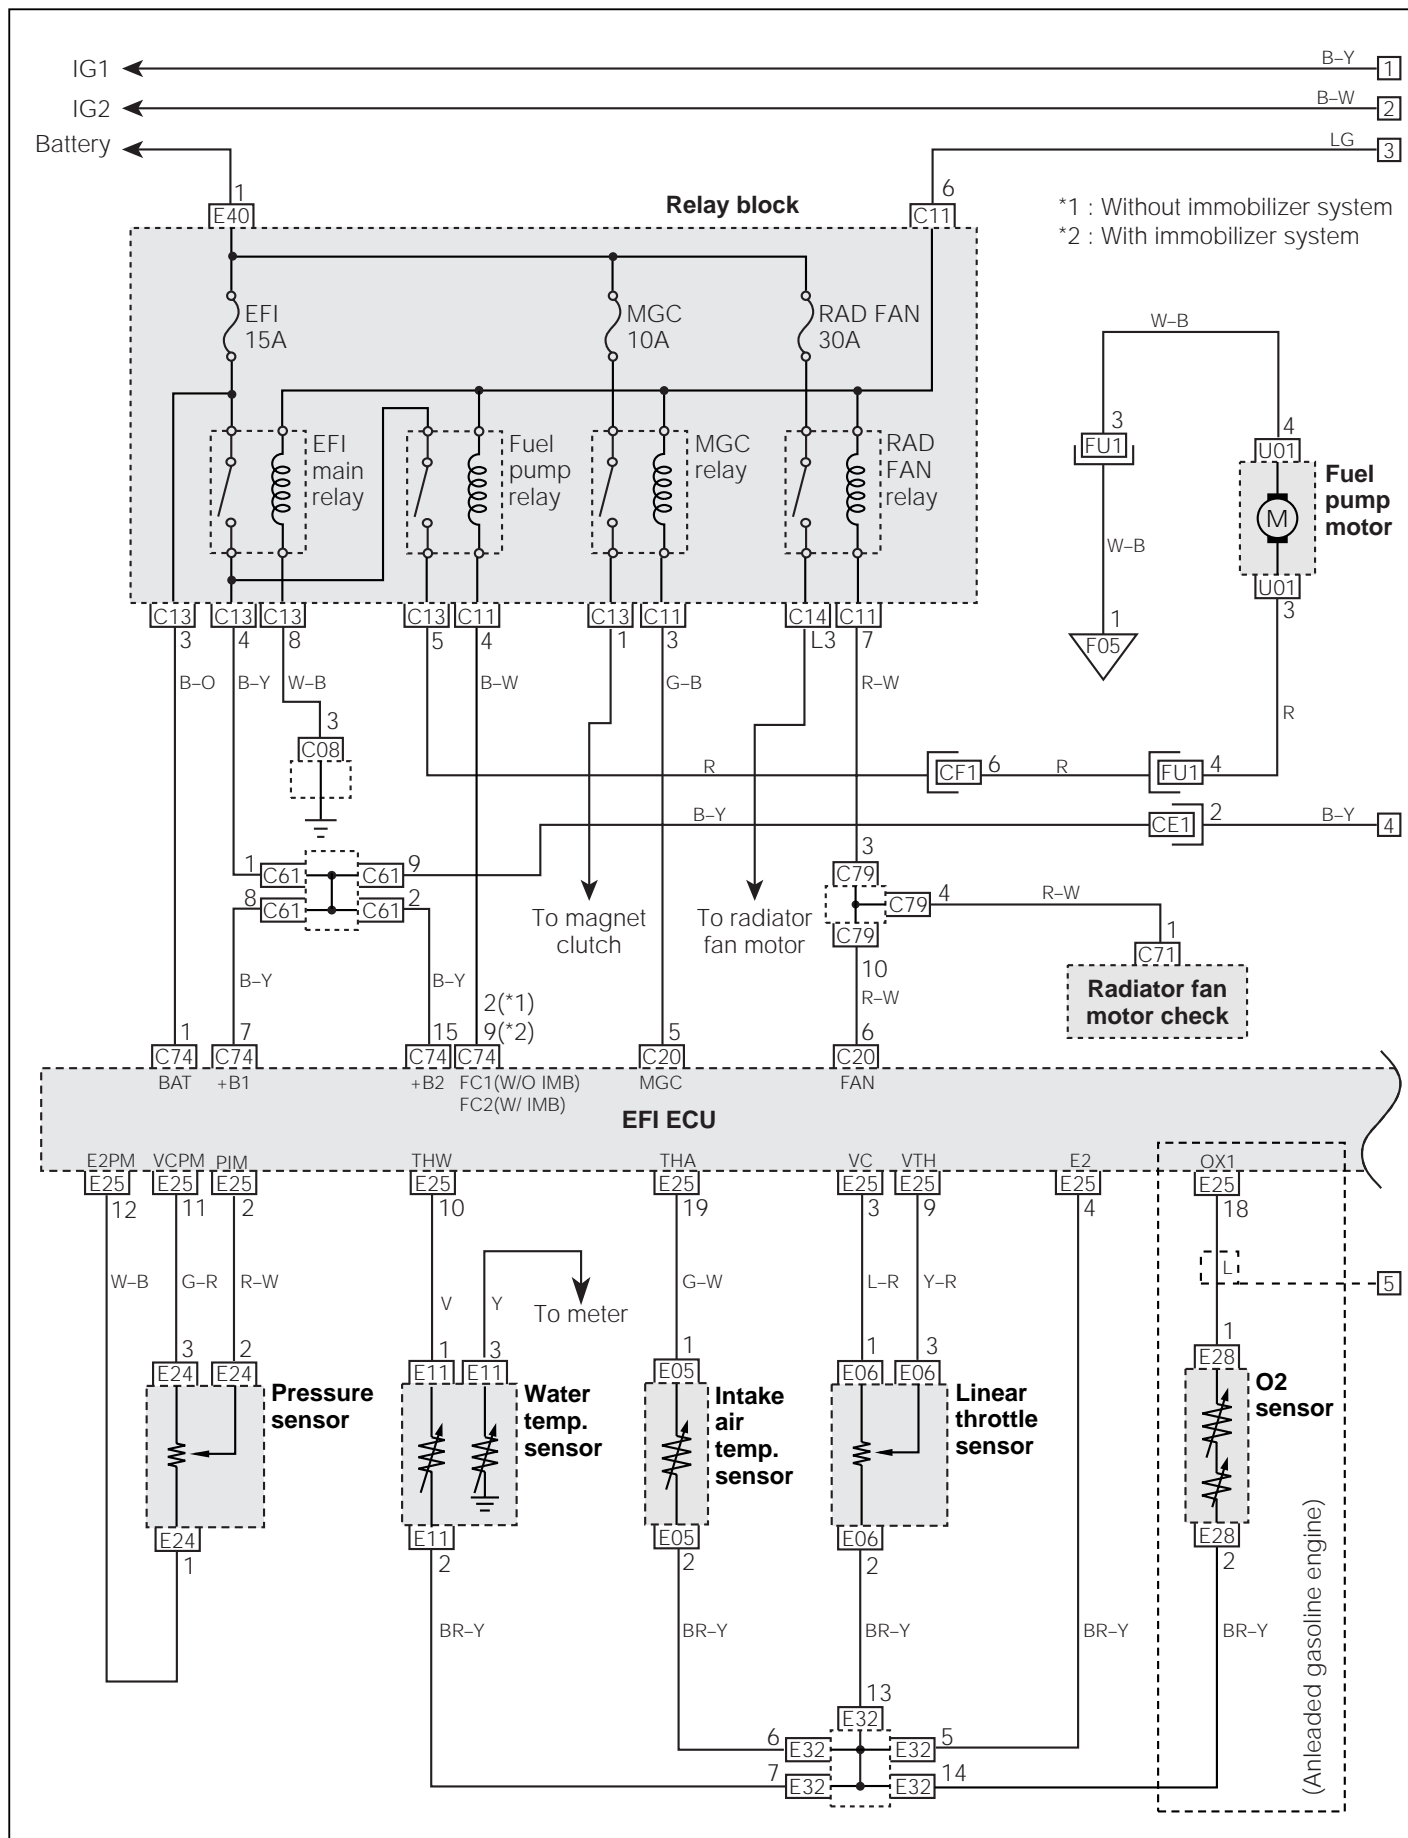


EFI SYSTEM (LHD / EXCEPT FOR EU) -2

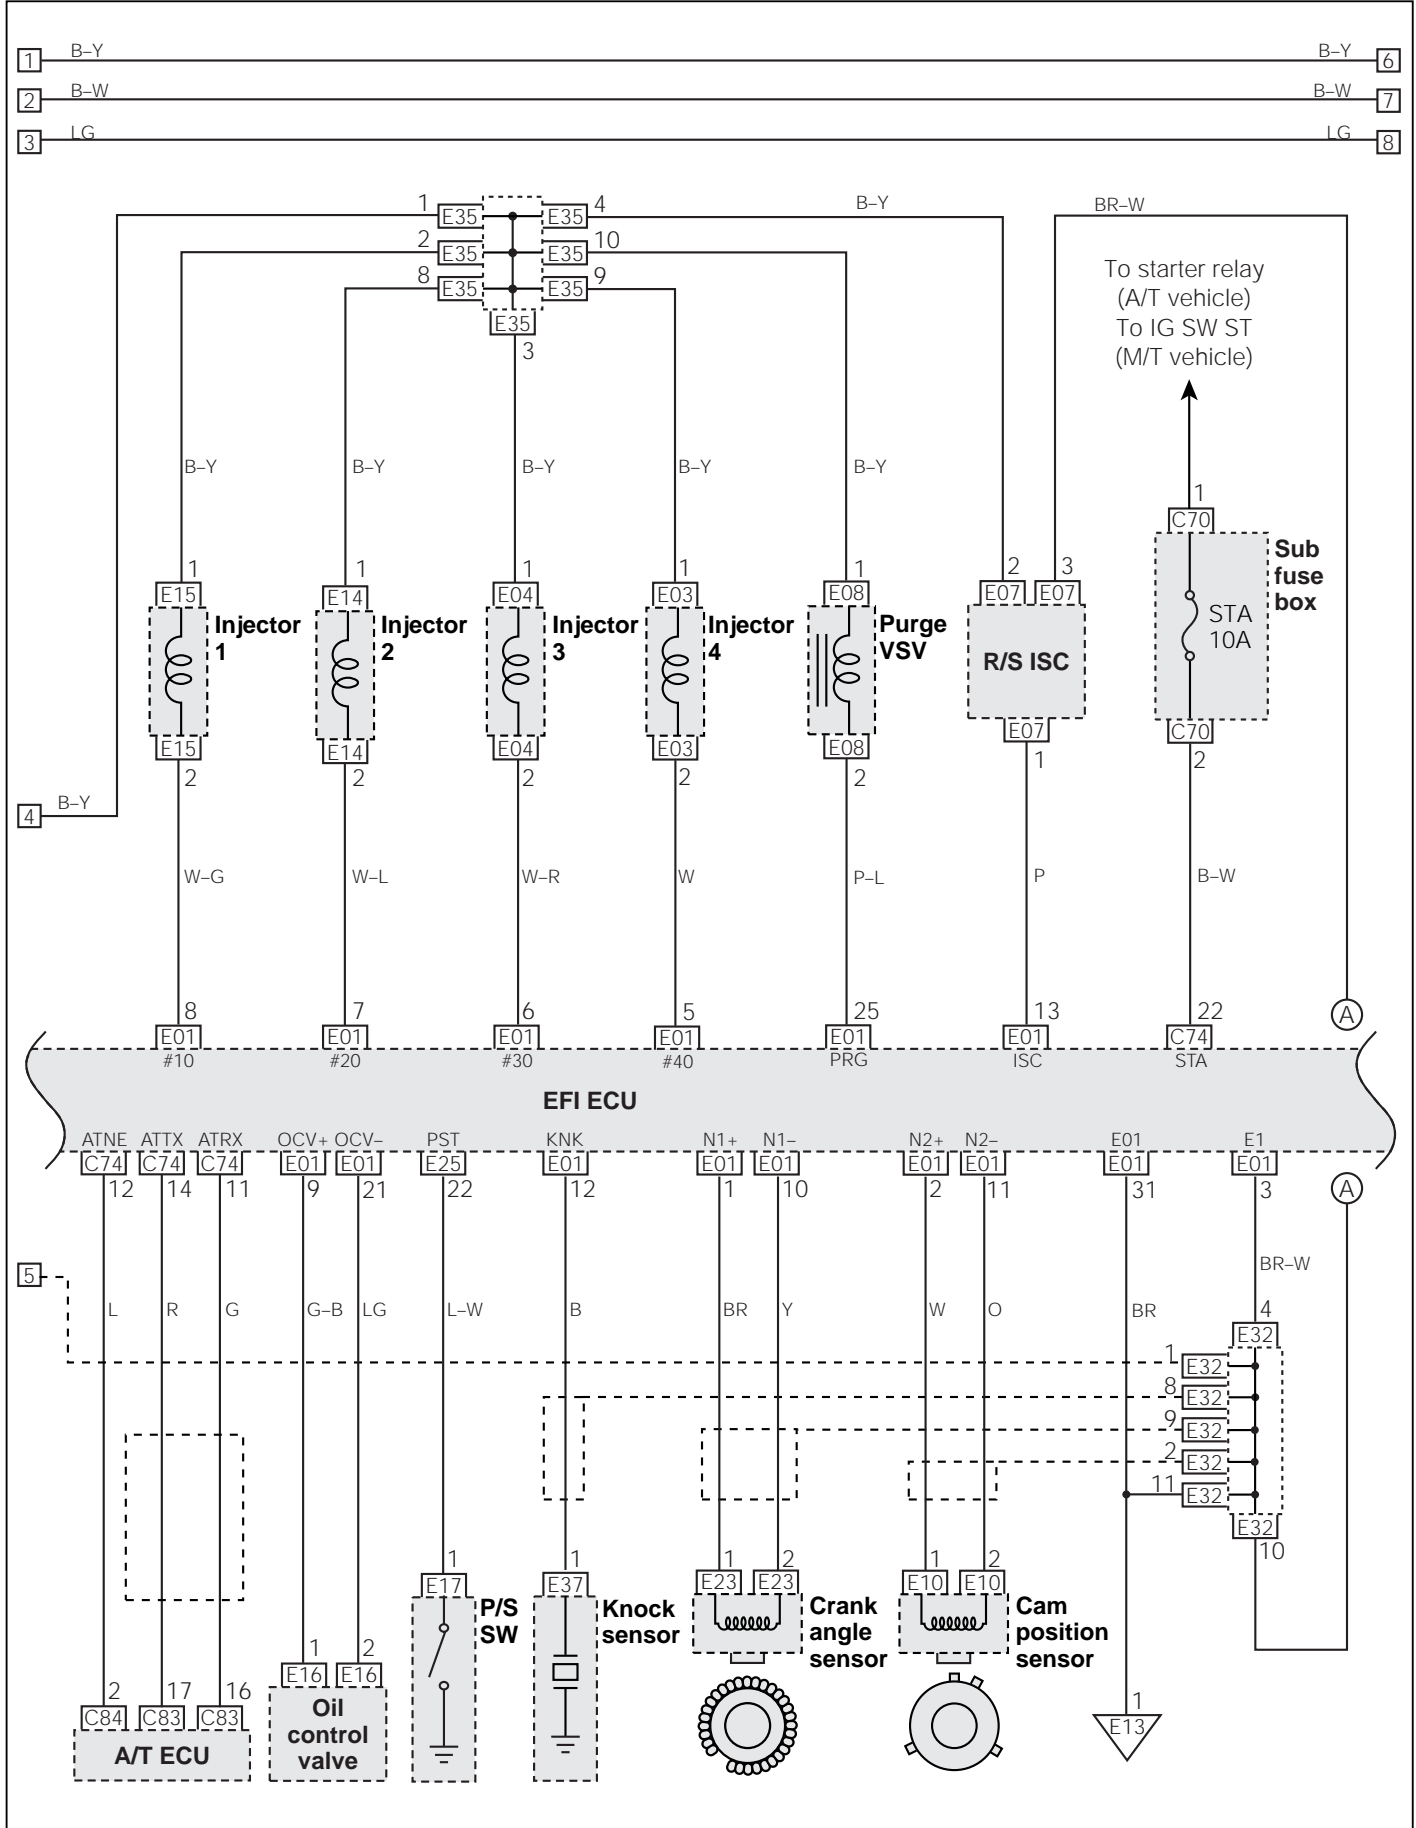


HW-30

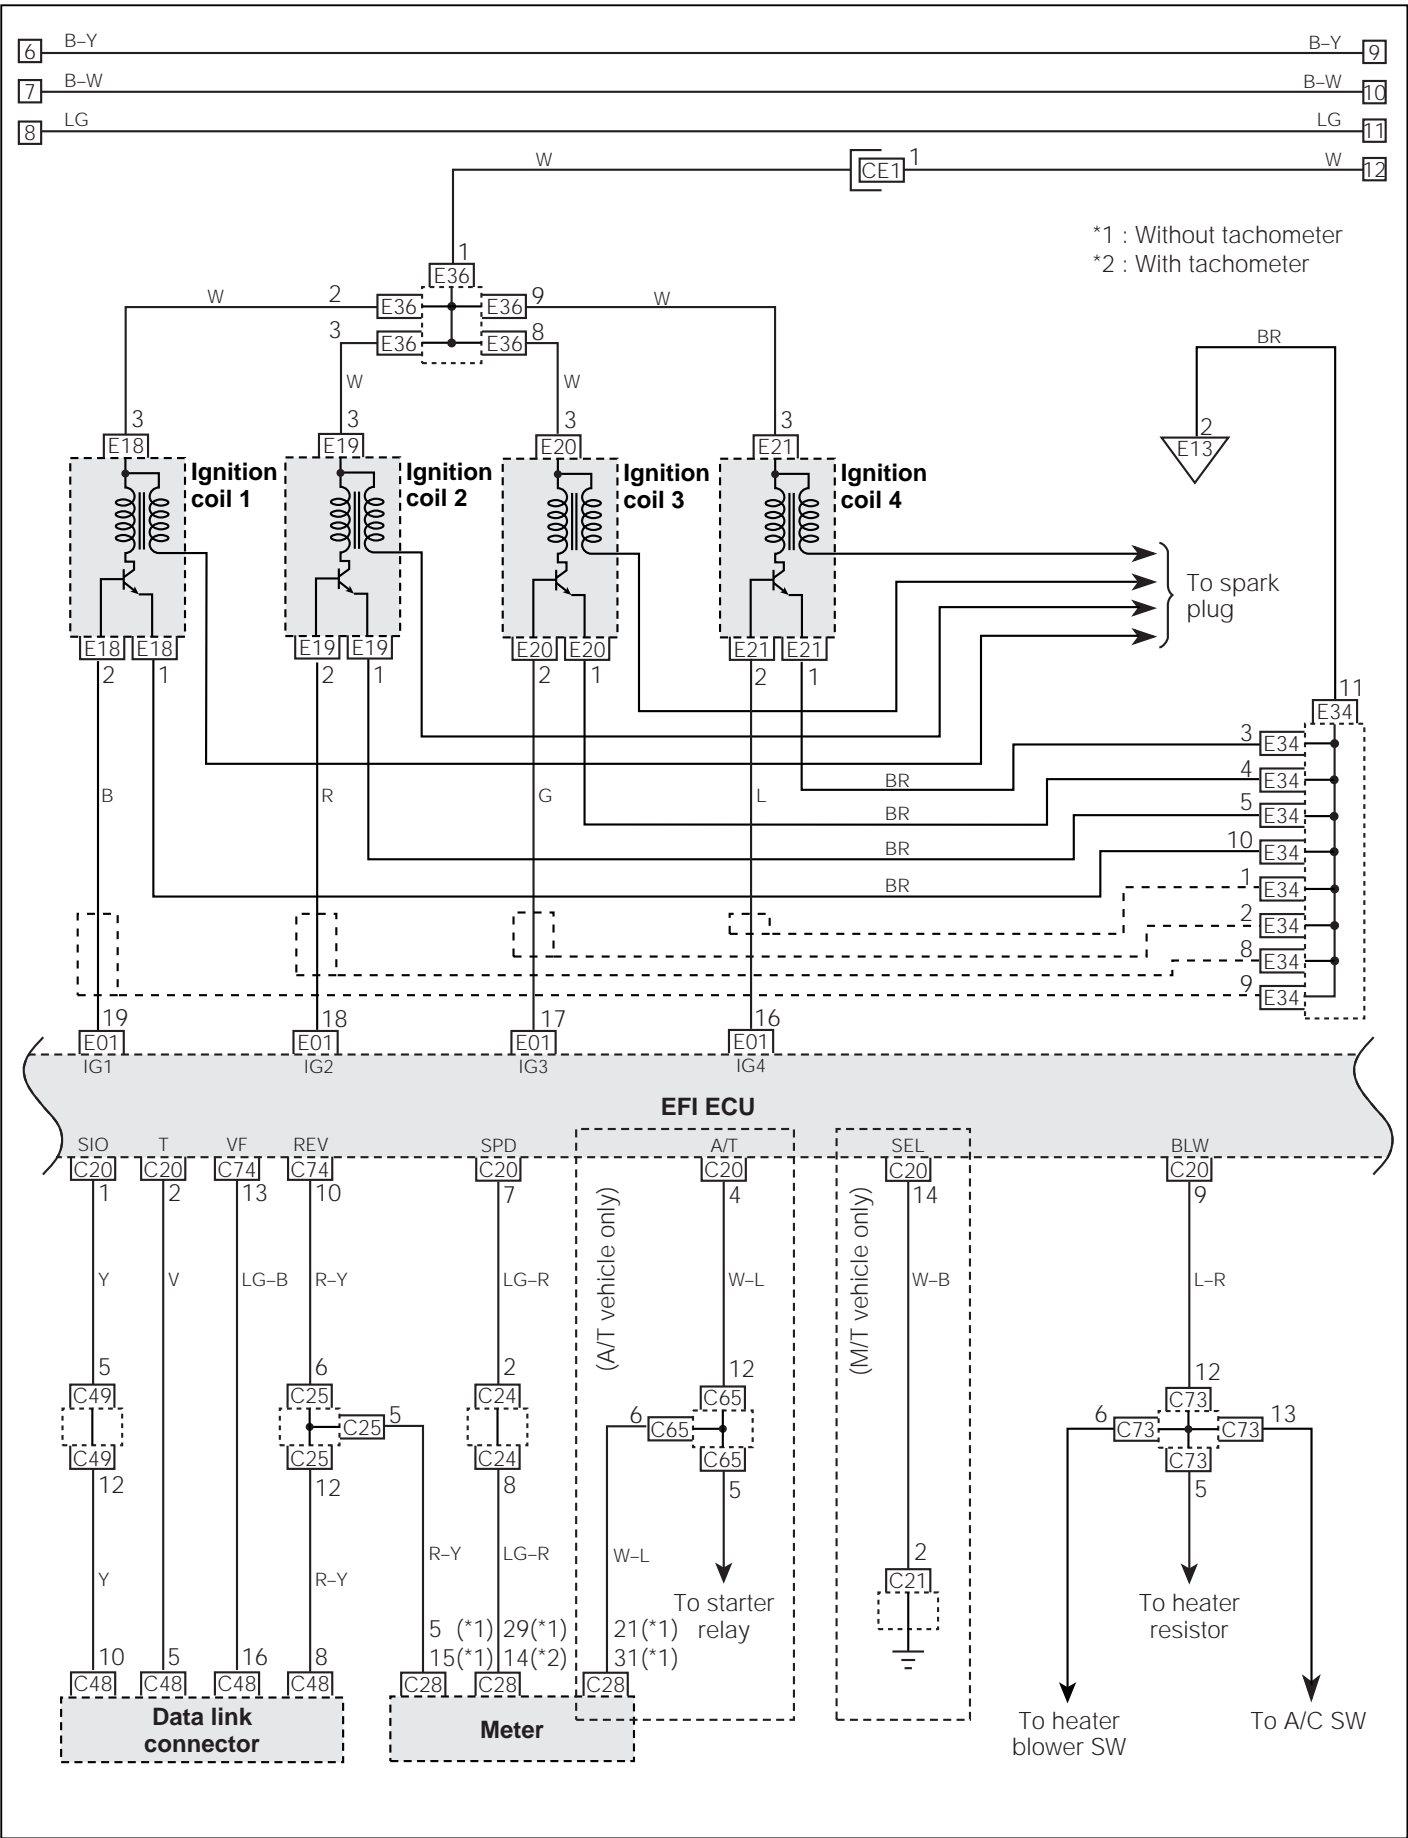
EFI SYSTEM (LHD / EXCEPT FOR EU) -3



EFI SYSTEM (LHD / EXCEPT FOR EU) -4

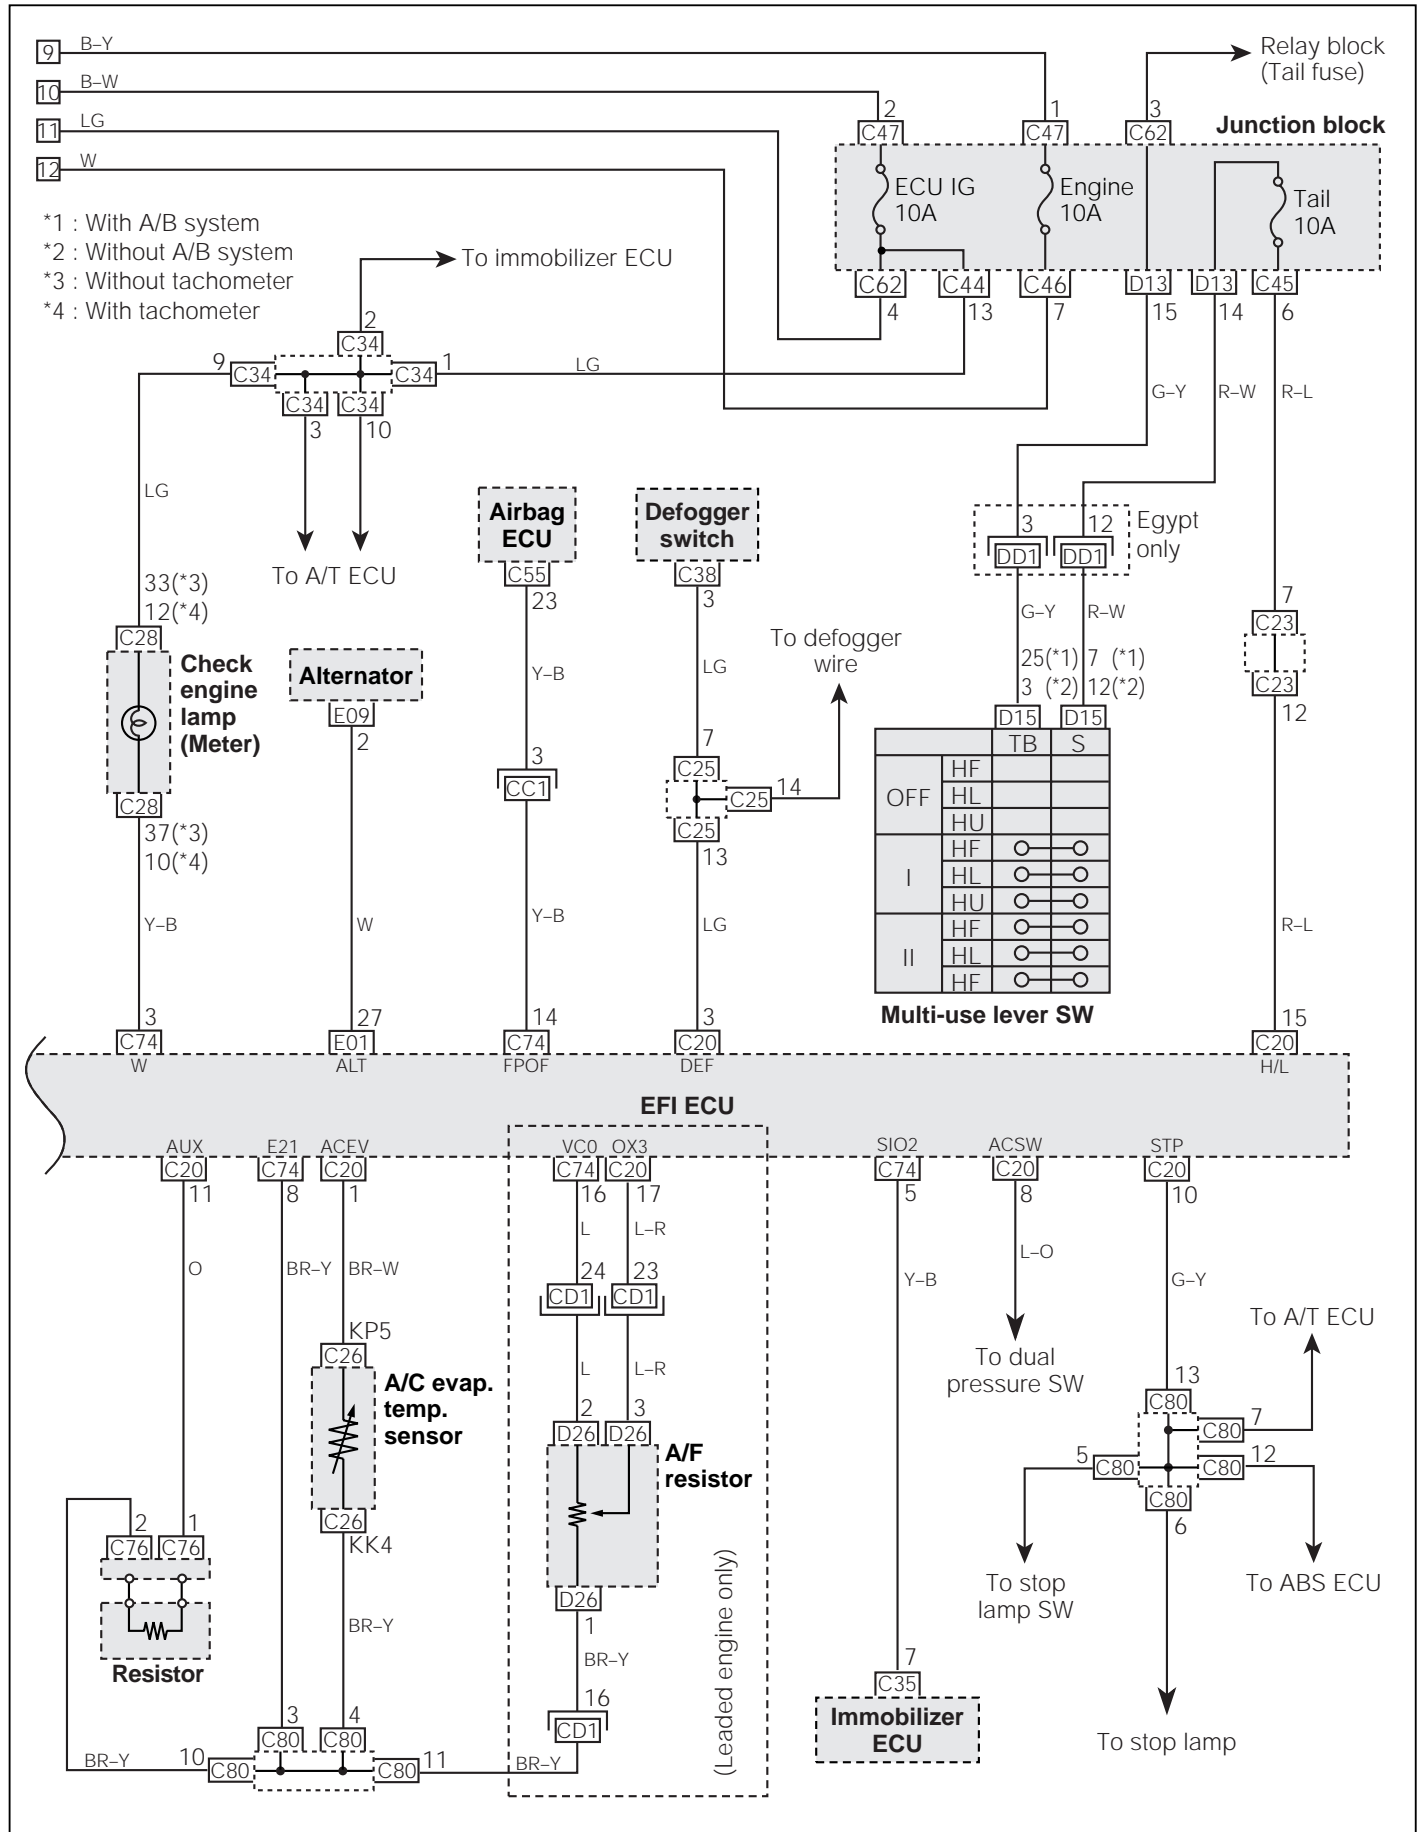


A/T CONTROL (RHD) -1

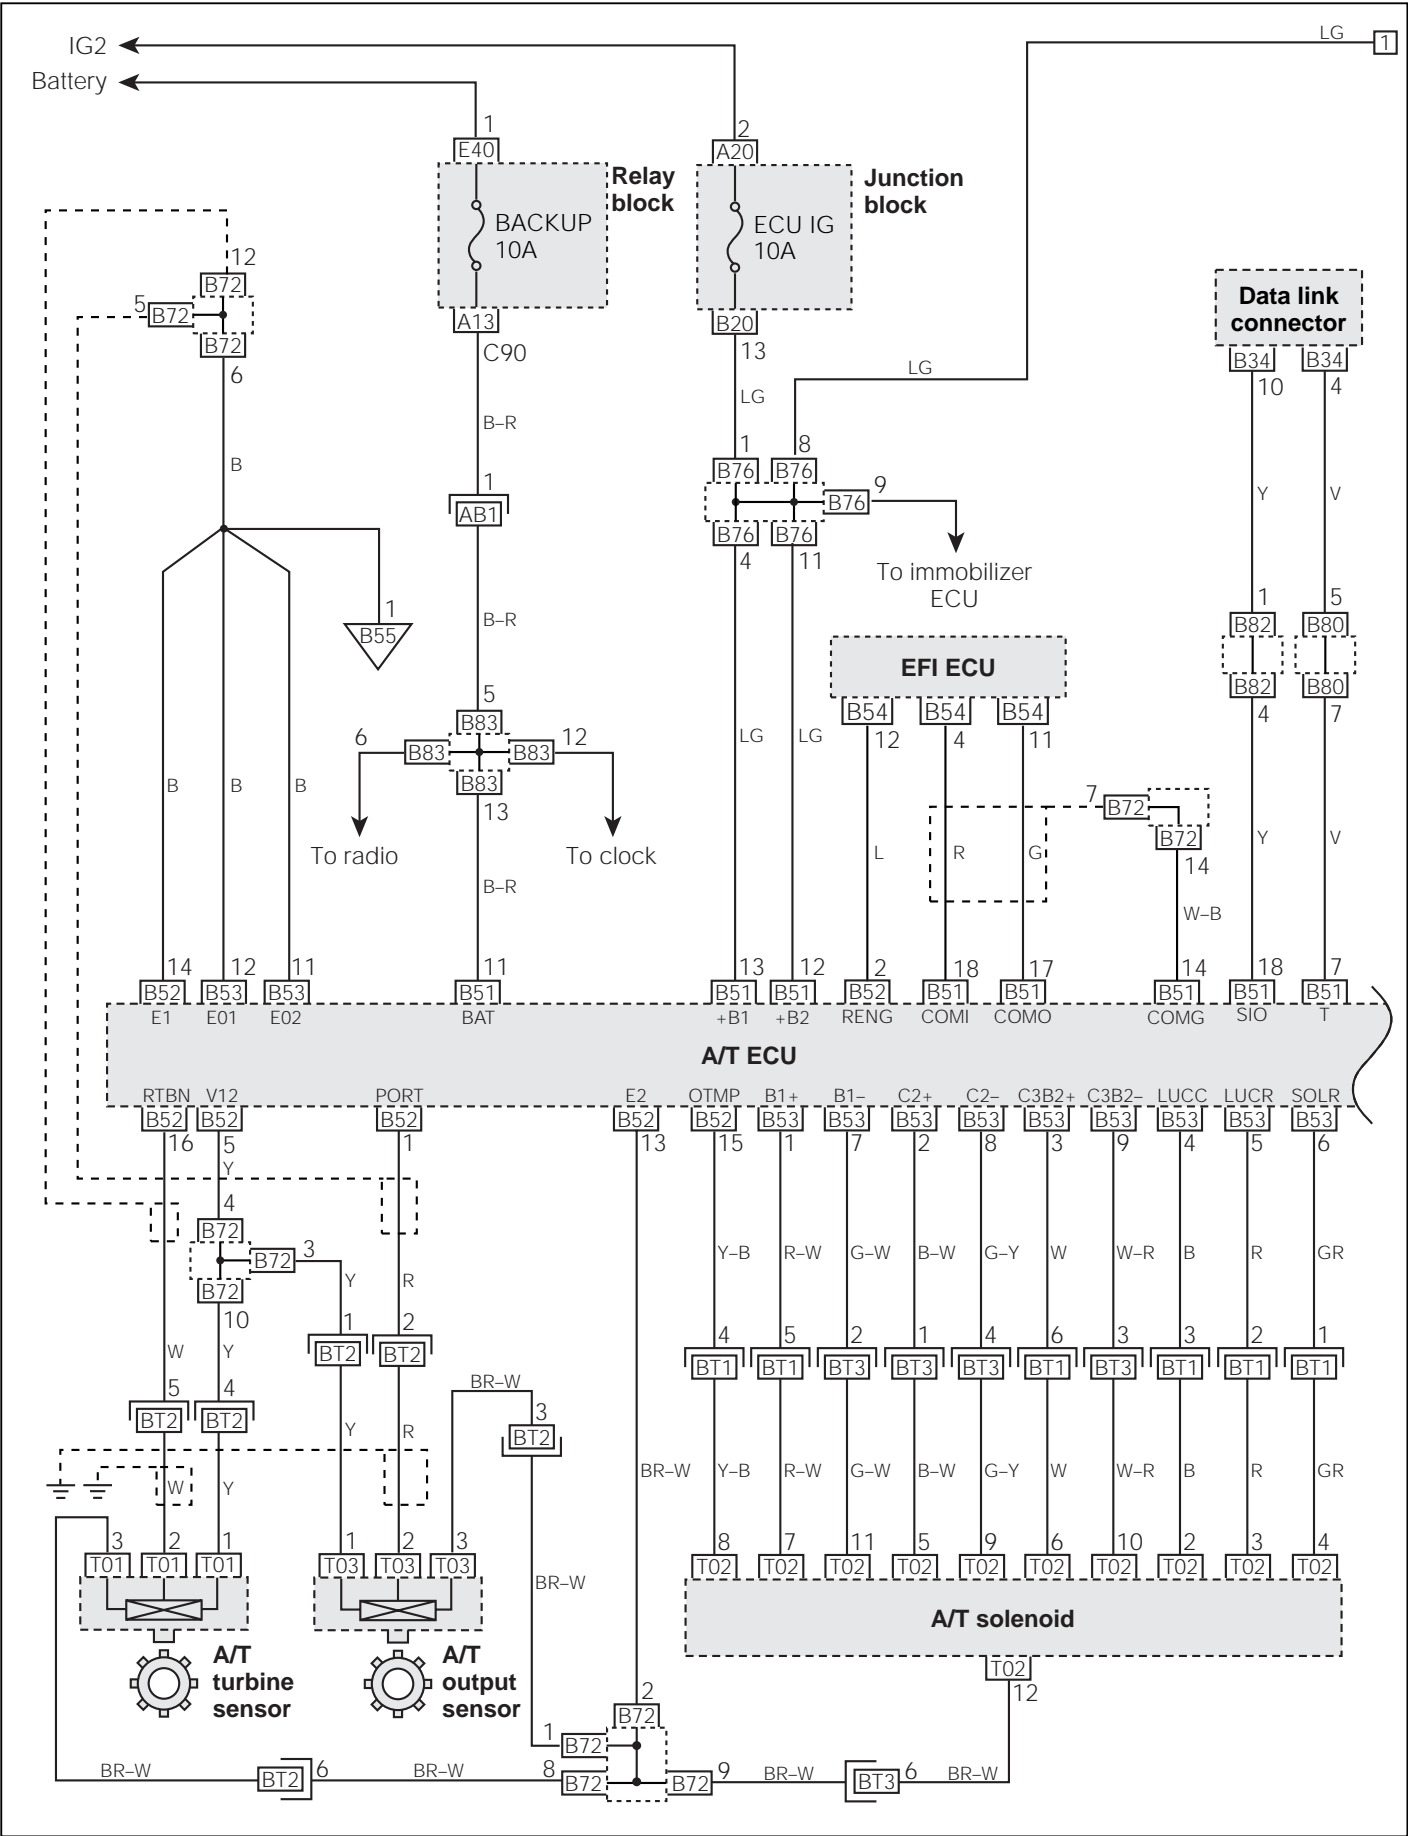




A/T CONTROL (LHD) -1

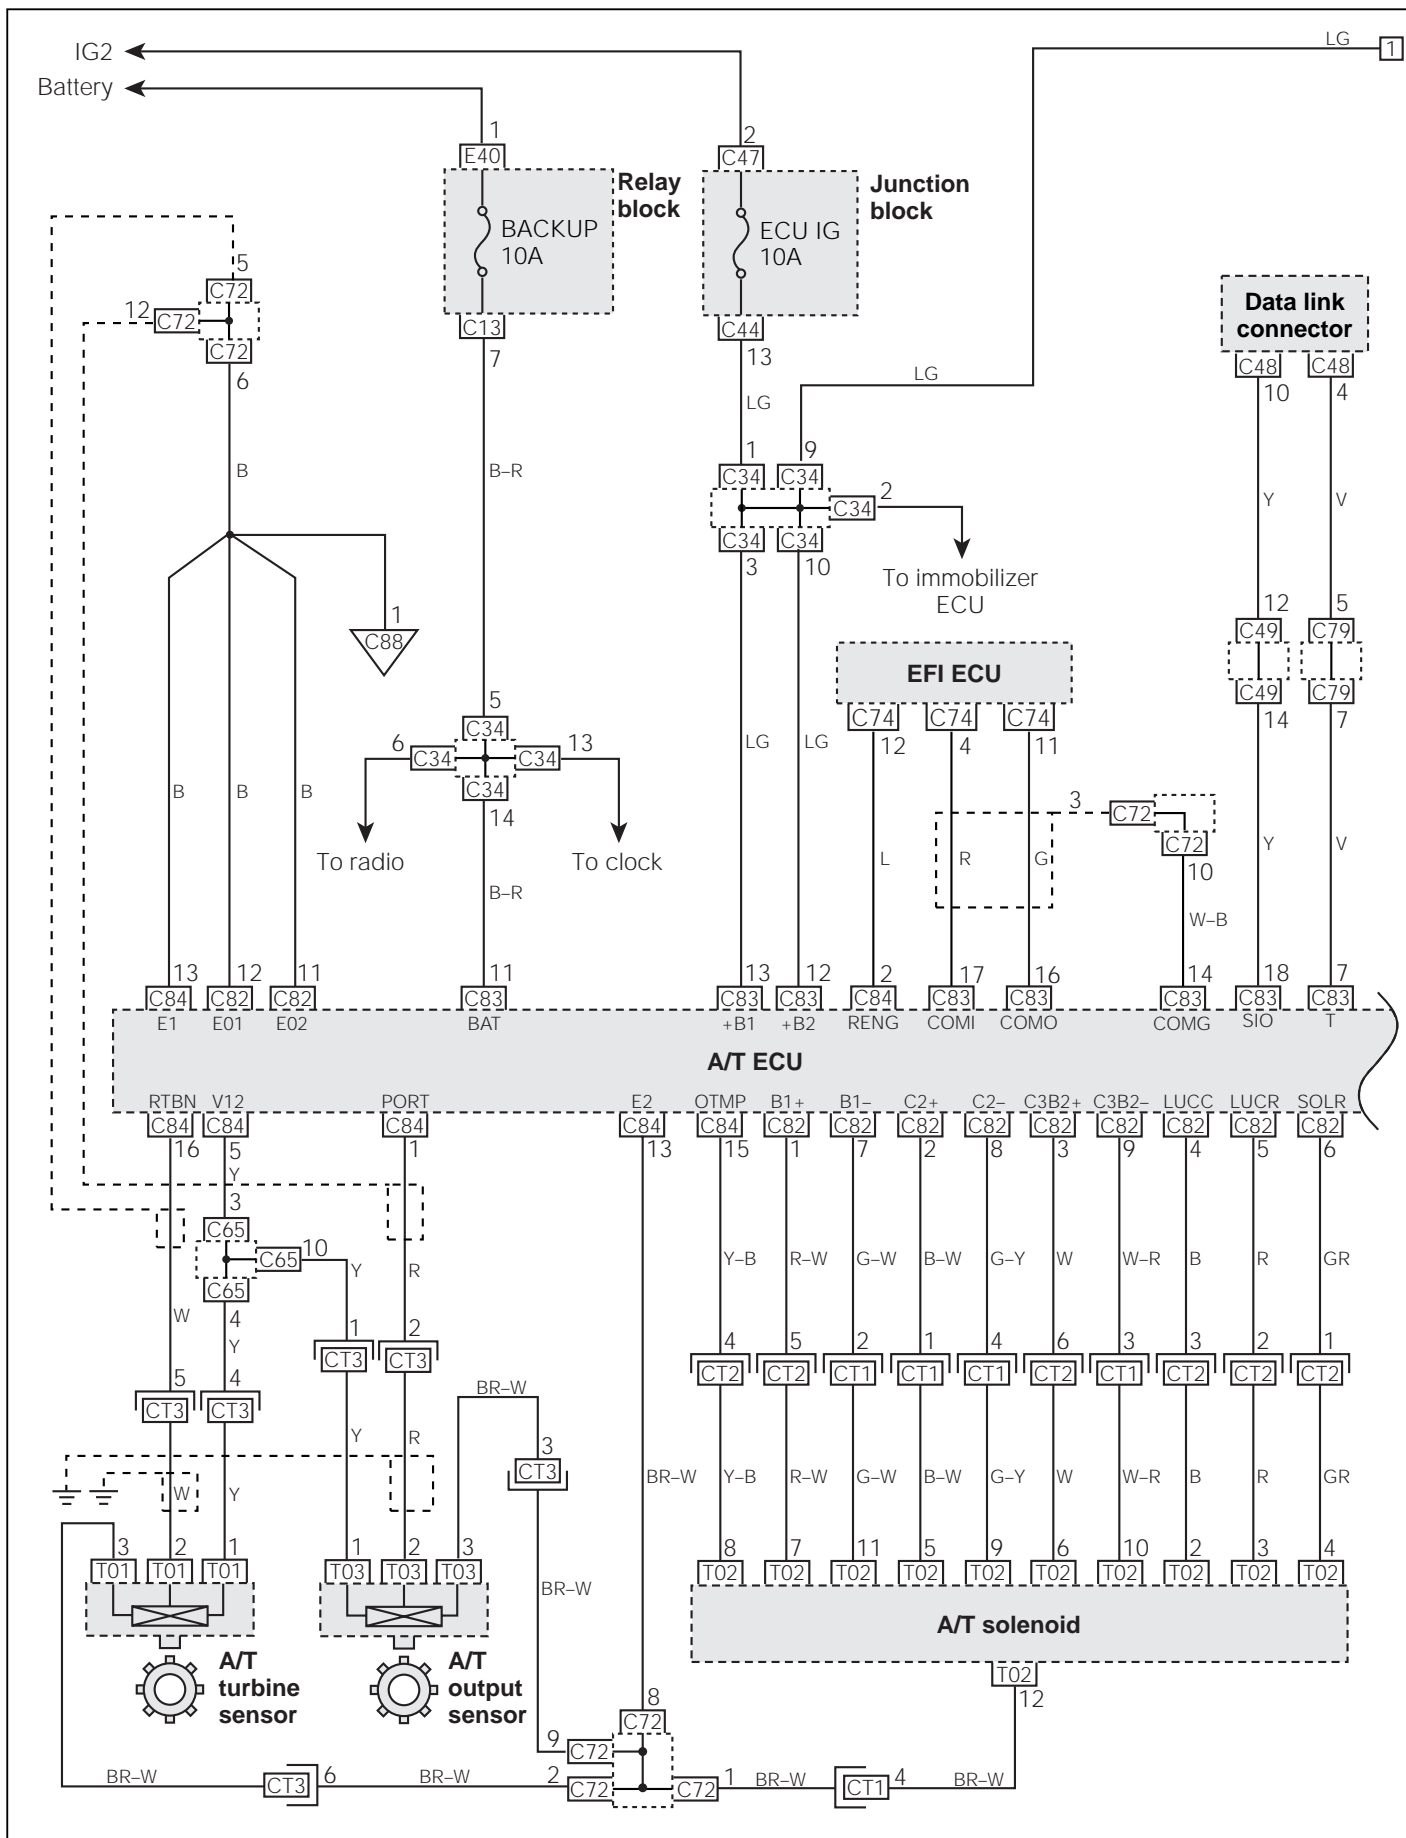





CENTER DIFFERENTIAL LOCK (RHD)

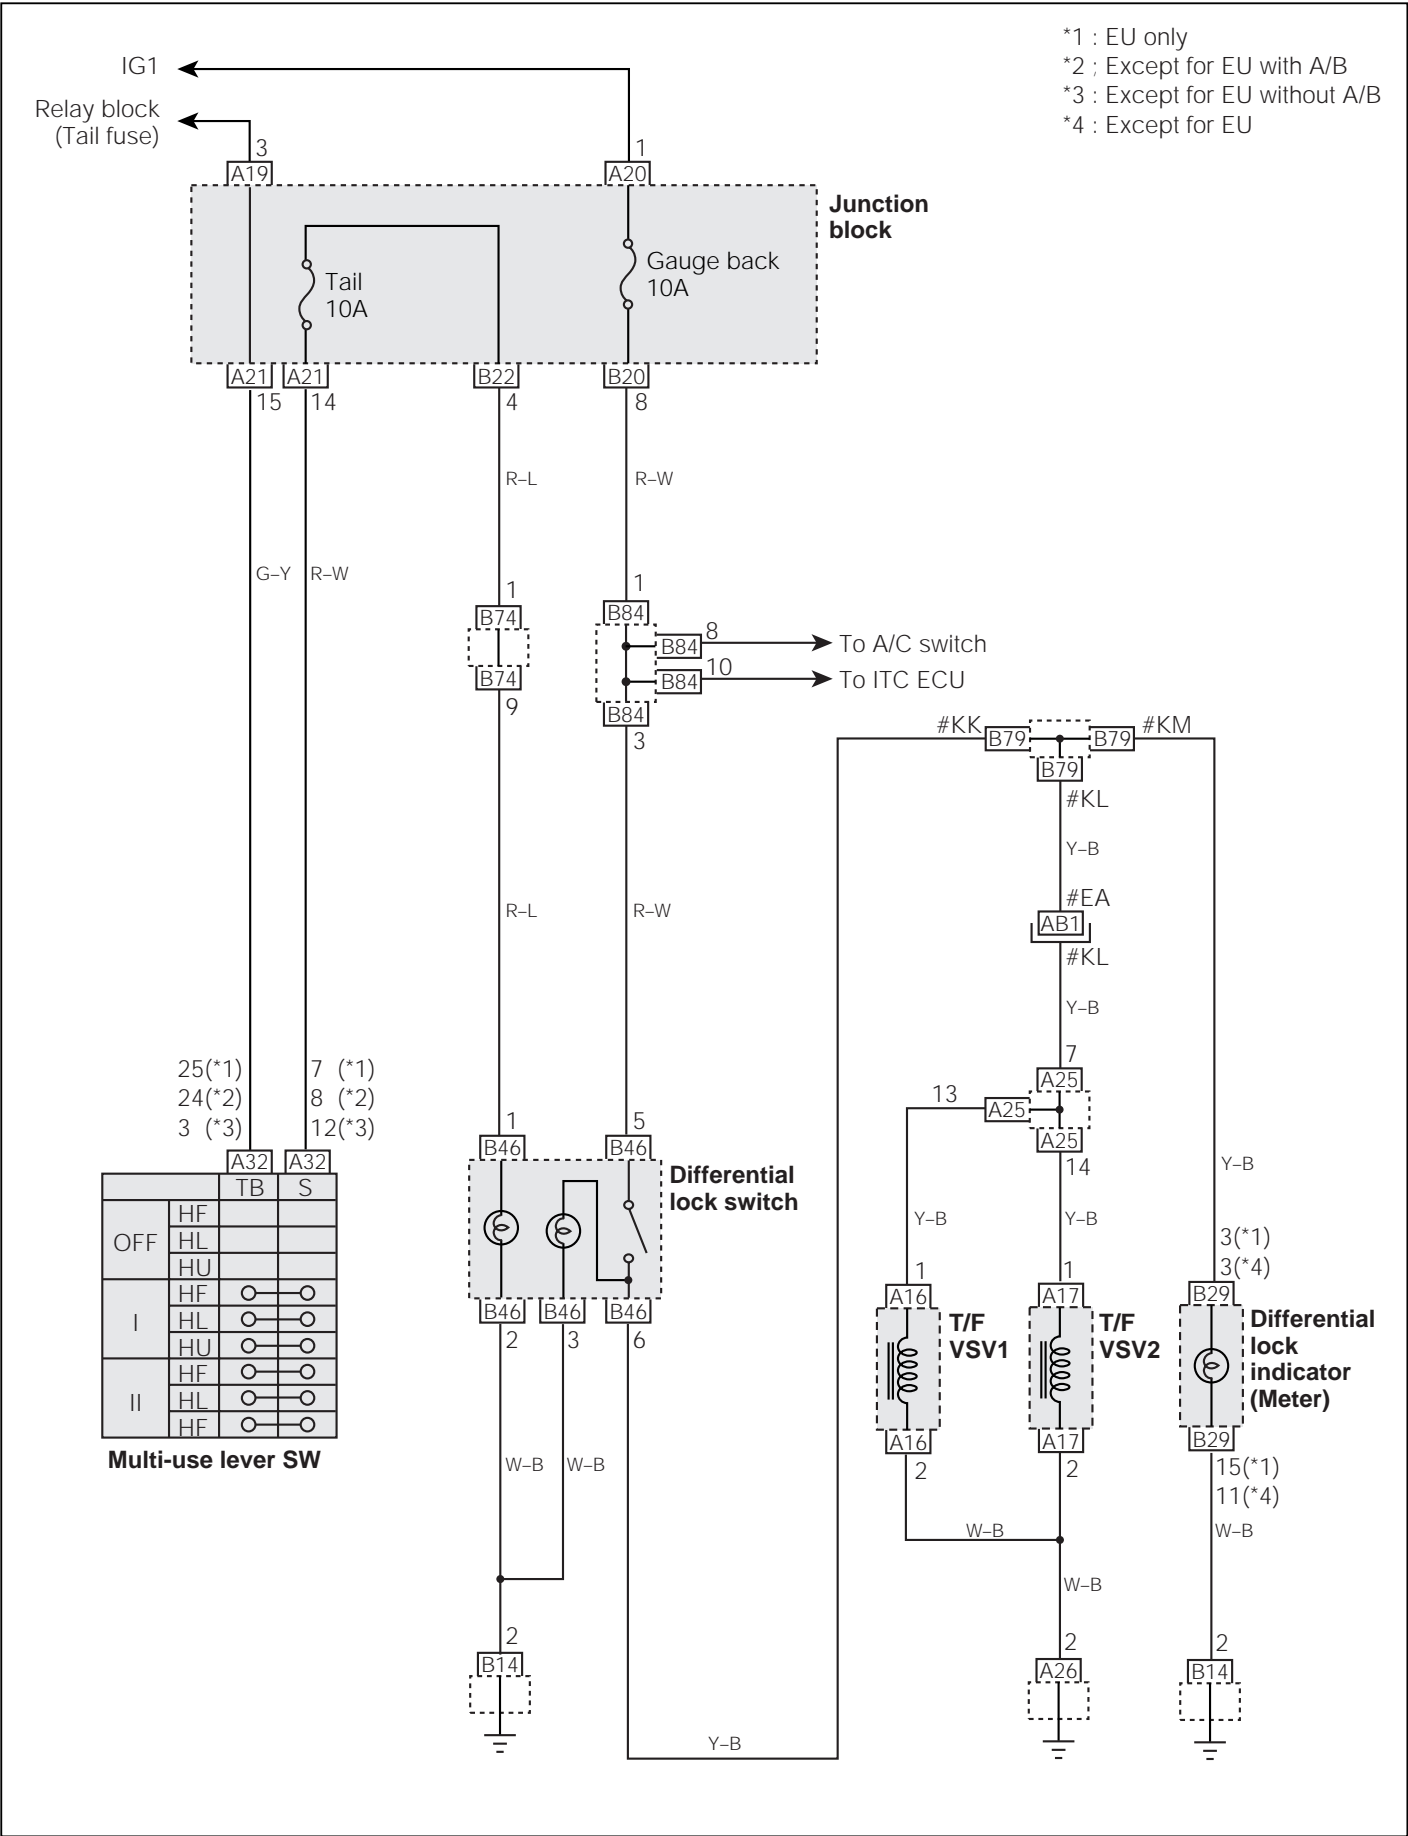

CENTER DIFFERENTIAL LOCK (LHD)

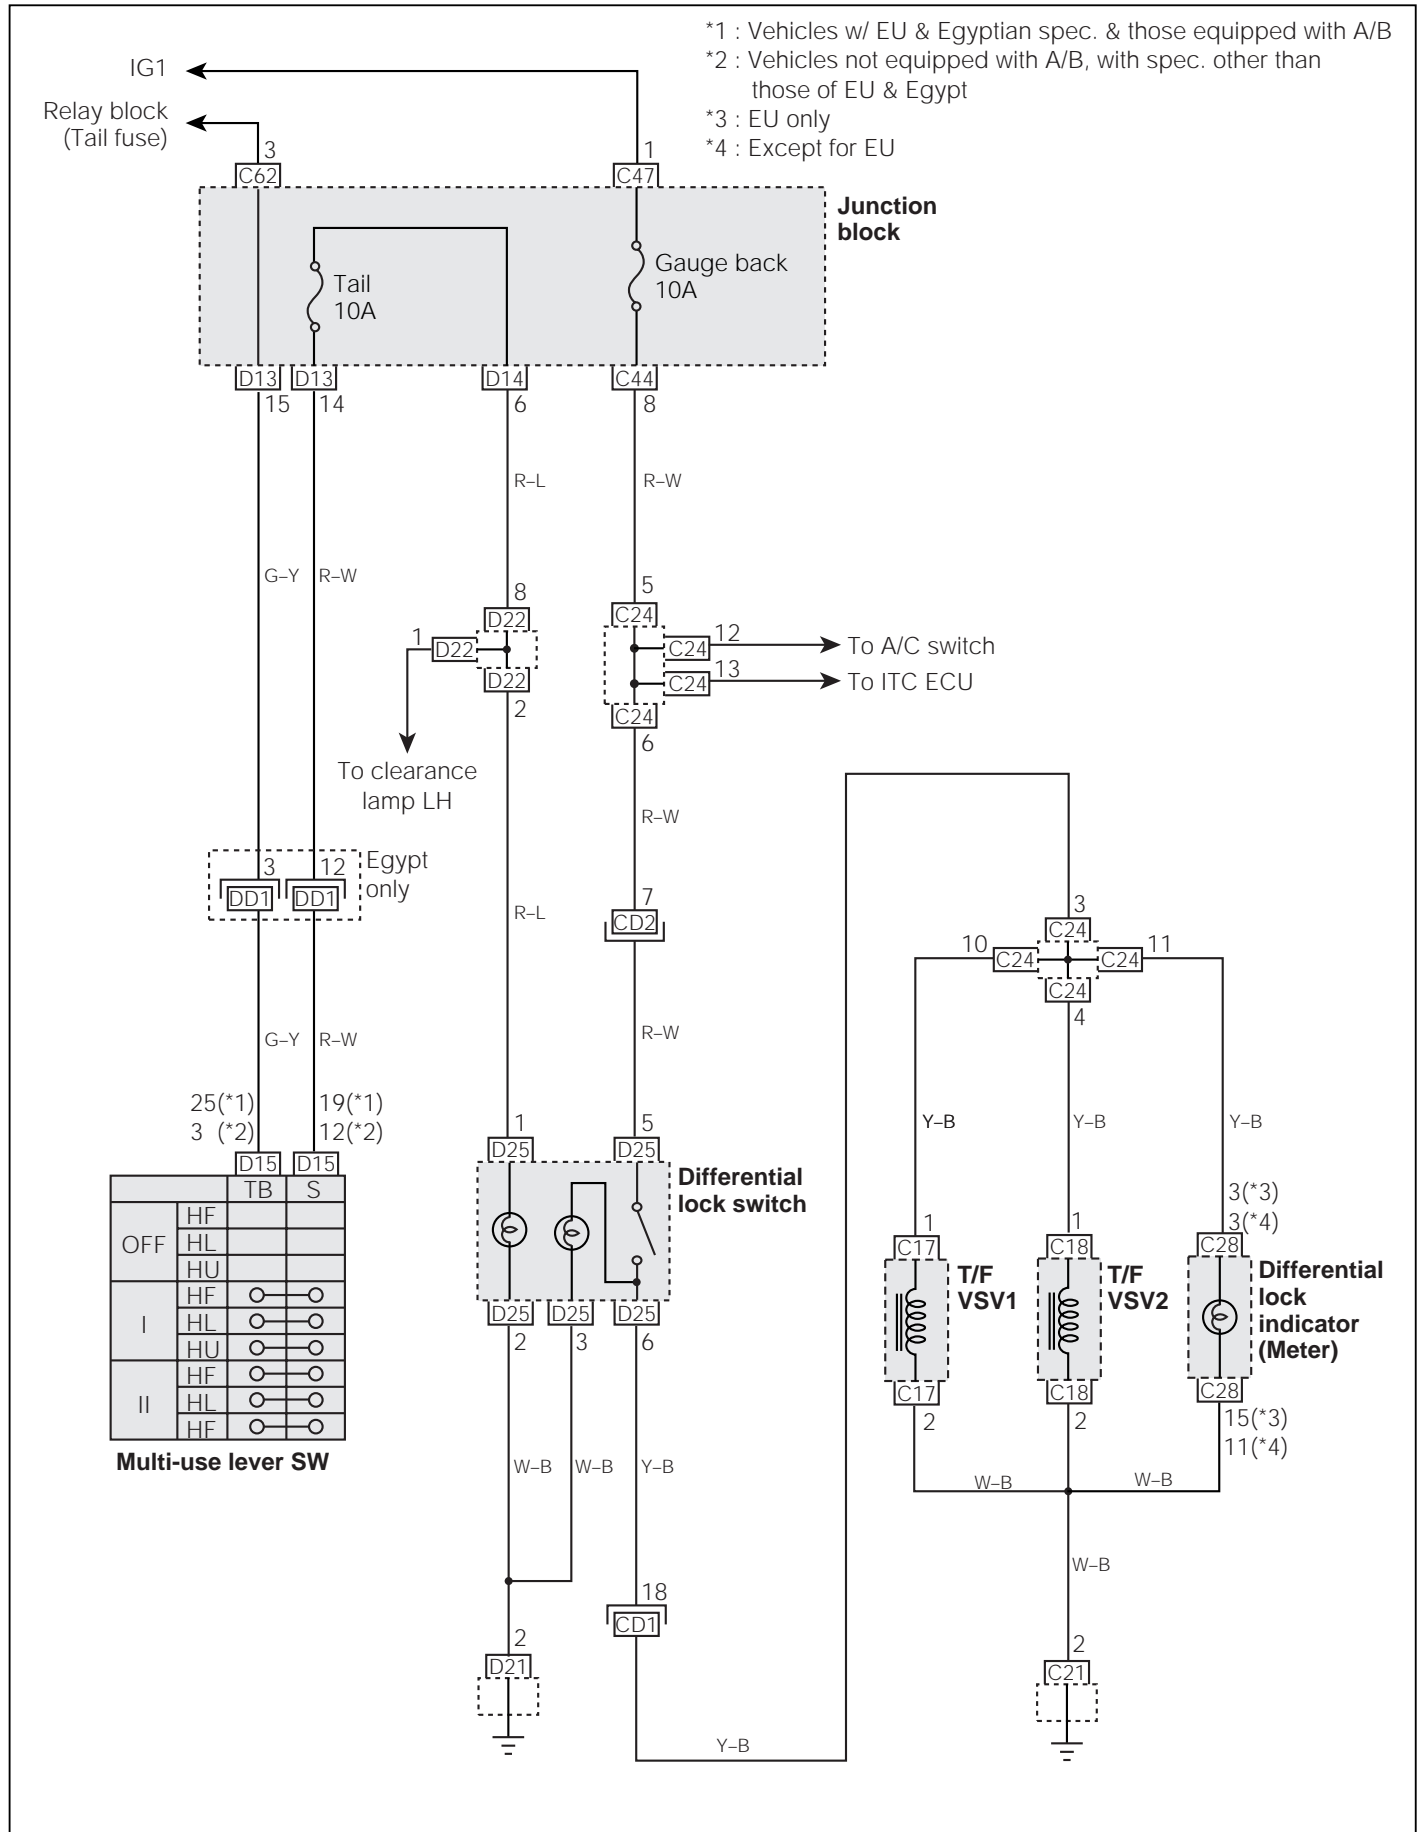


ABS SYSTEM (RHD)

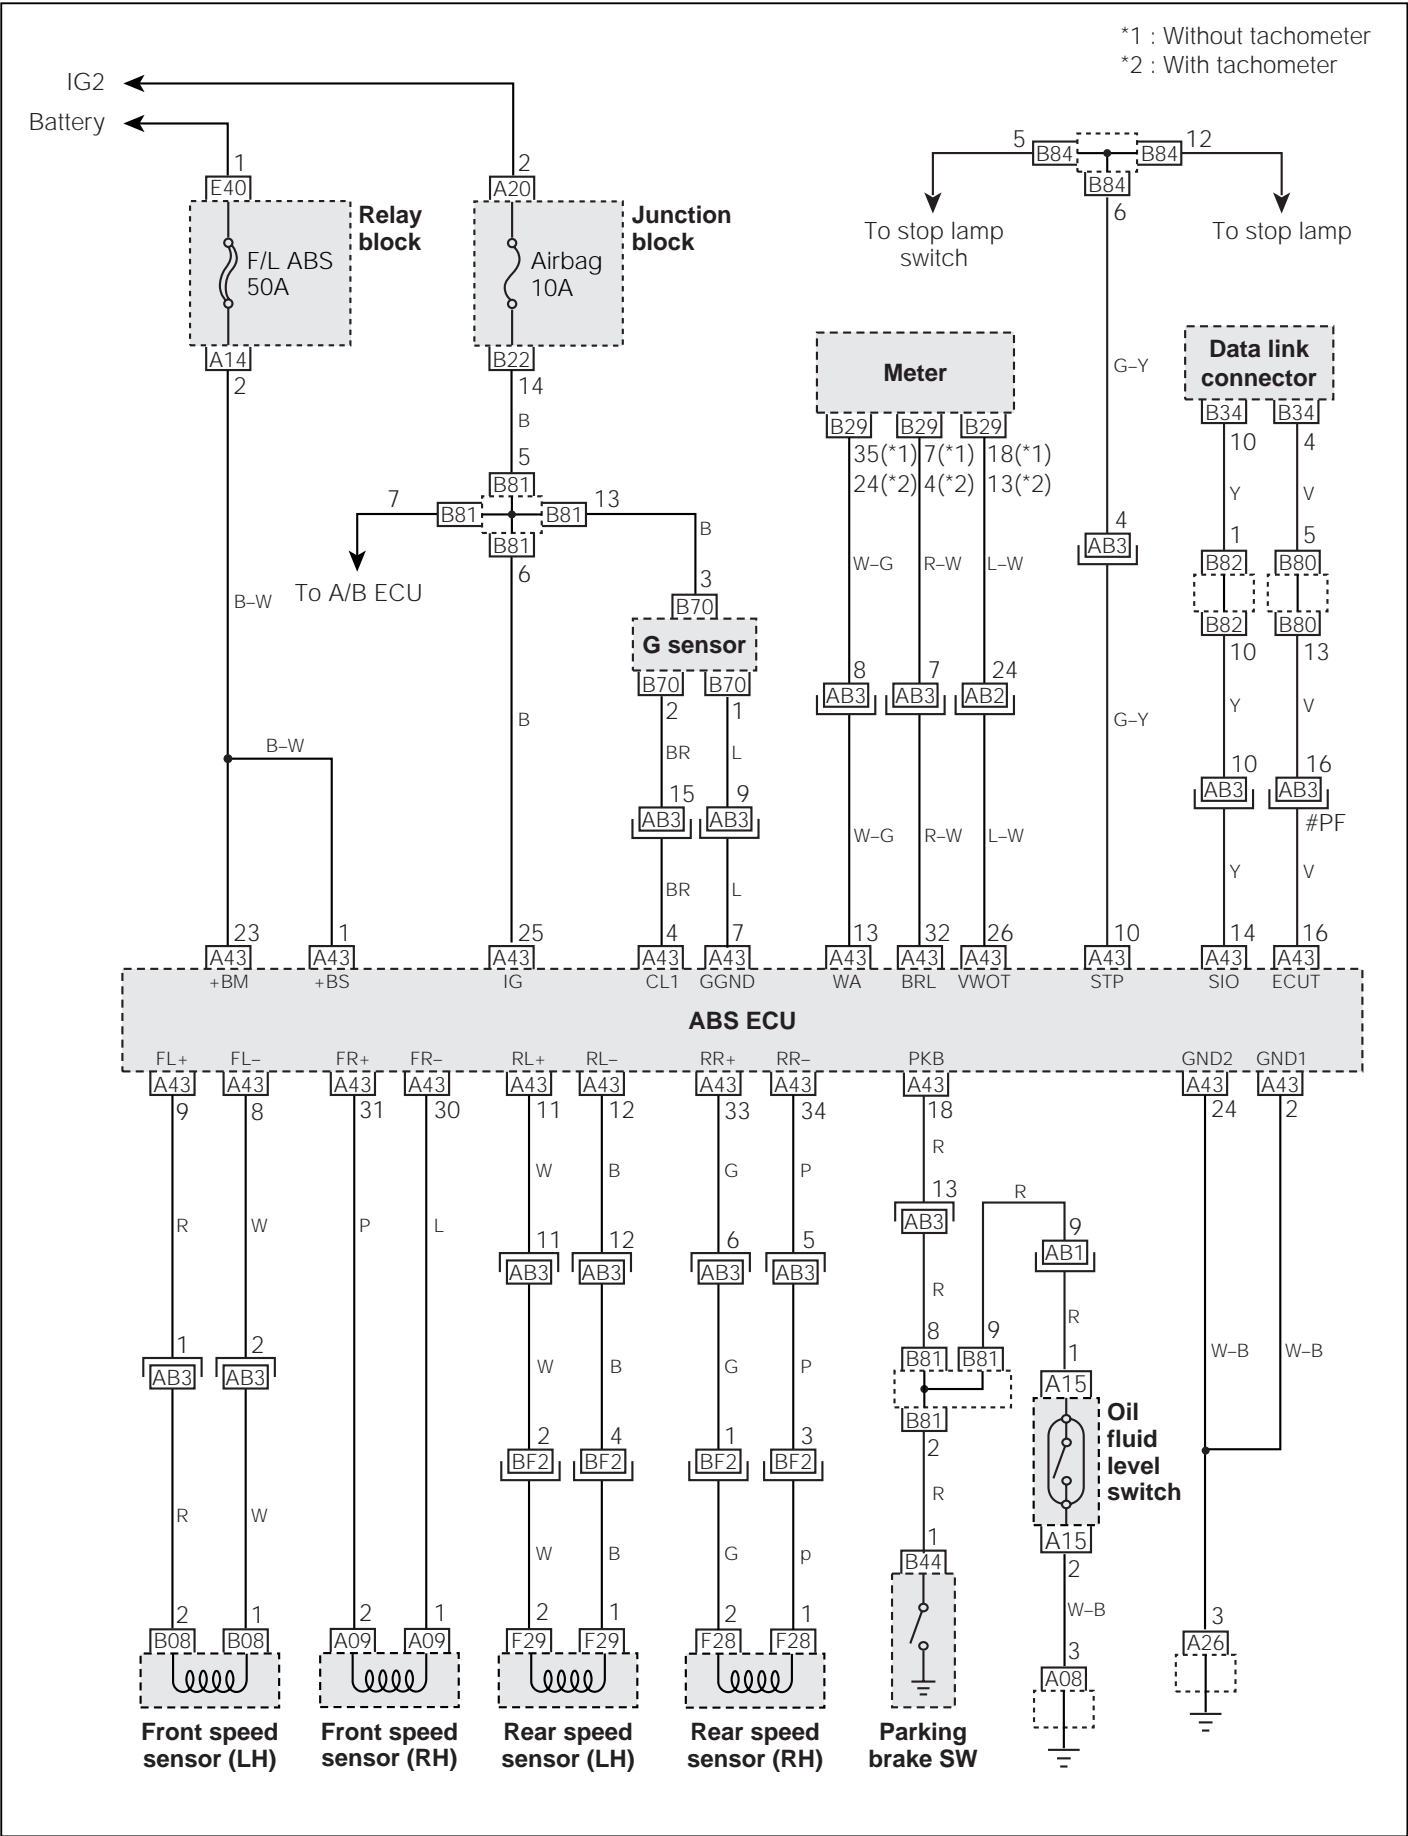




HW-40

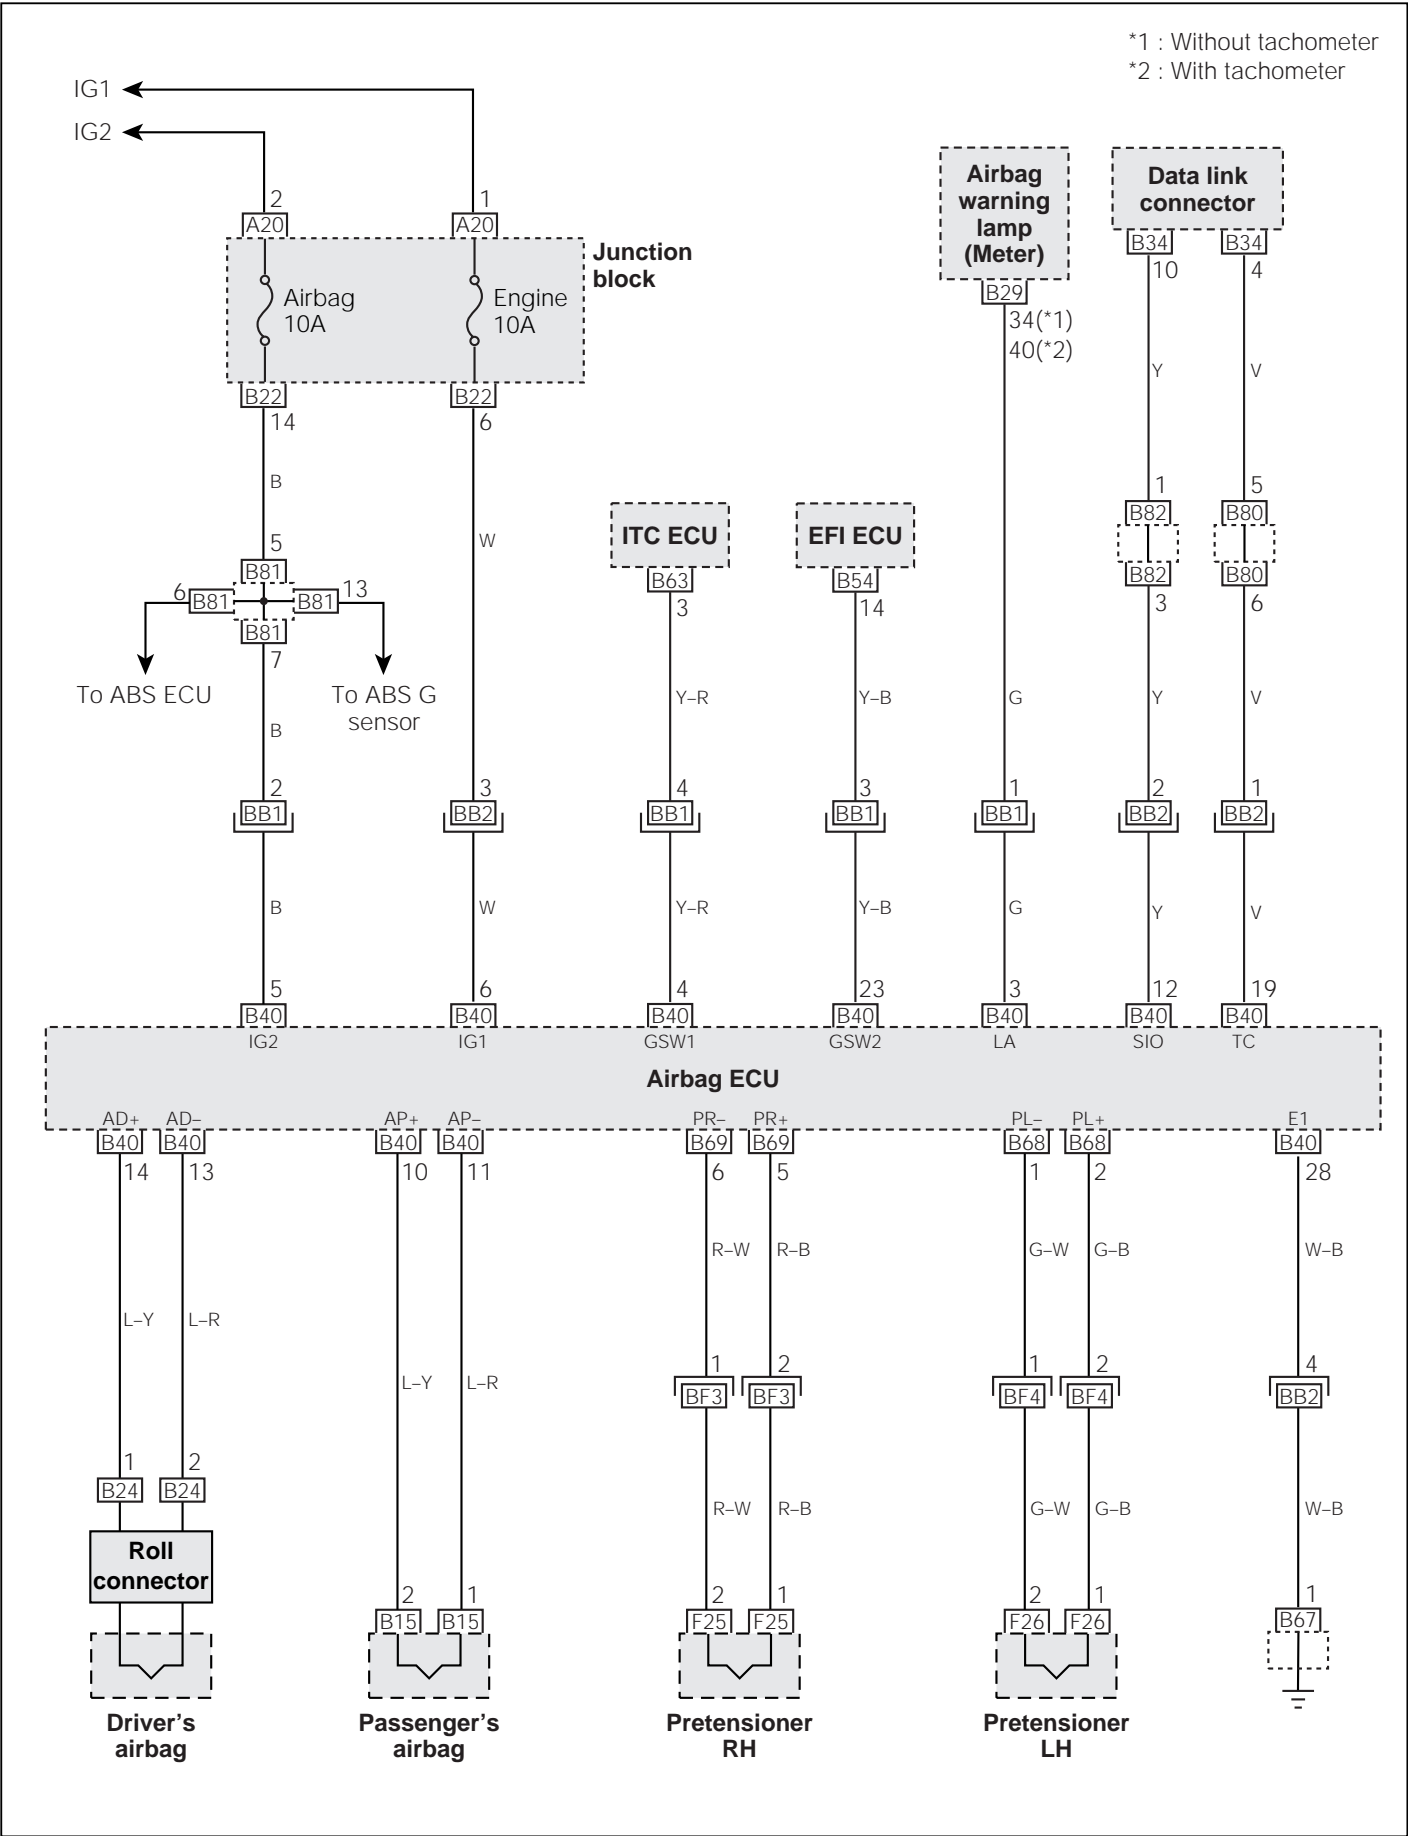SRS AIRBAG SYSTEM (RHD)




SRS AIRBAG SYSTEM (LHD)

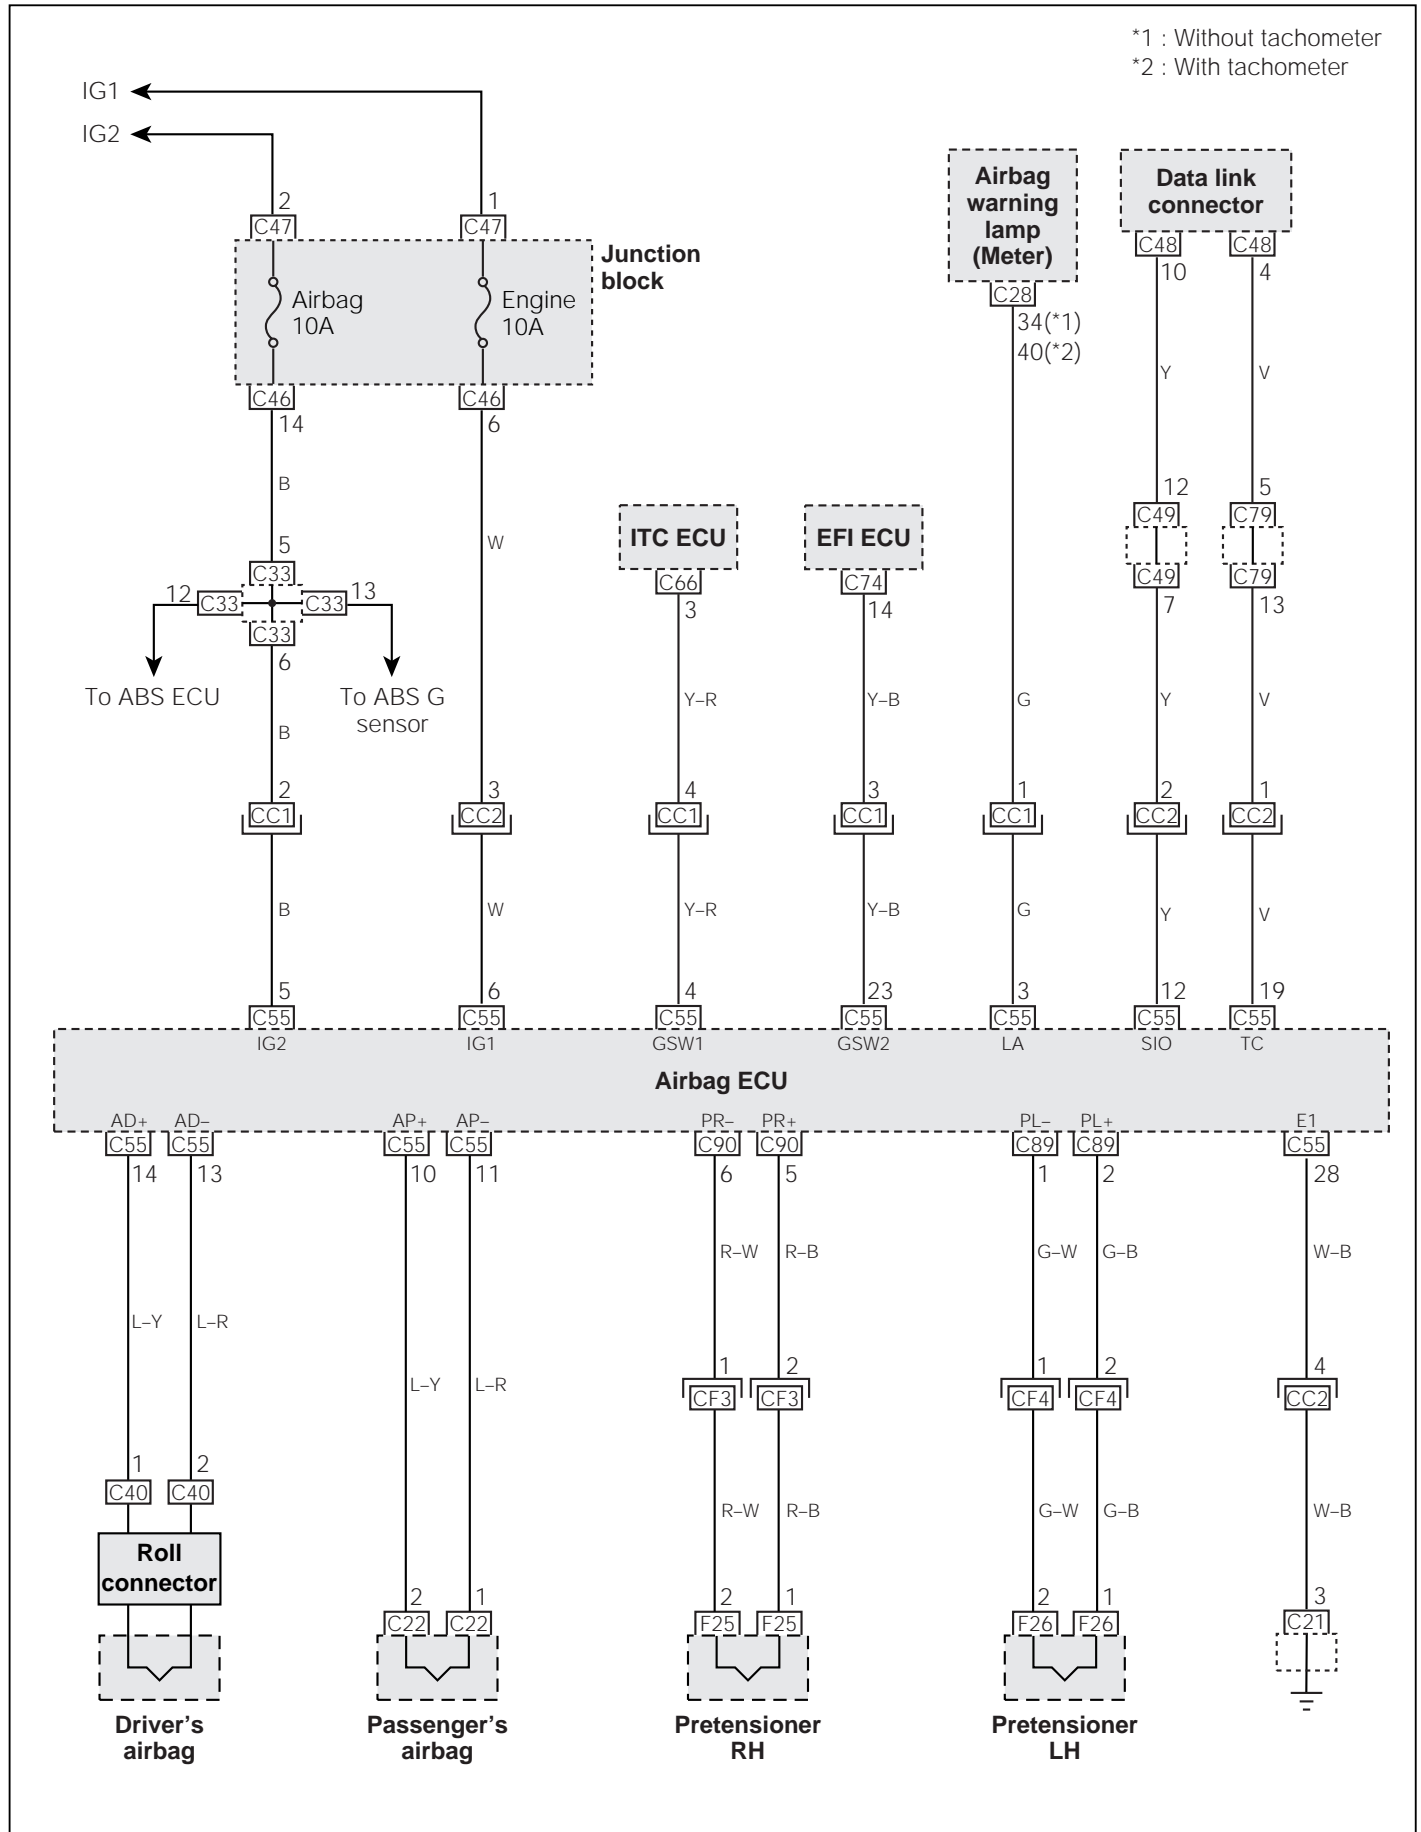


HW-42

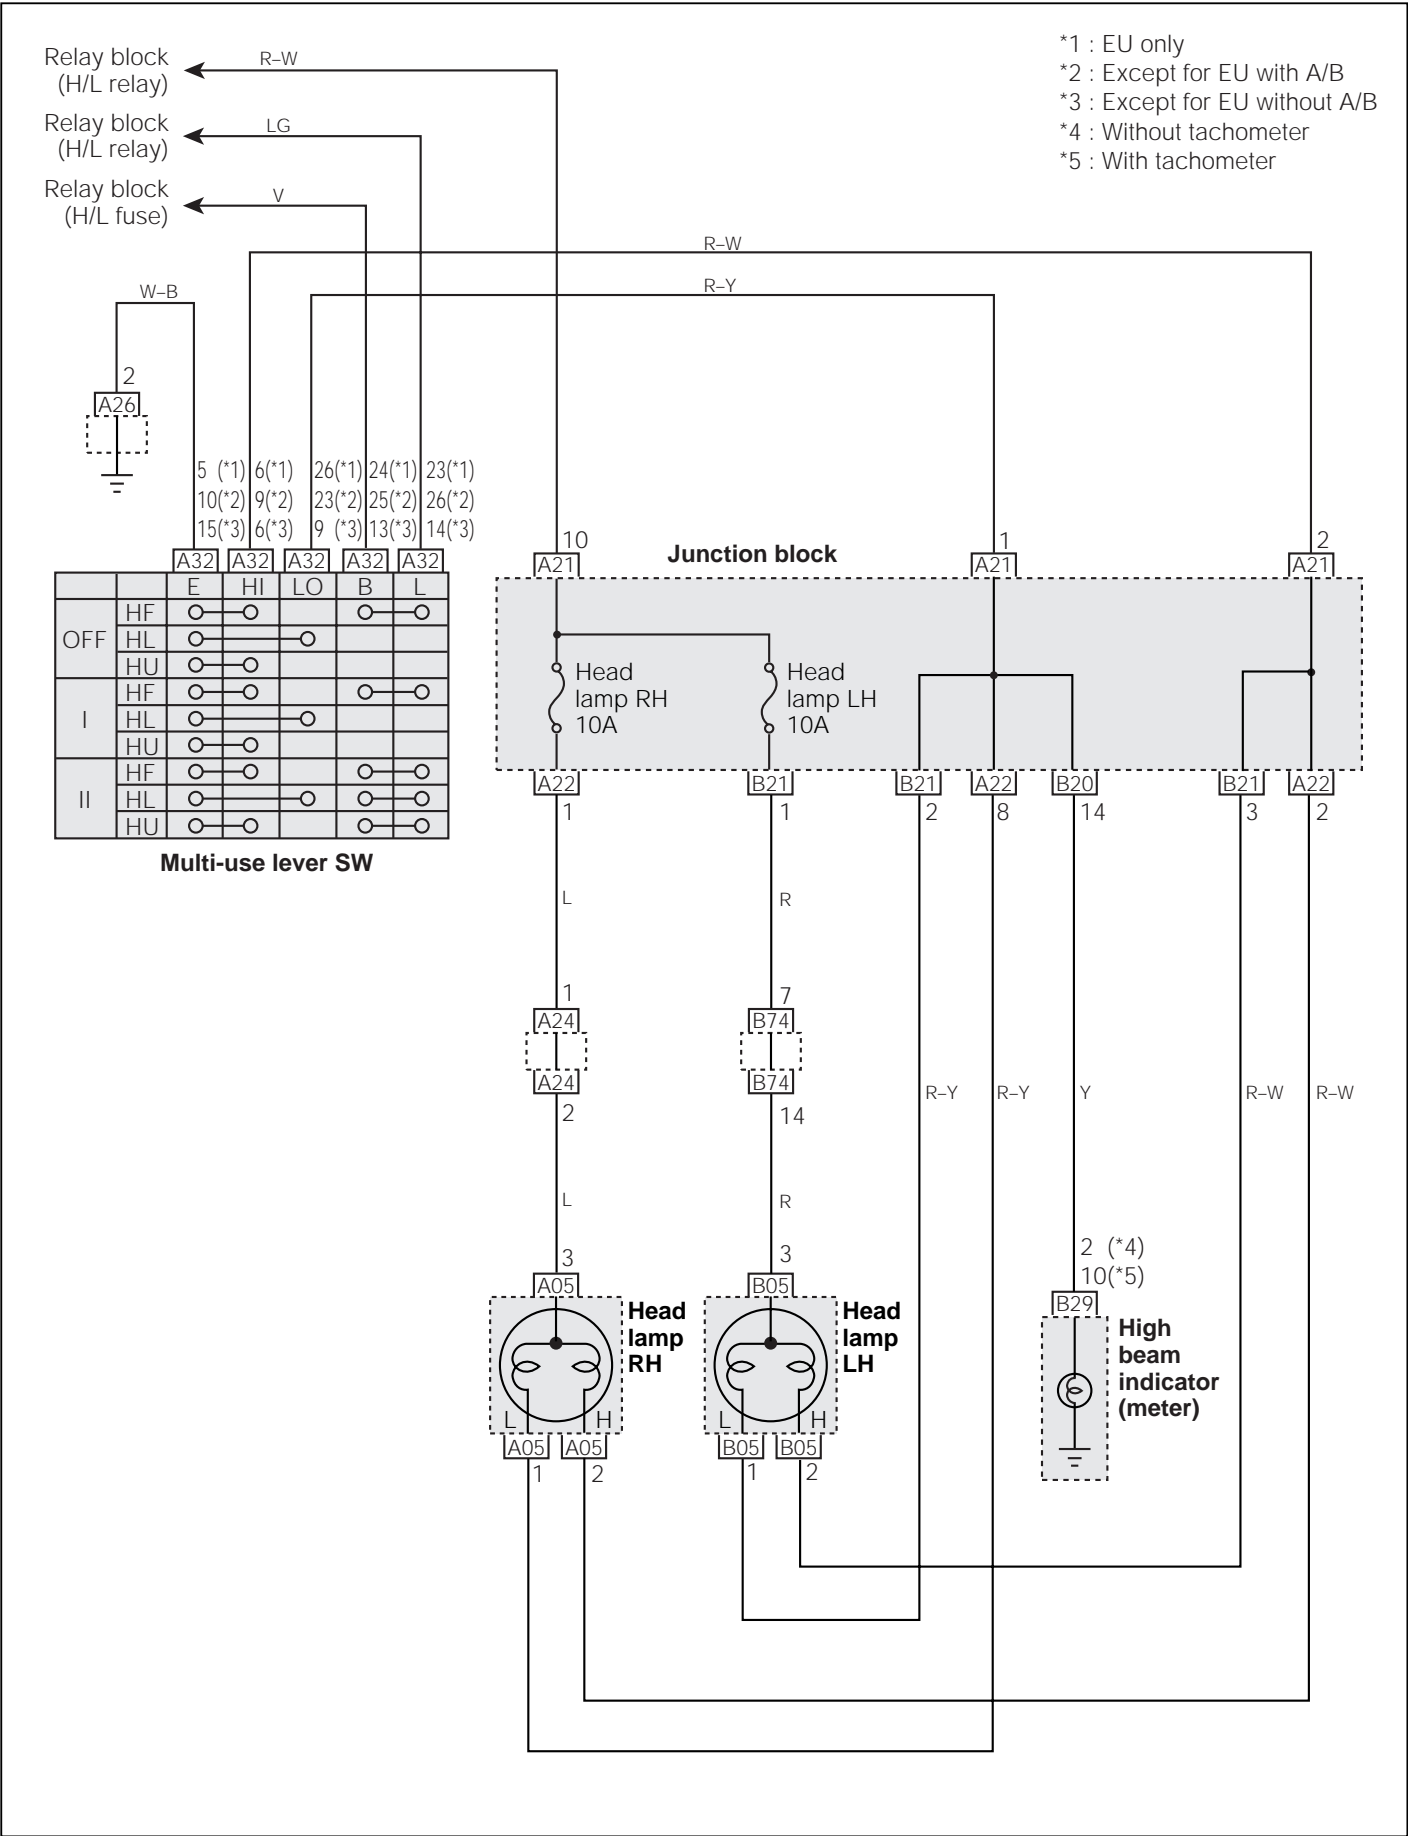HEAD LAMP (RHD)




HEAD LAMP (LHD / EGYPT ONLY)

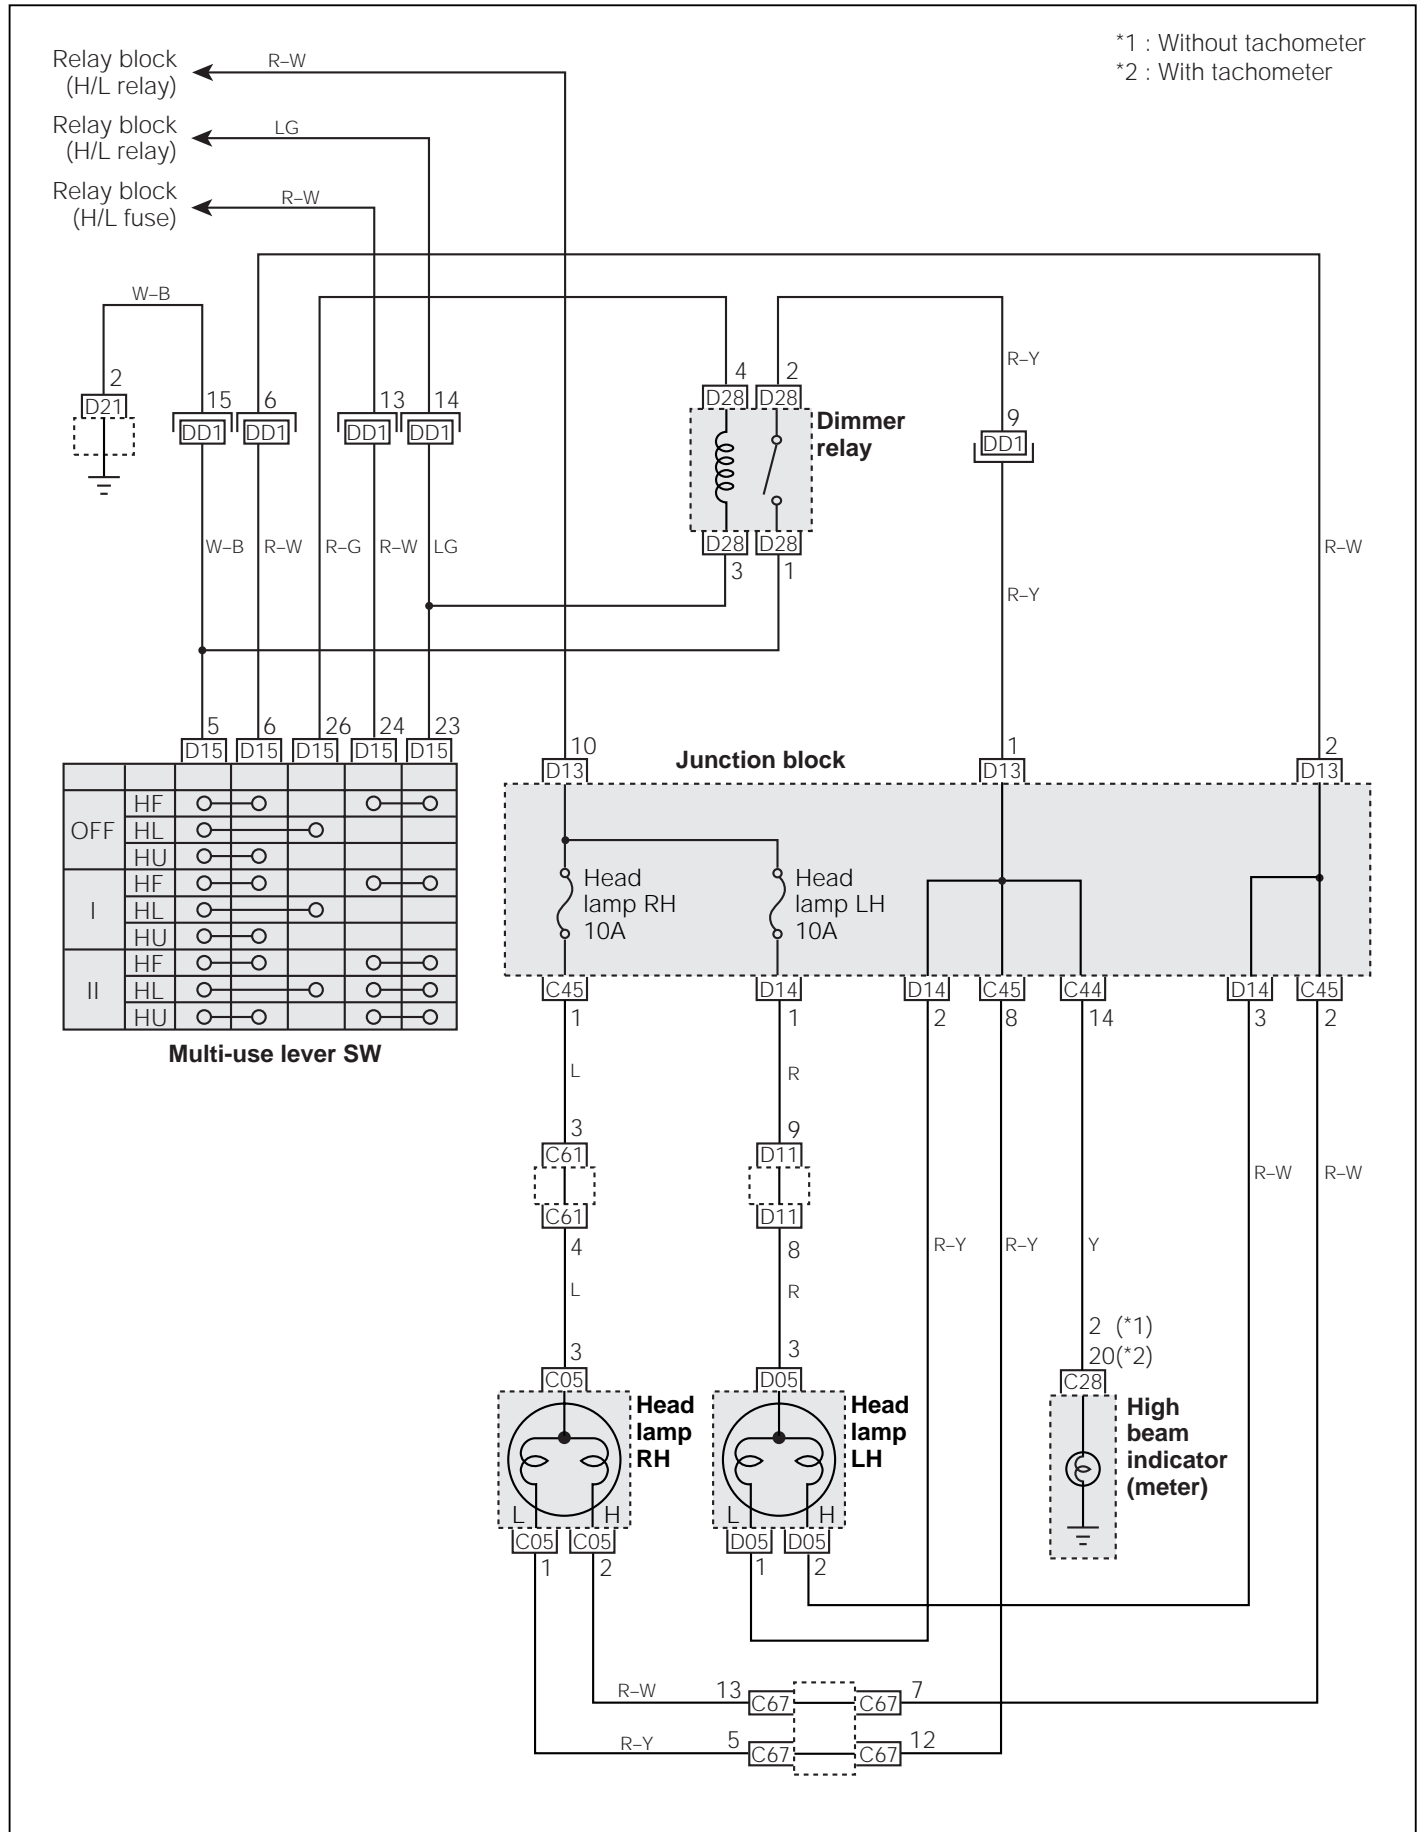

HW-44

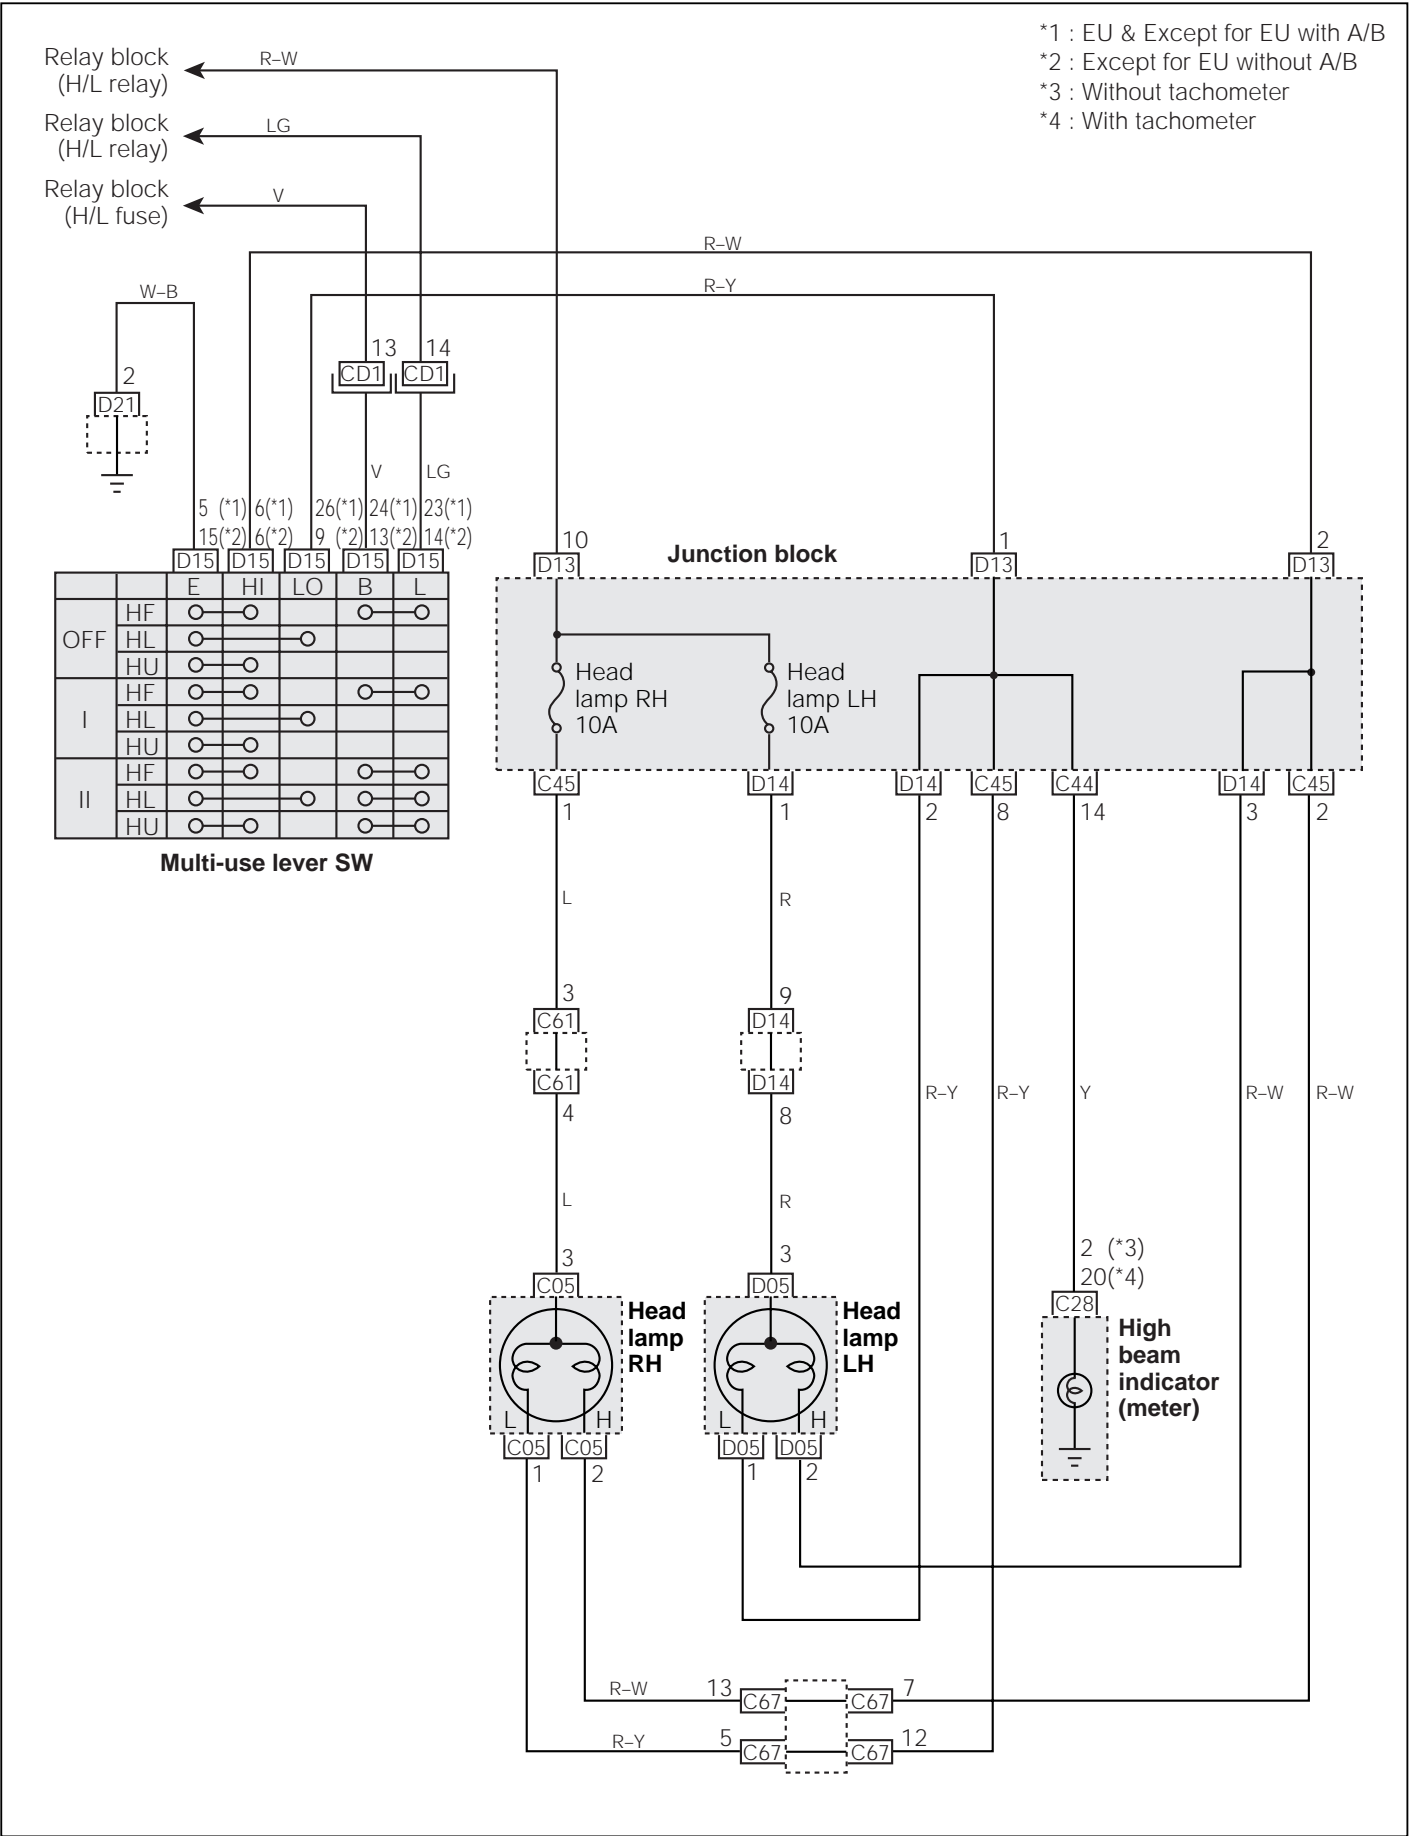HEAD LAMP (LHD / EXCEPT FOR EGYPT)




MEMO


Handwriting practice area with 25 horizontal dashed lines.

HW-46

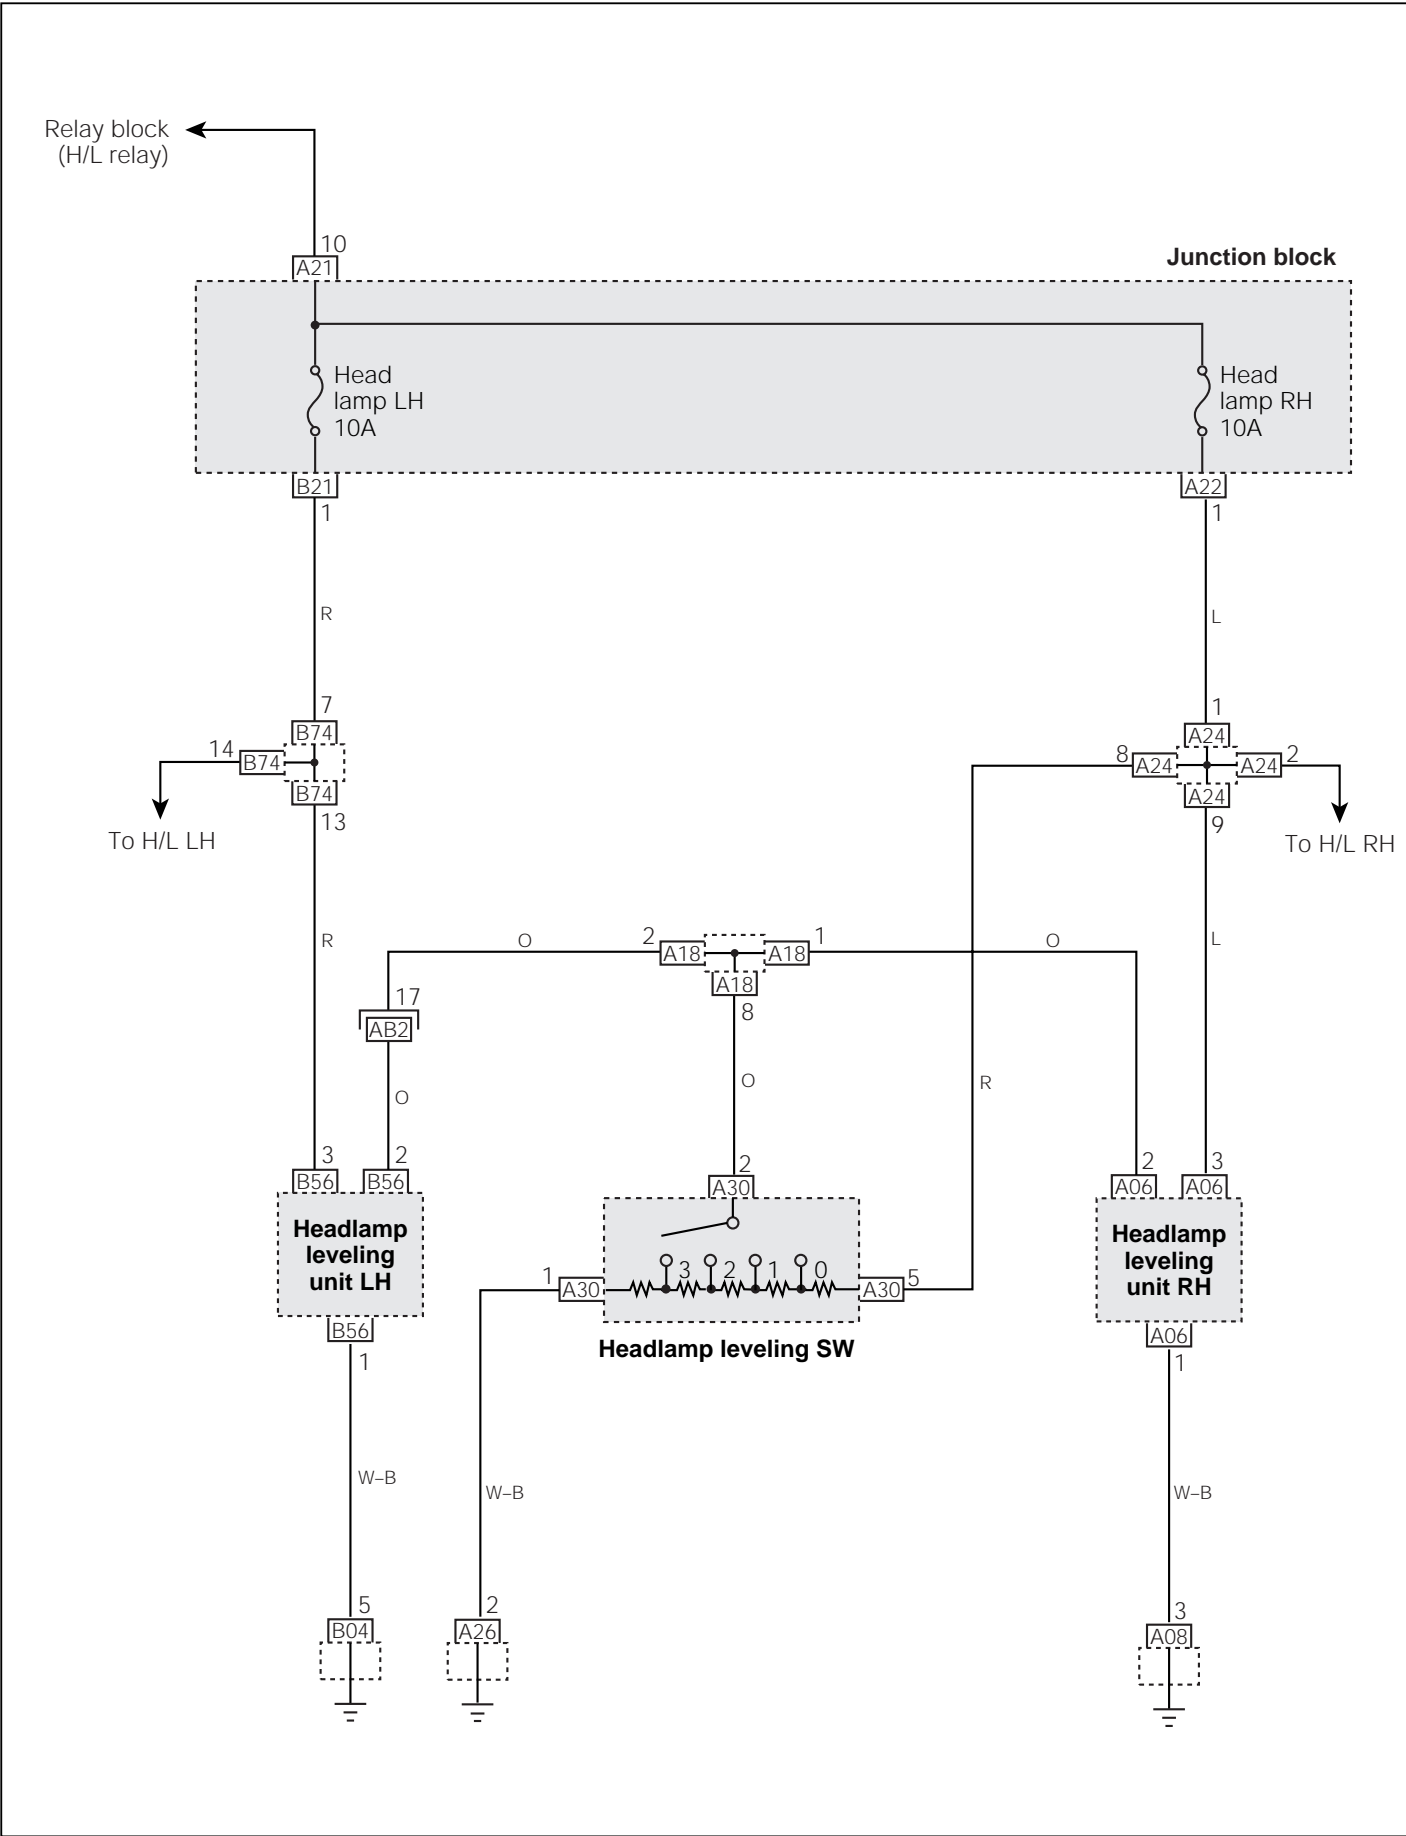HEAD LAMP LEVELING SYSTEM (RHD)





HEAD LAMP LEVELING SYSTEM (LHD)

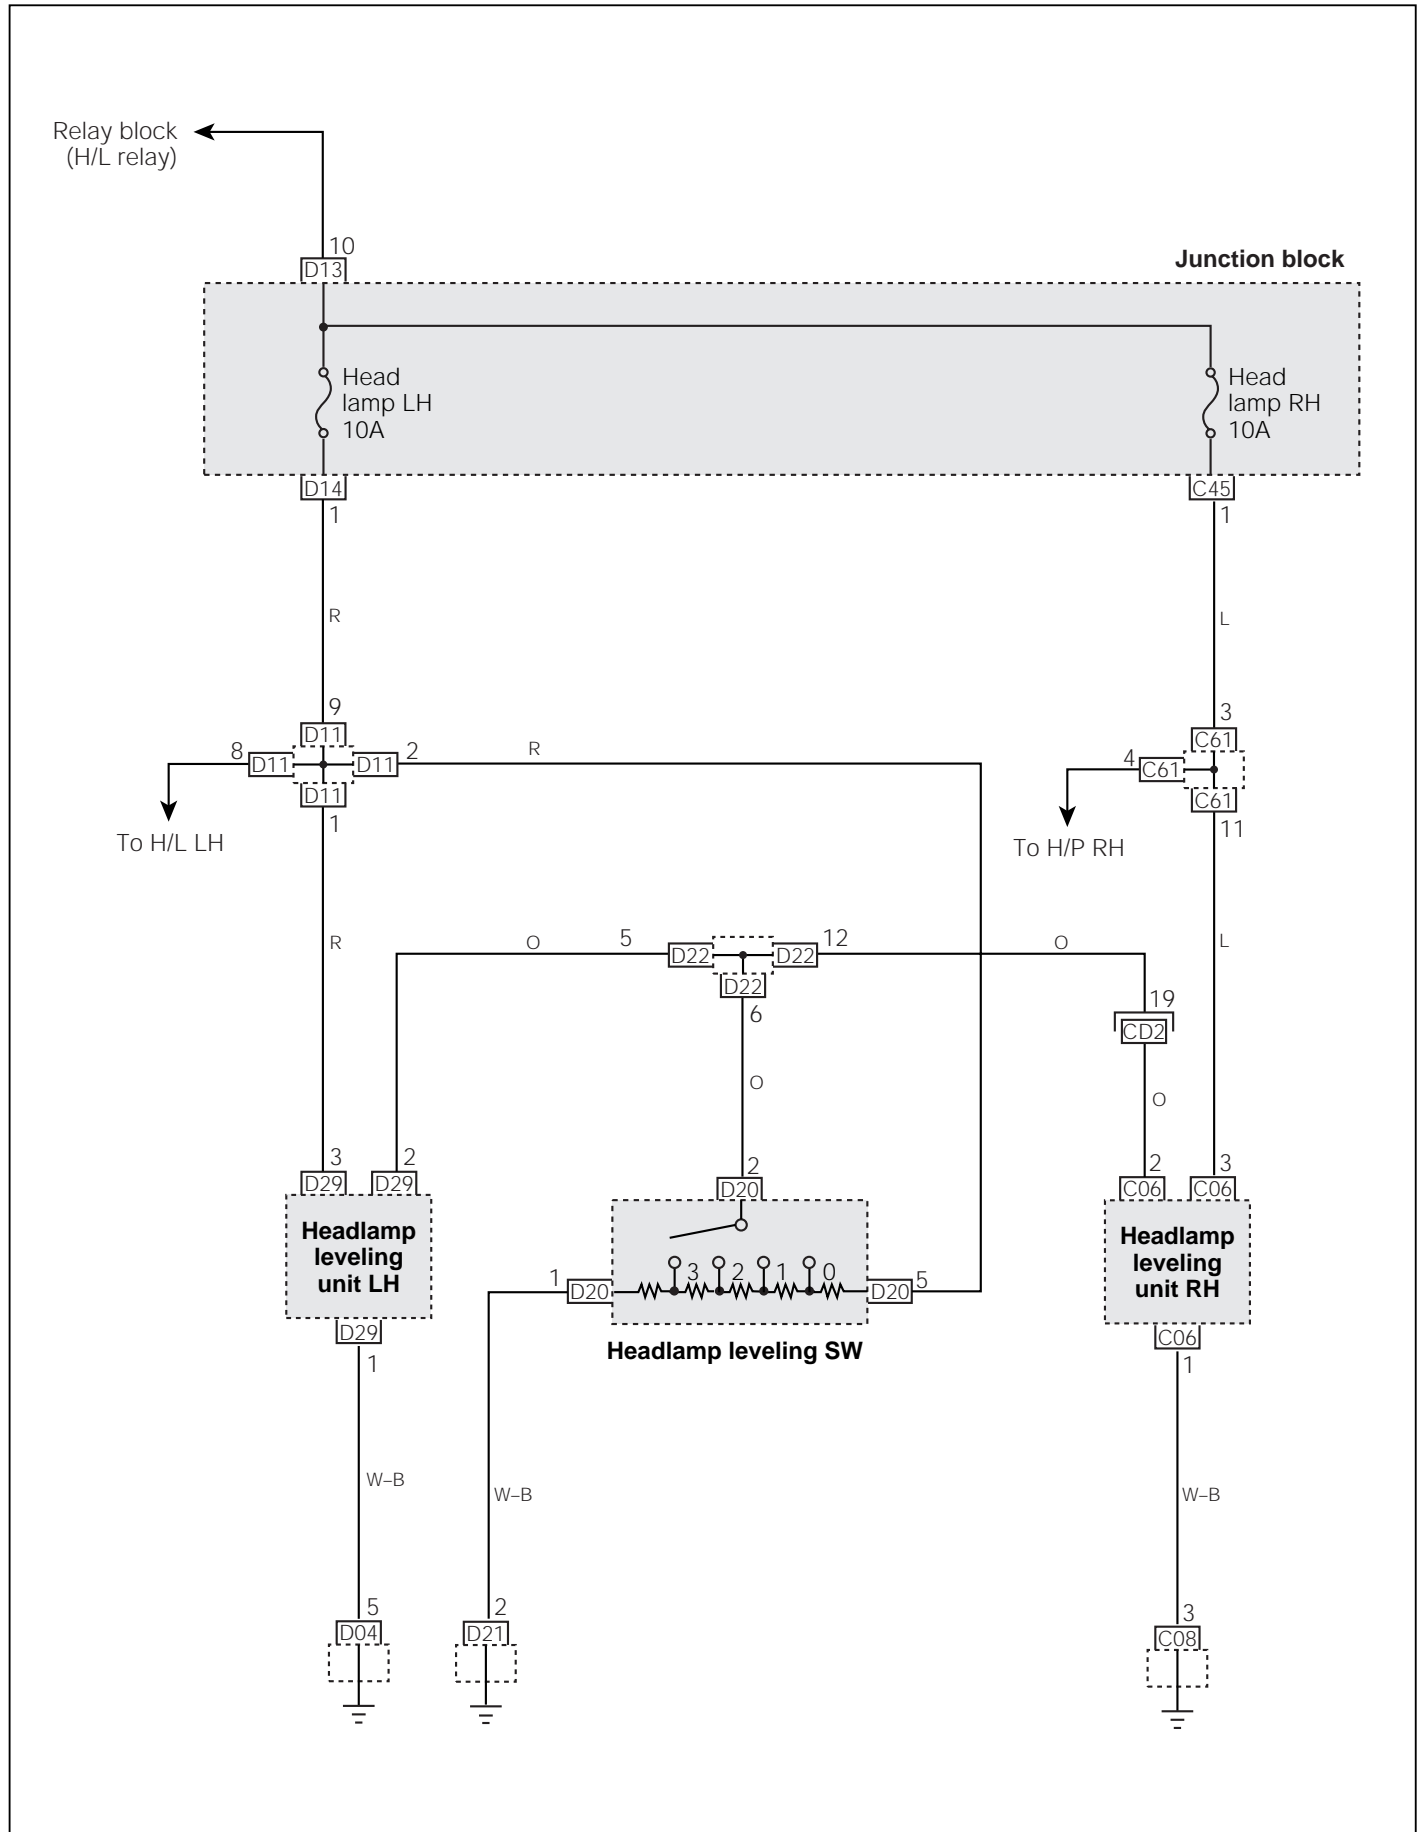

HW-48

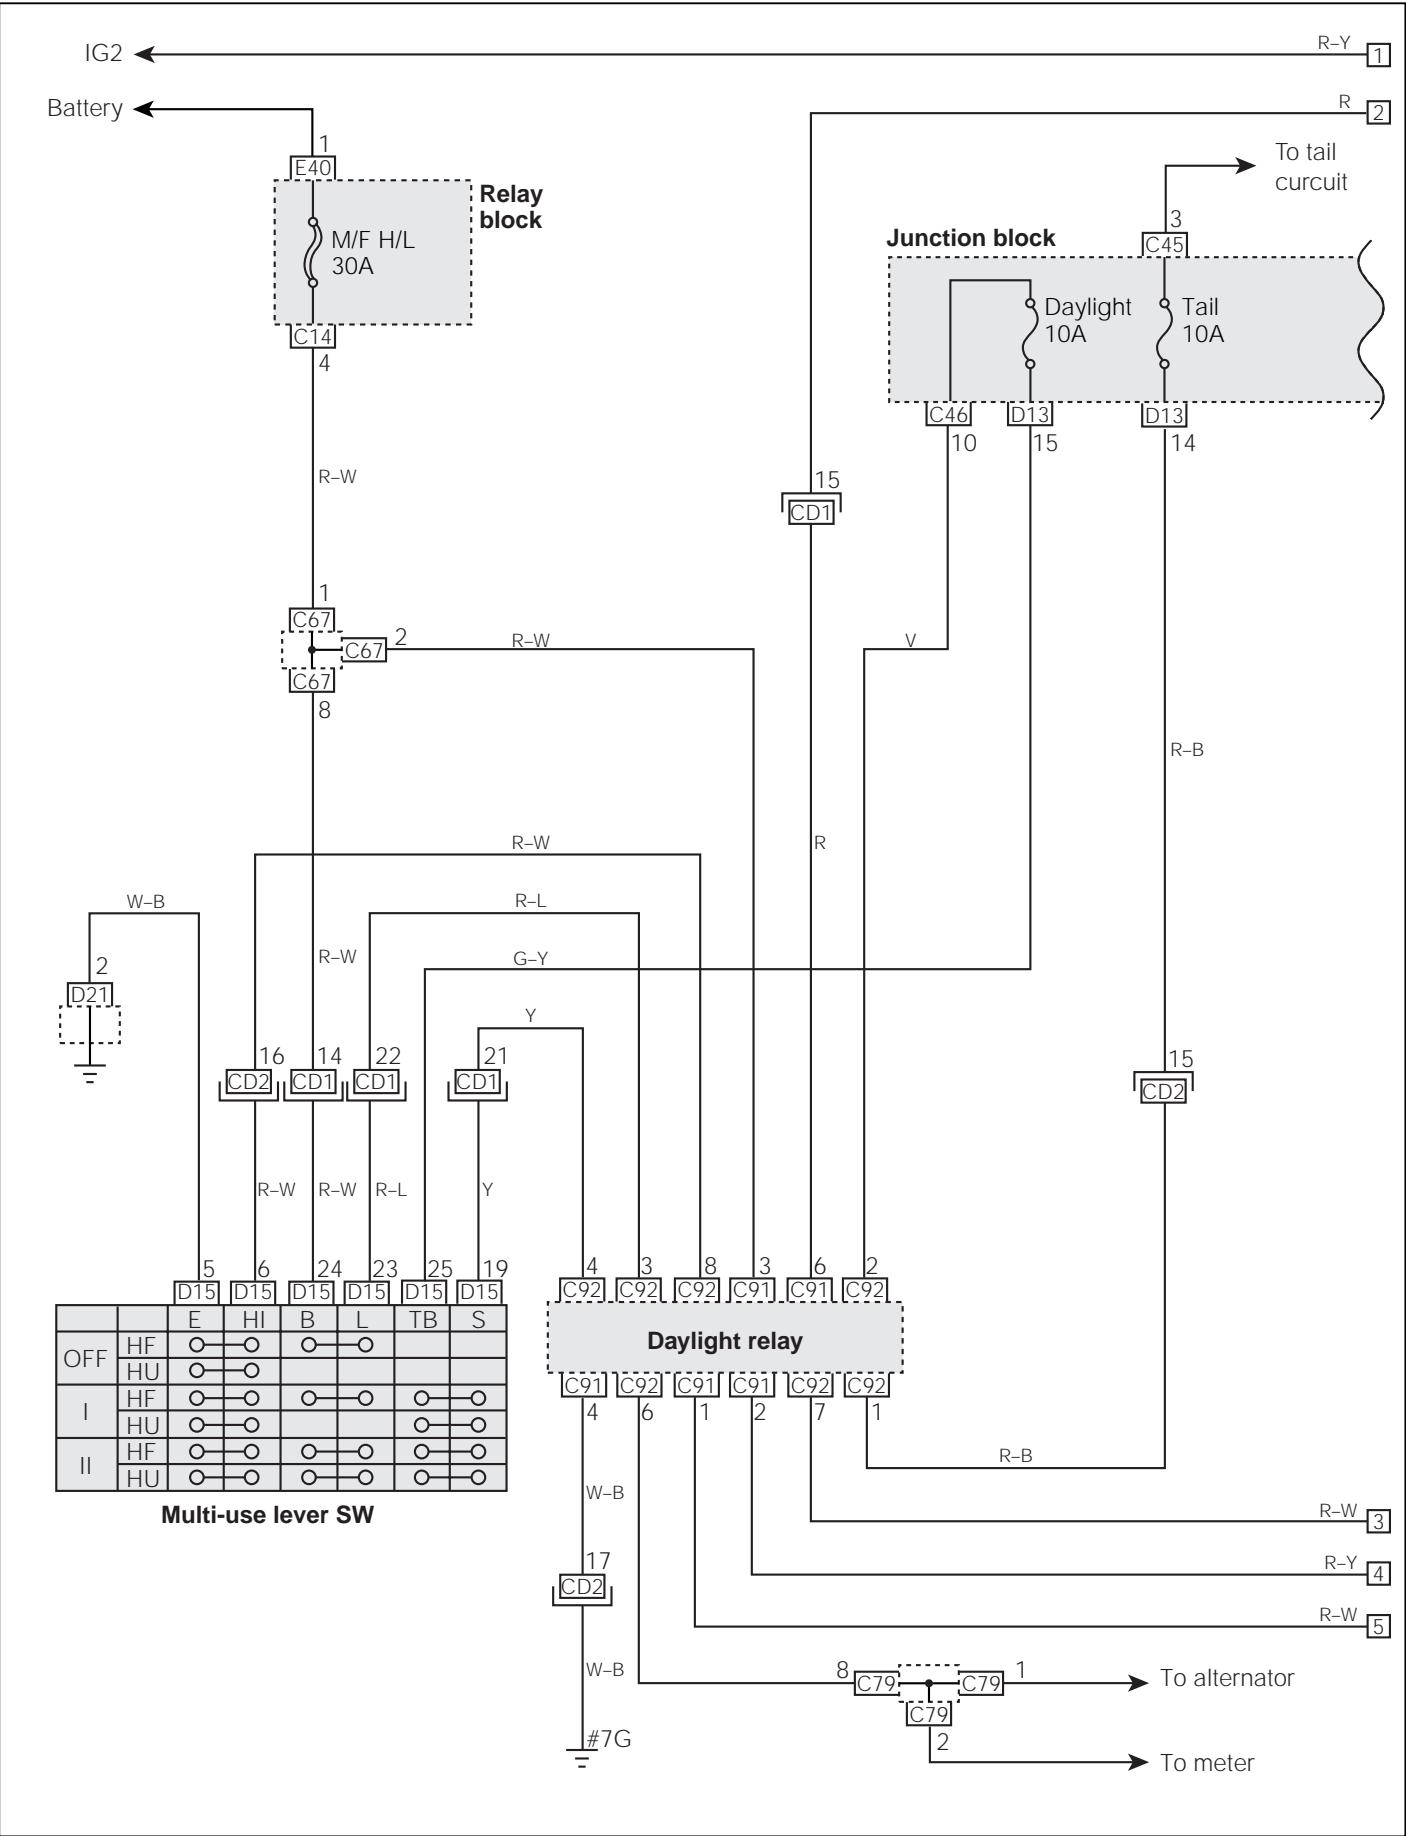 
DAY-LIGHT SYSTEM (LHD)






HW-50

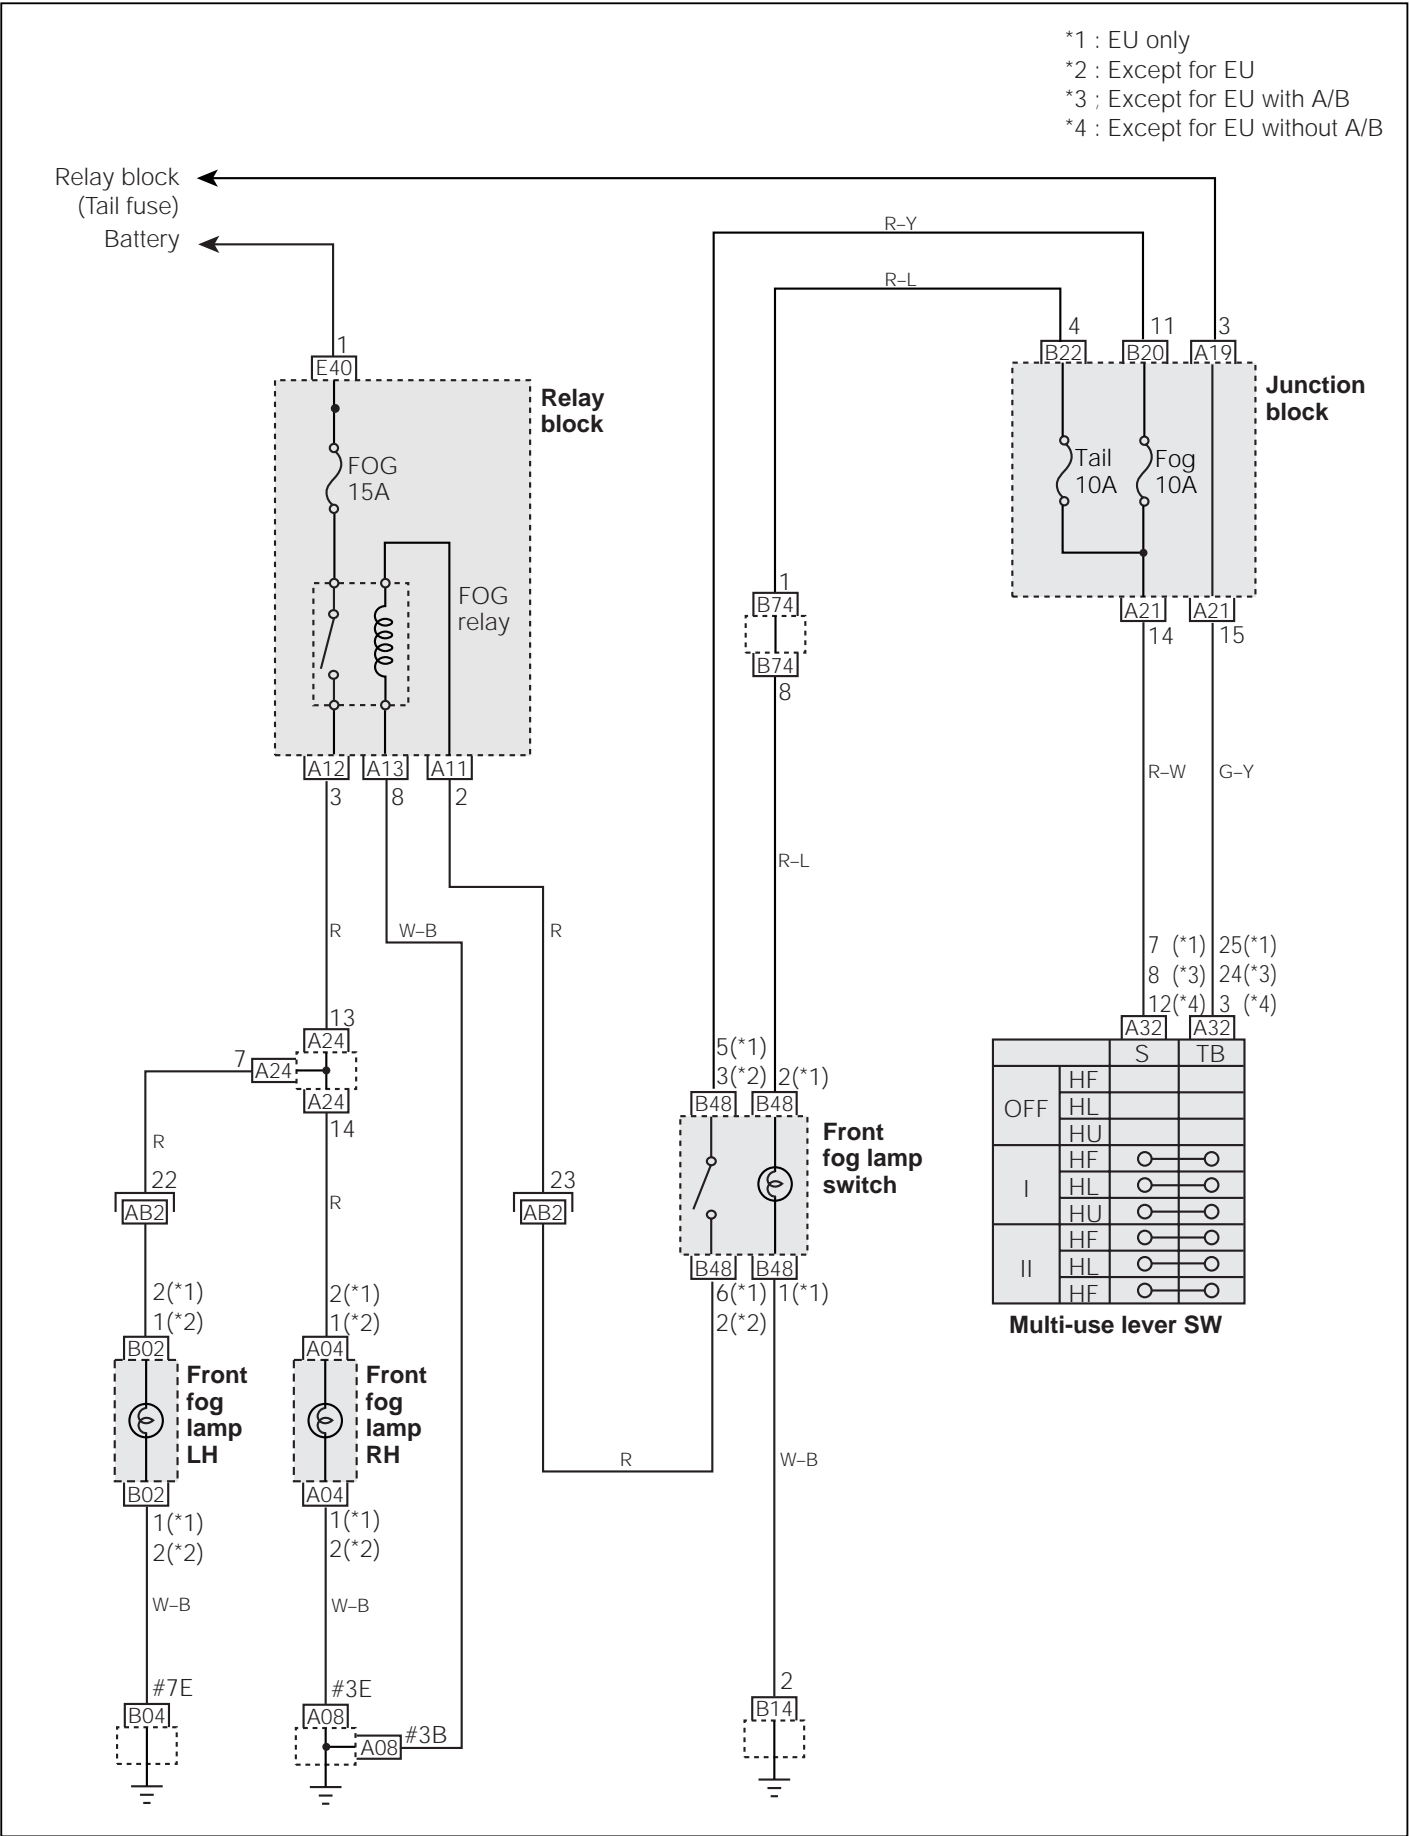
FRONT FOG LAMP (RHD)




FRONT FOG LAMP (LHD)

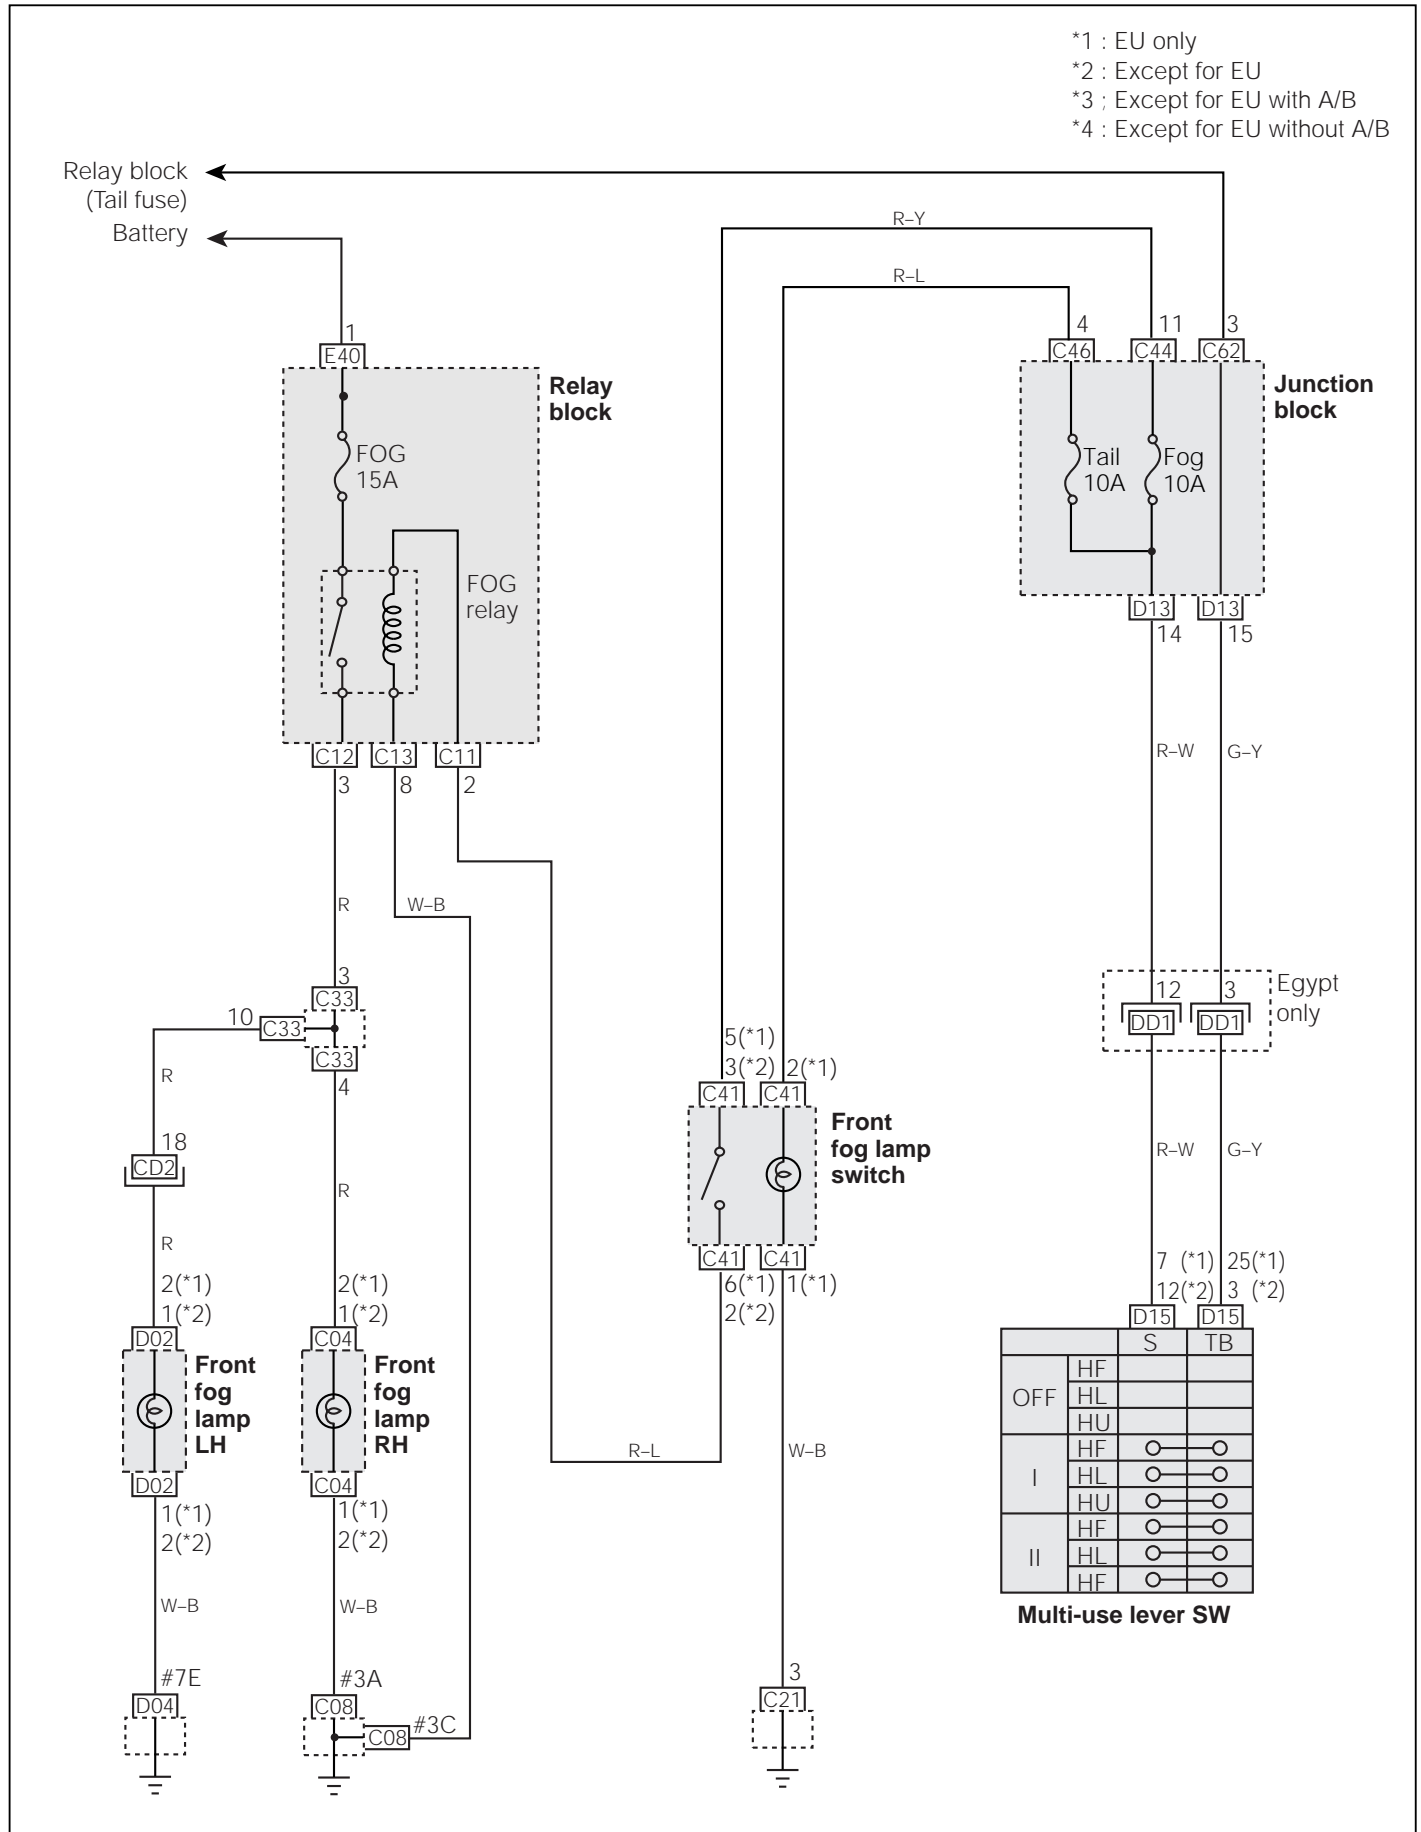


REAR FOG LAMP (RHD)

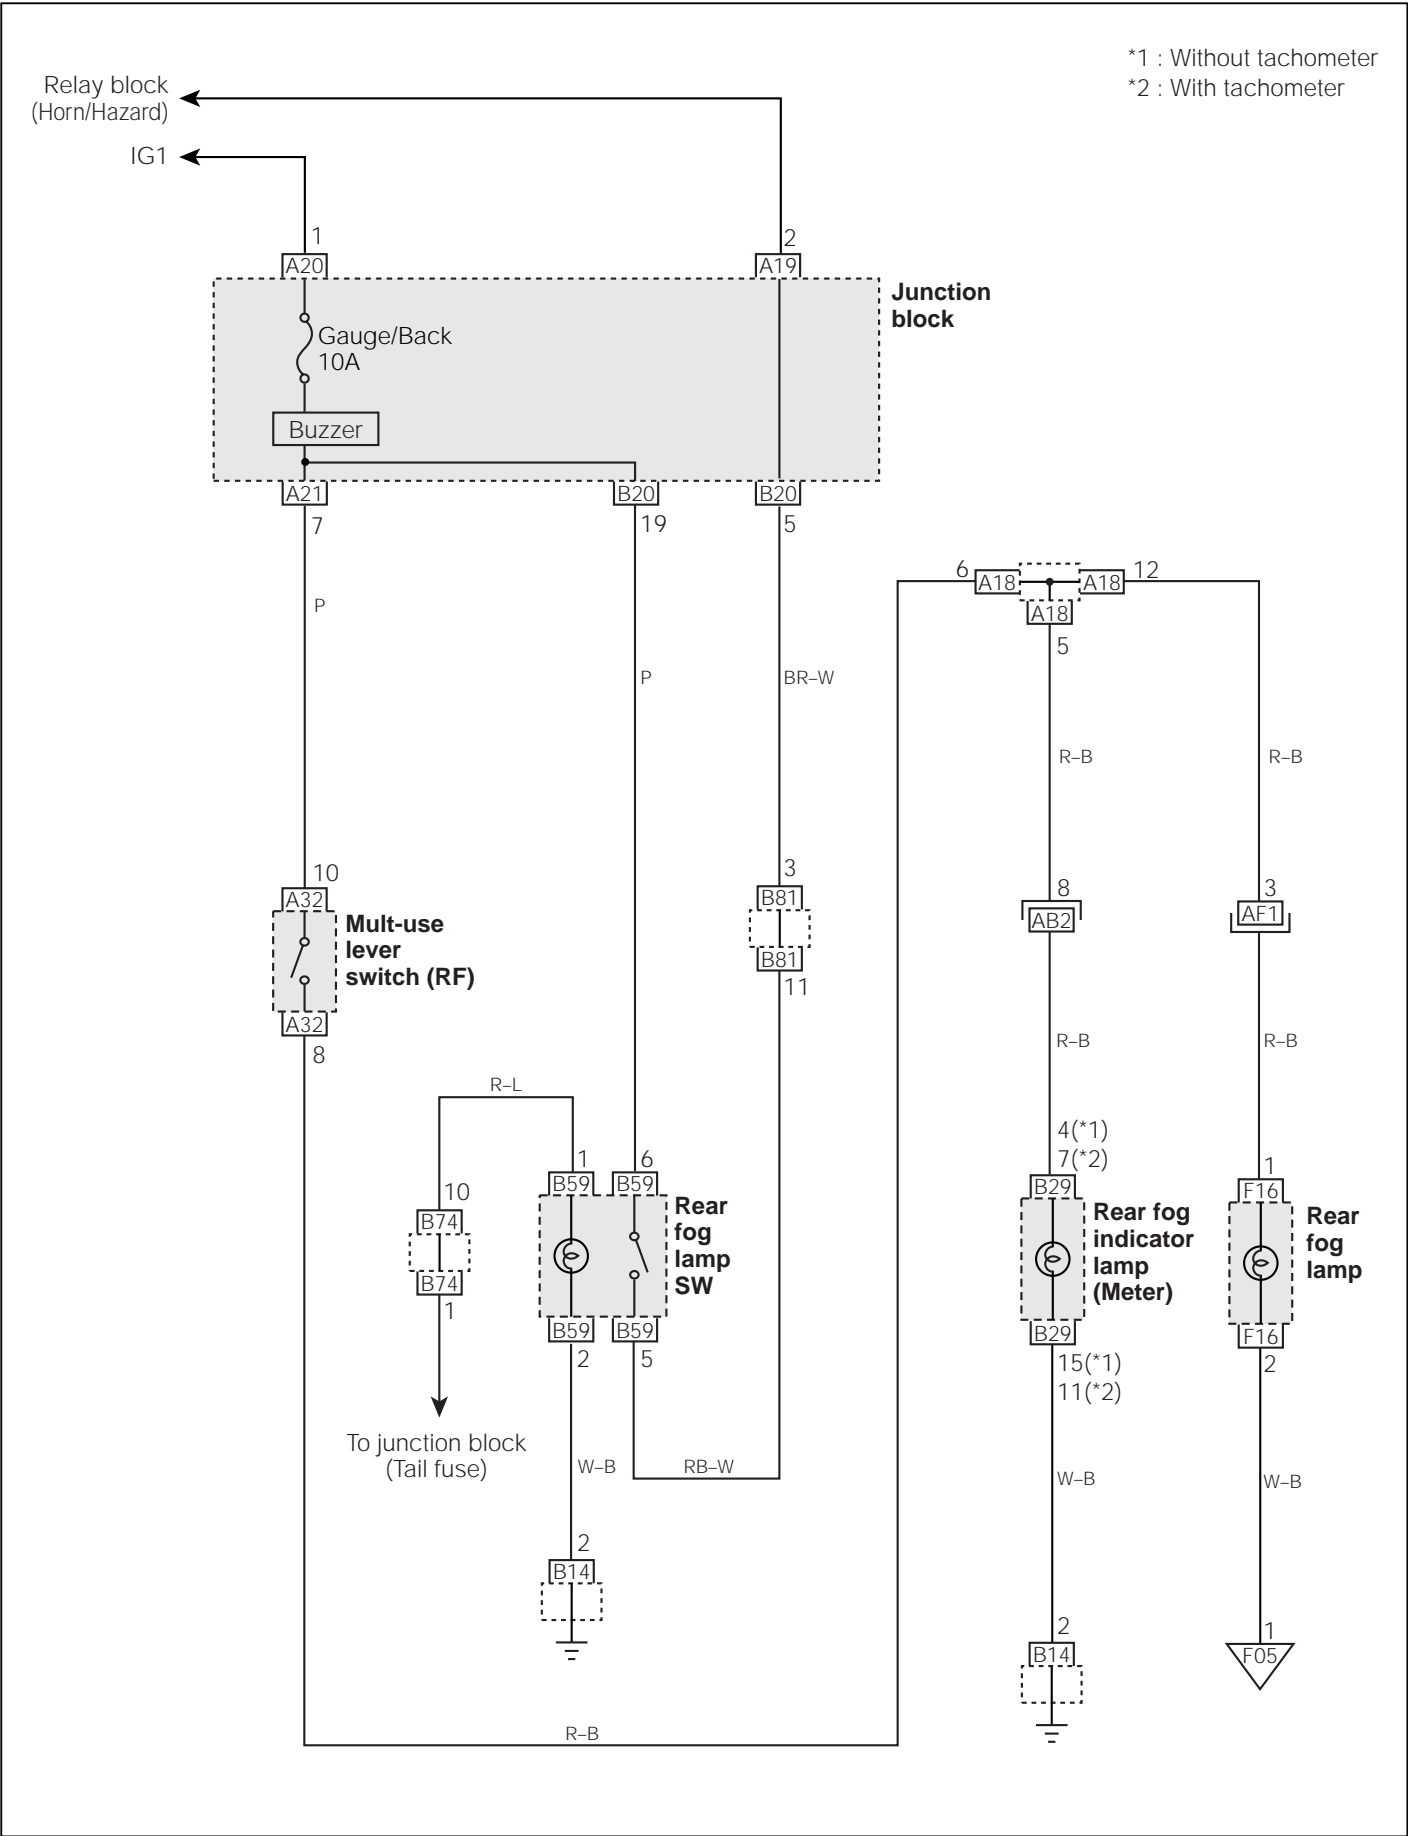


REAR FOG LAMP (LHD)

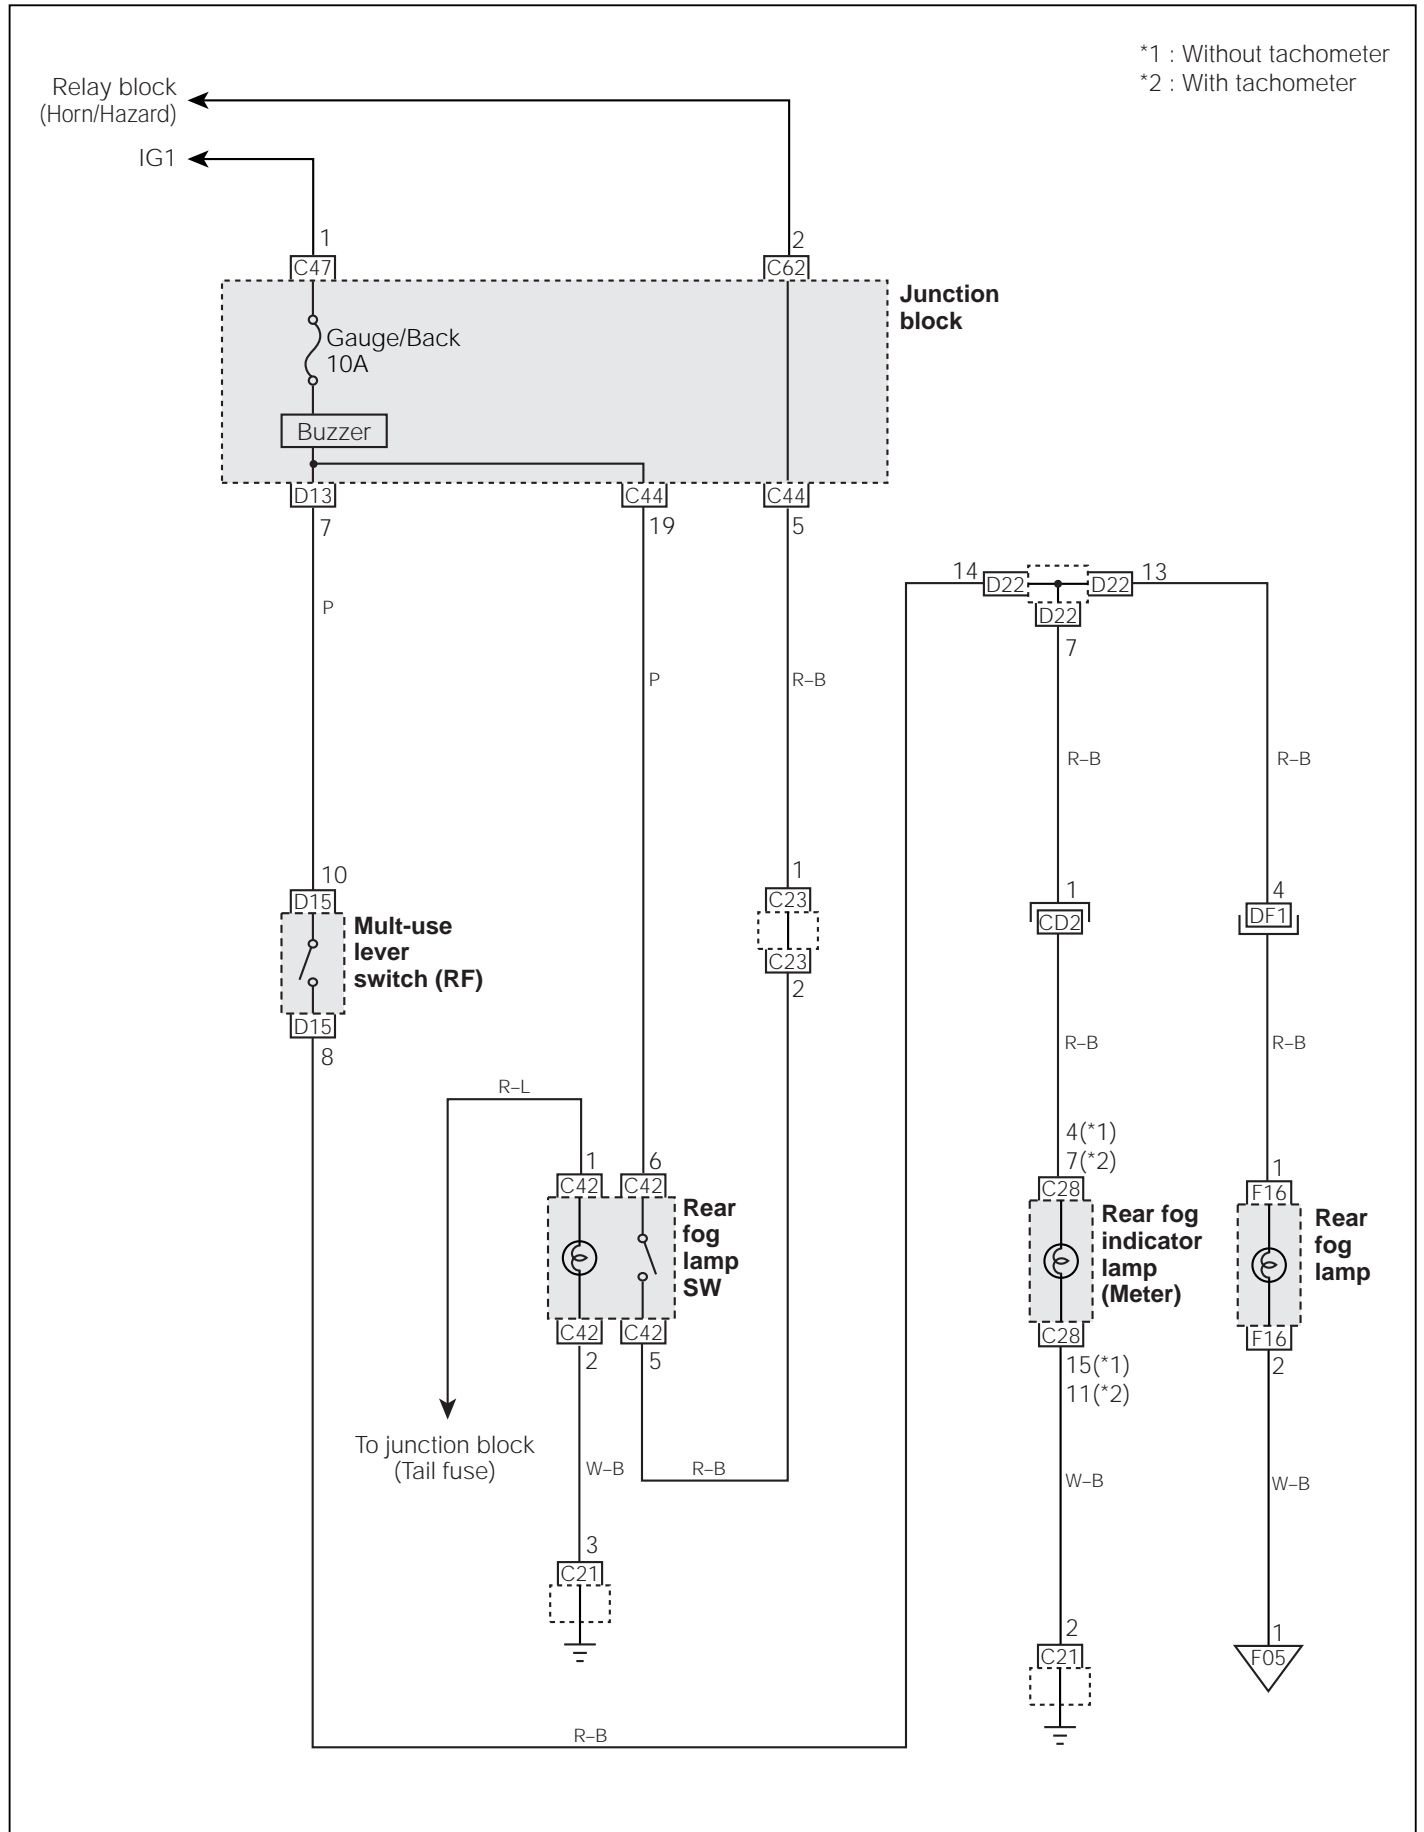

TAIL & LICENSE PLATE LAMP (RHD) -1

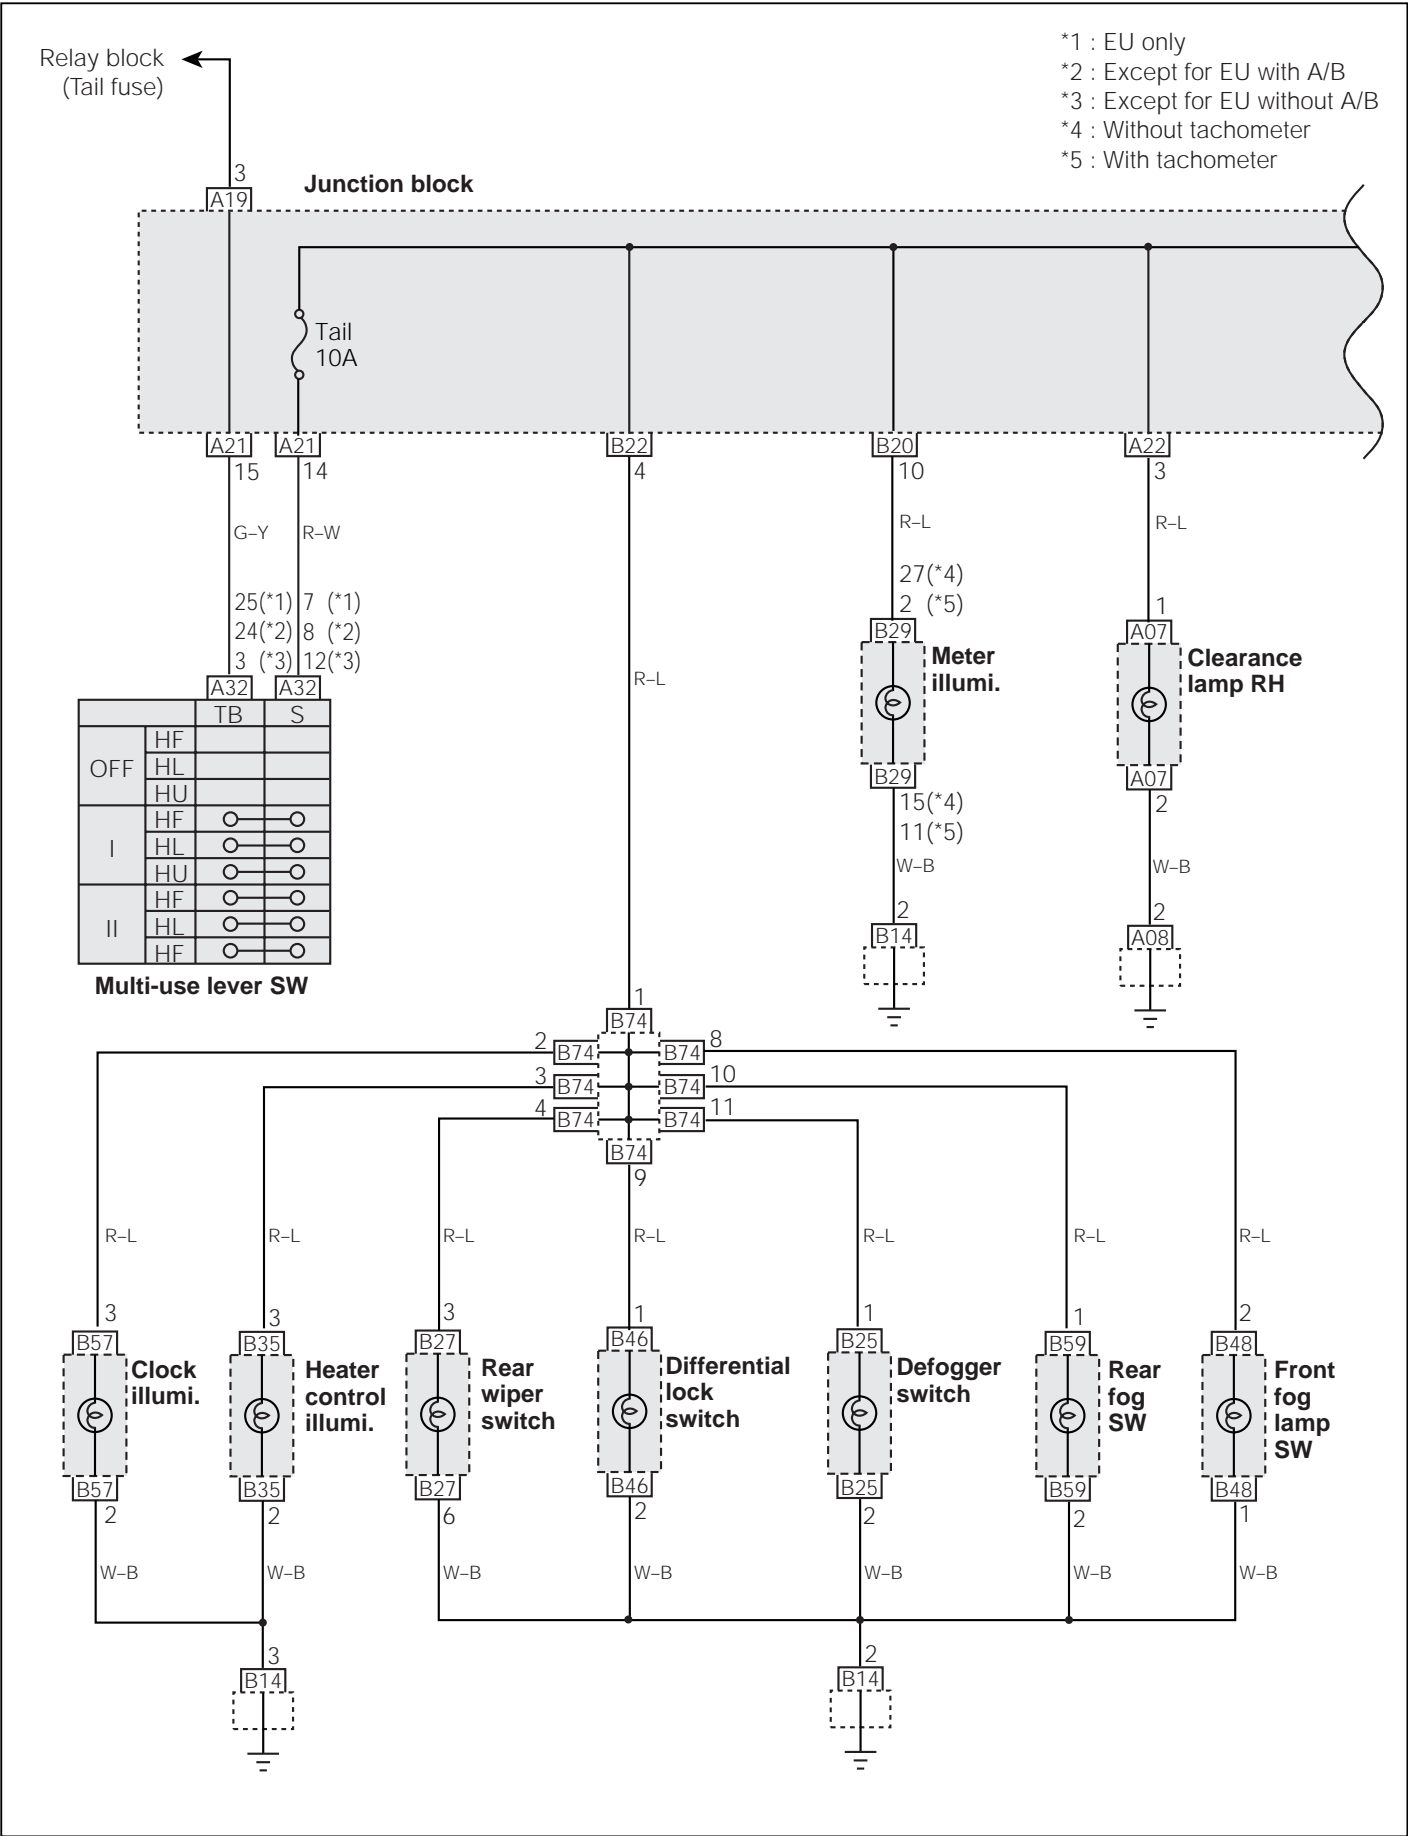


TAIL & LICENSE PLATE LAMP (RHD) -2

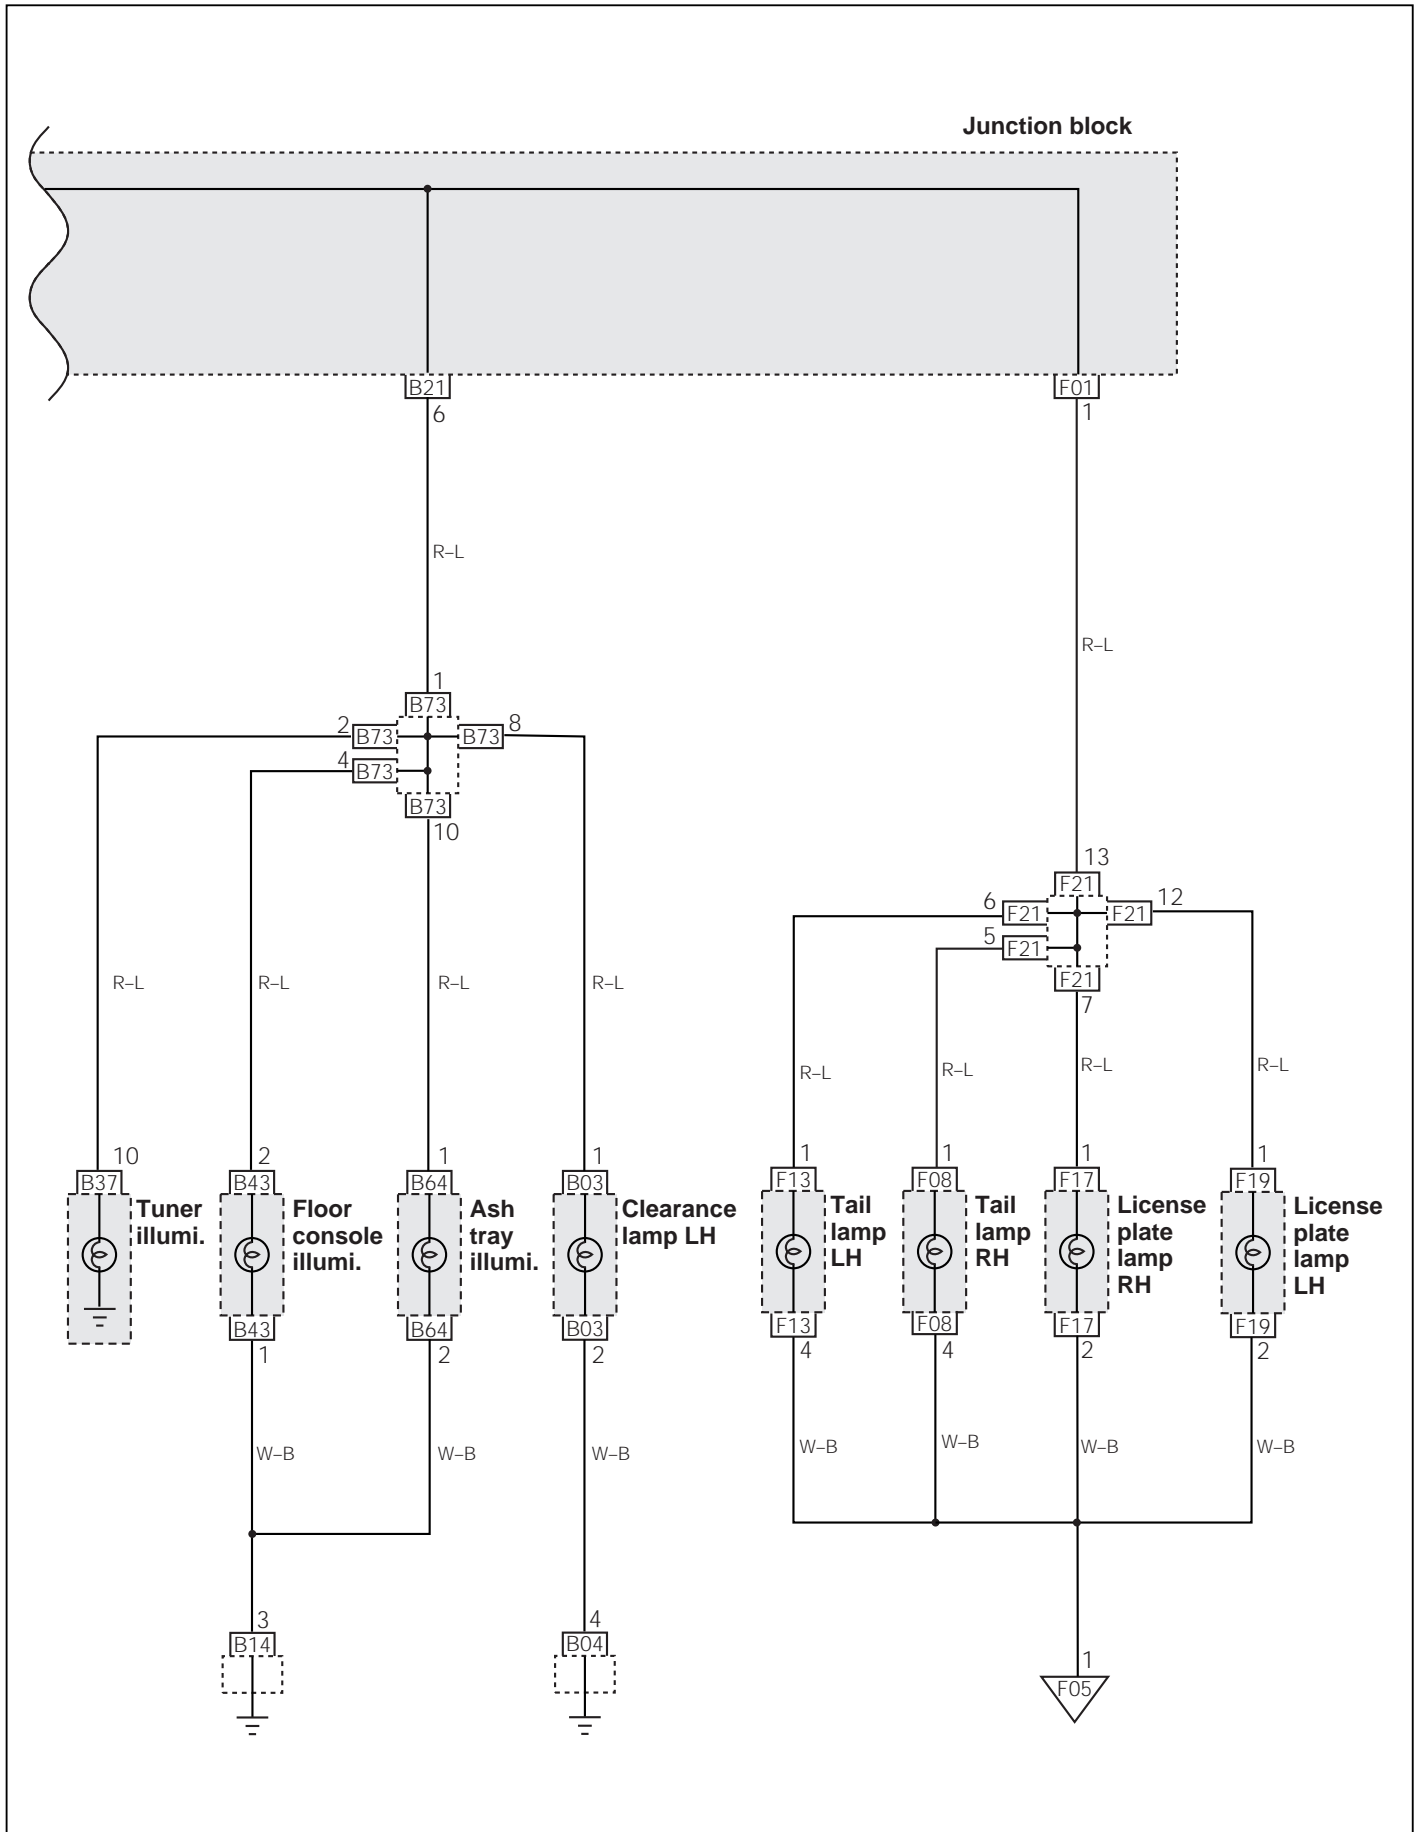




TAIL & LICENSE PLATE LAMP (LHD) -2

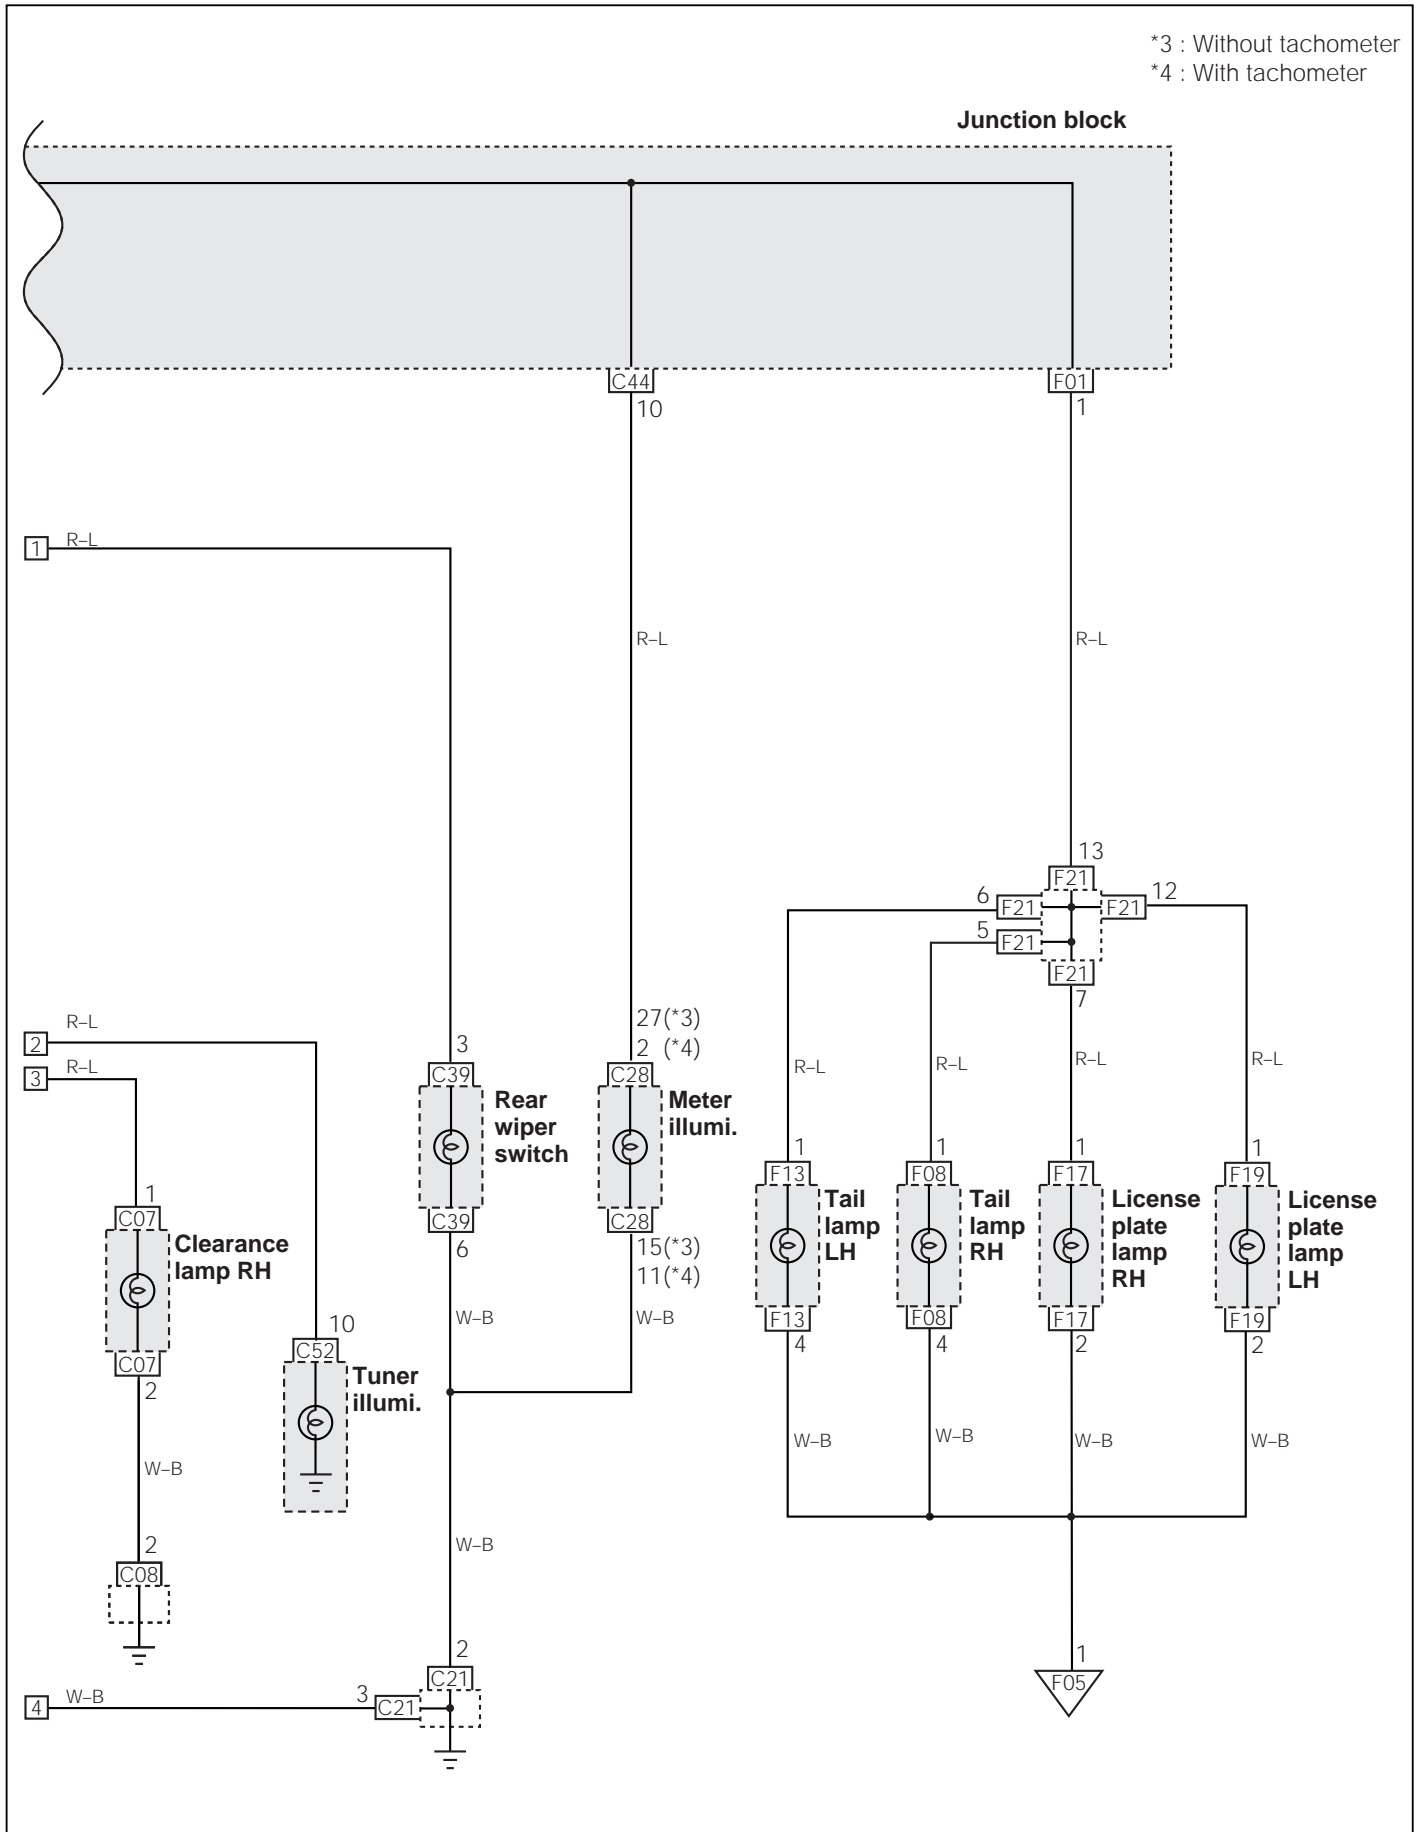


HAZARD WARNING & TURN SIGNAL LAMP (RHD)

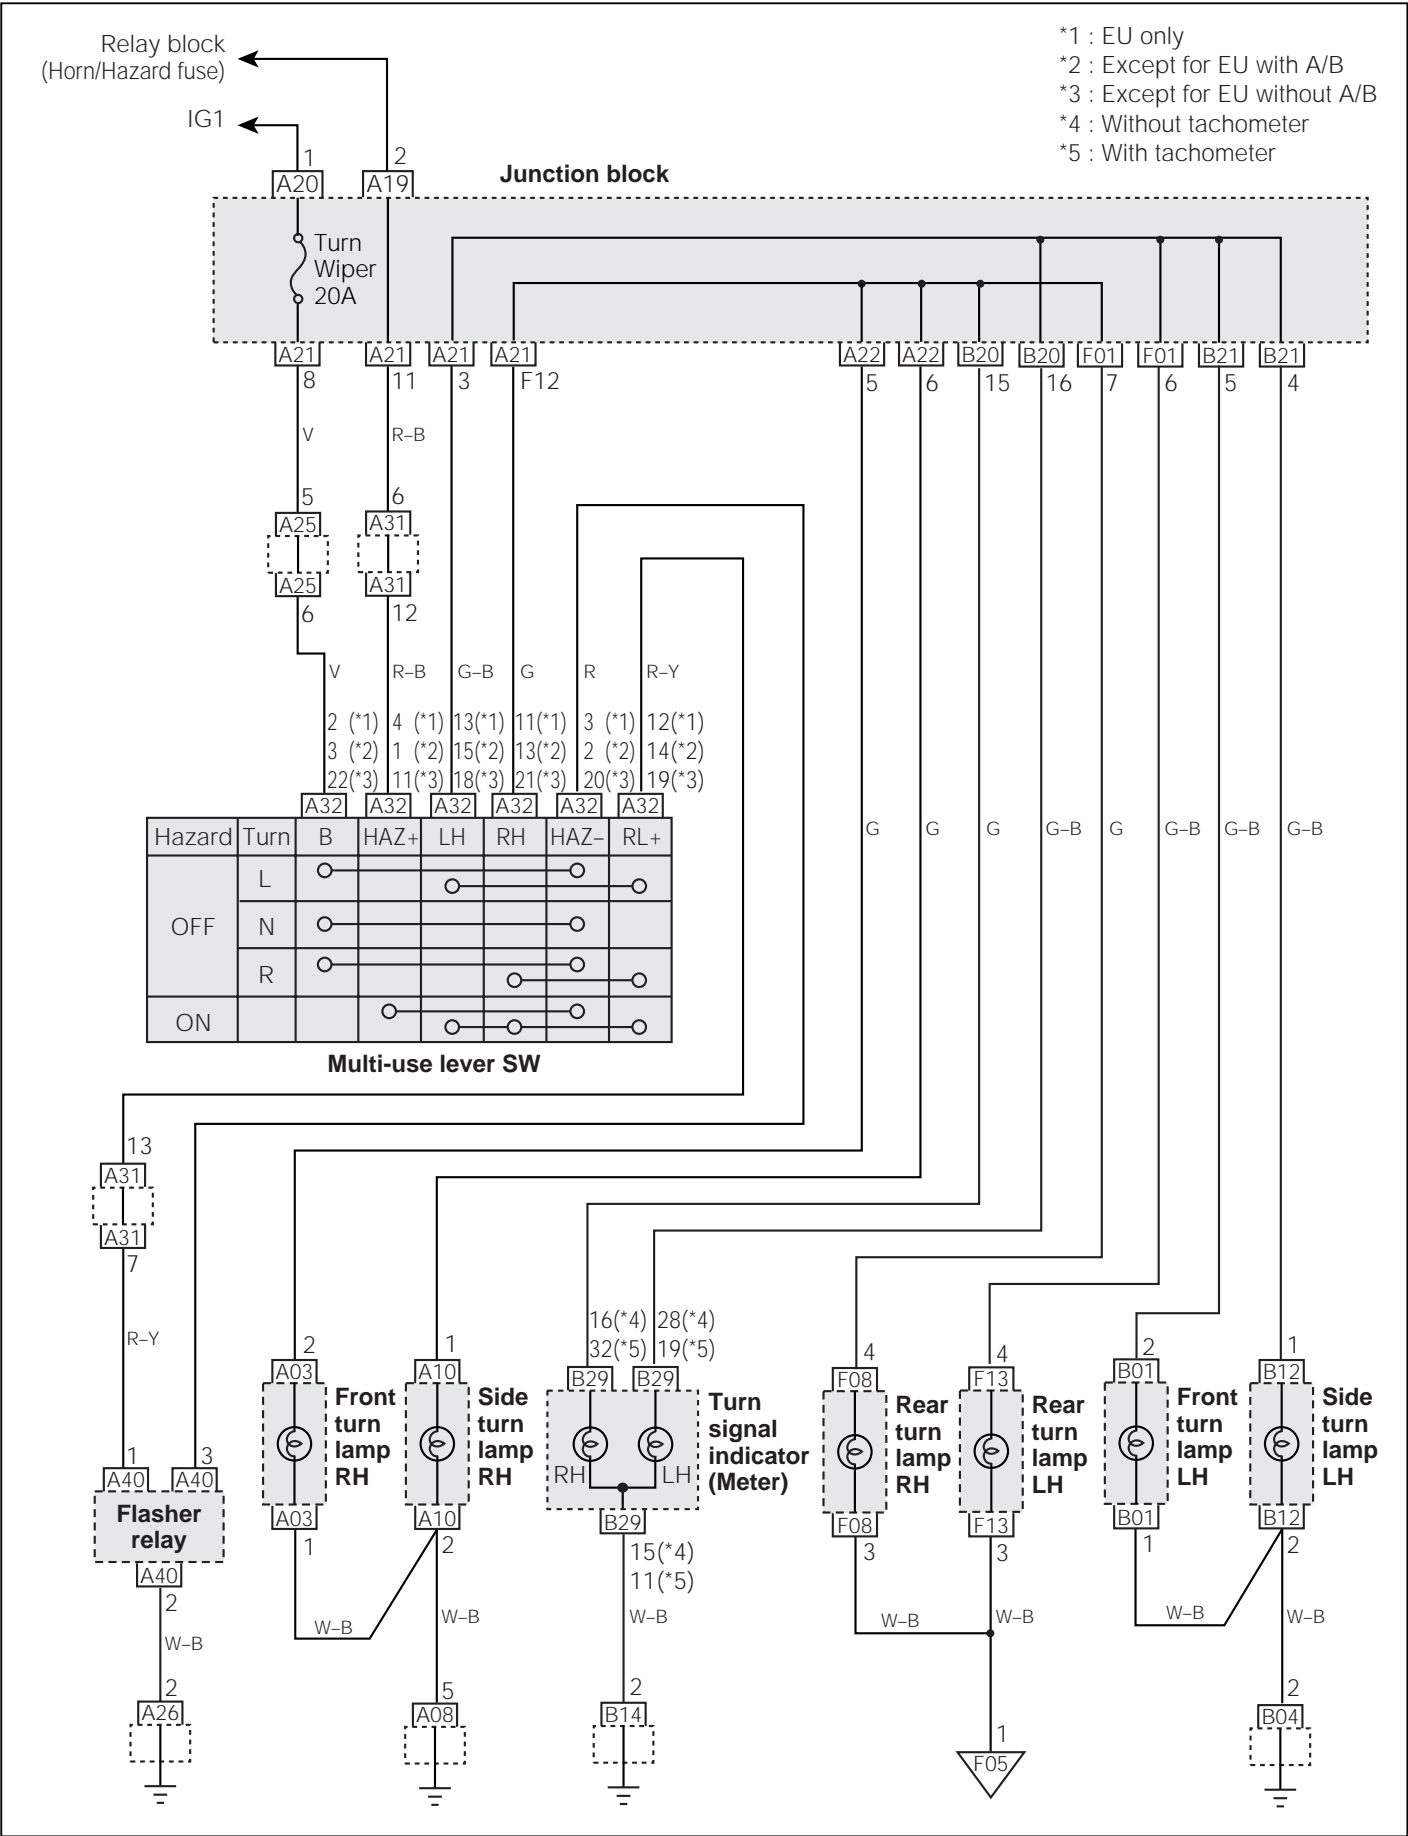





STOP LAMP (RHD)

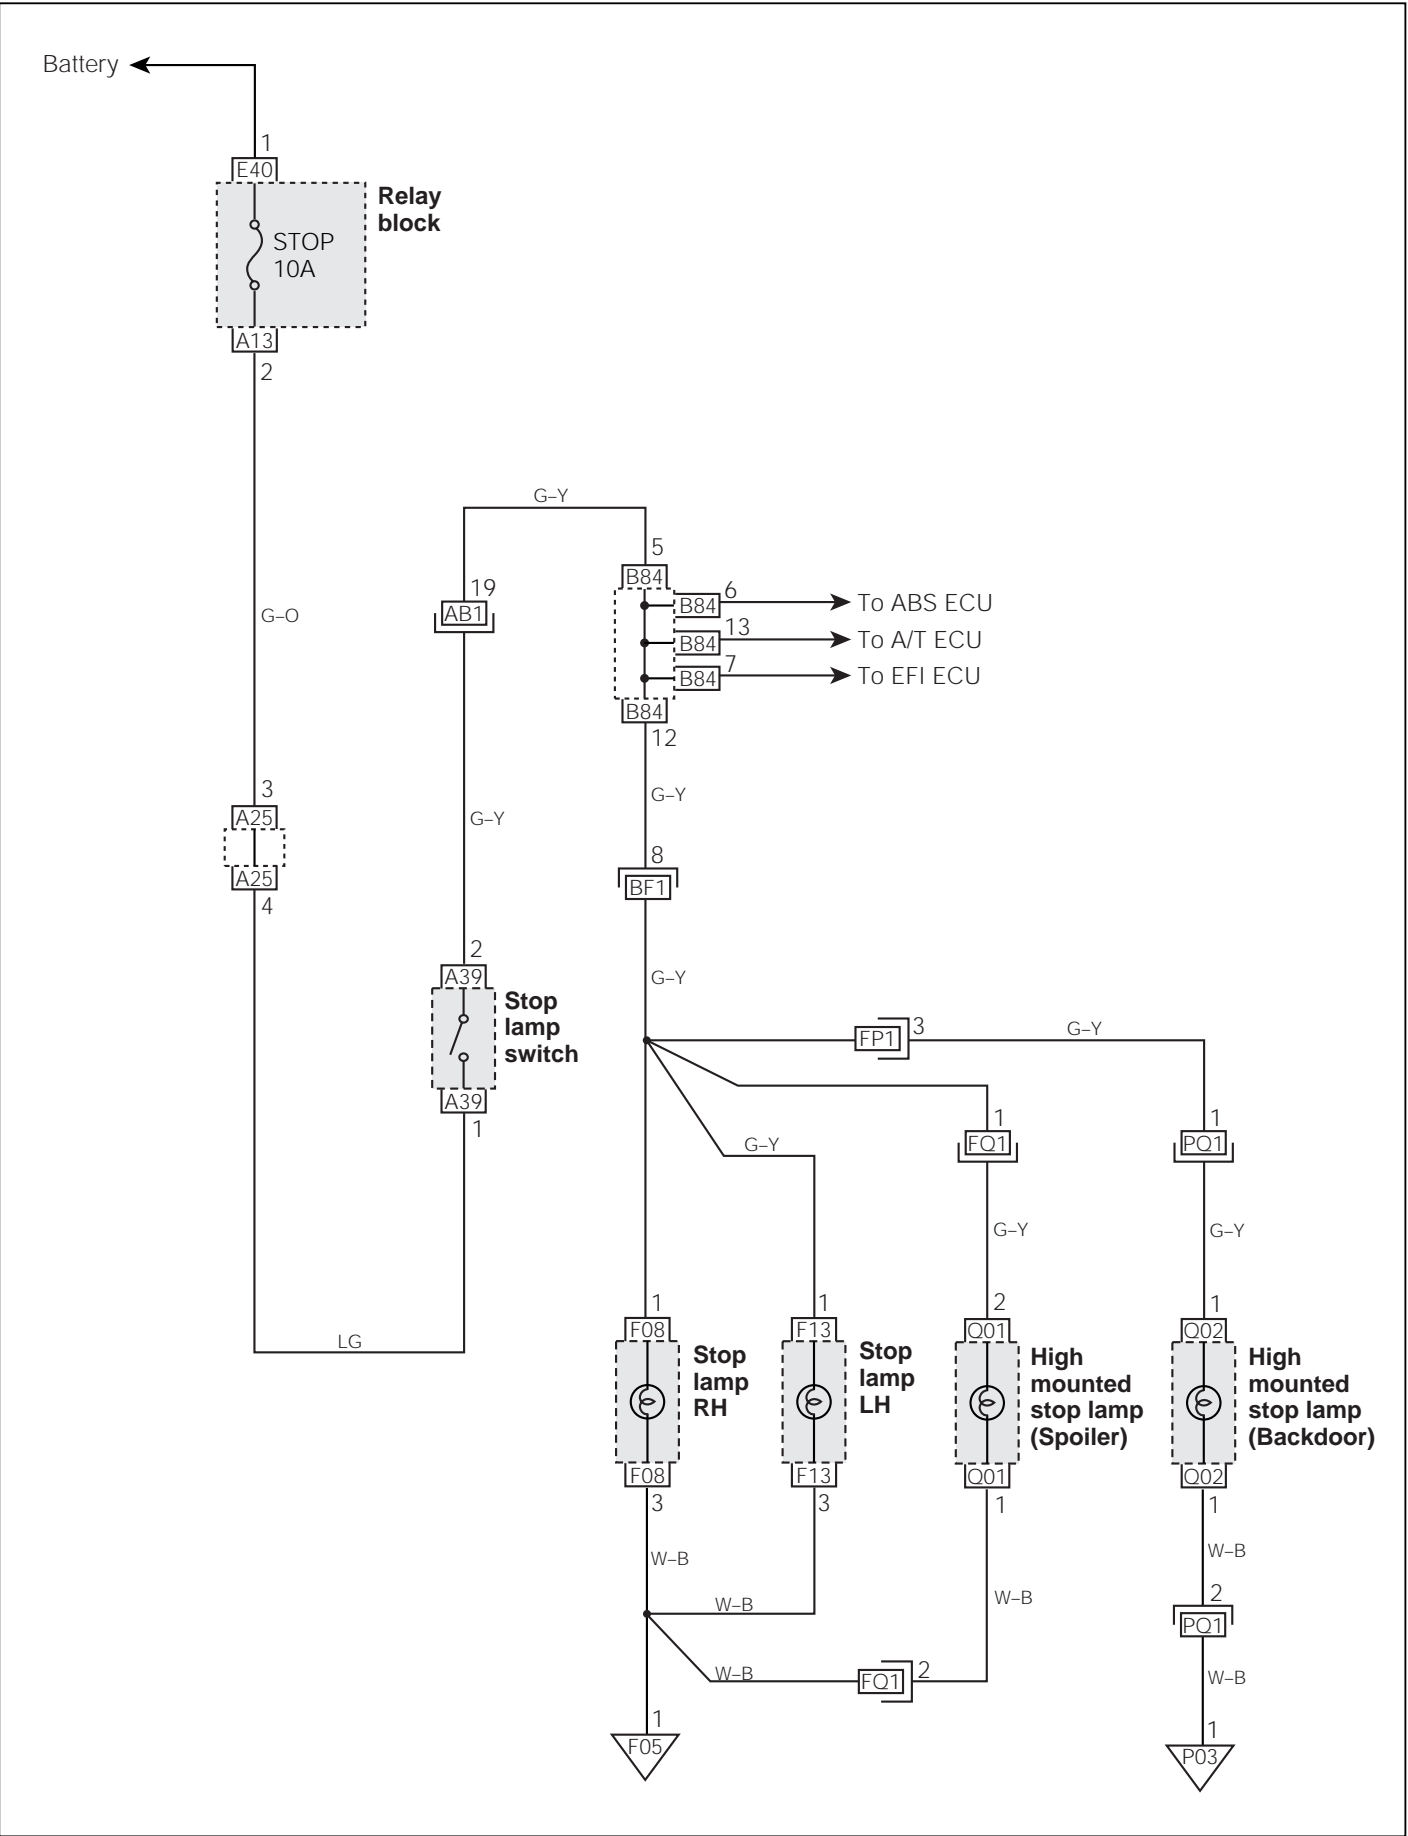


STOP LAMP (LHD)

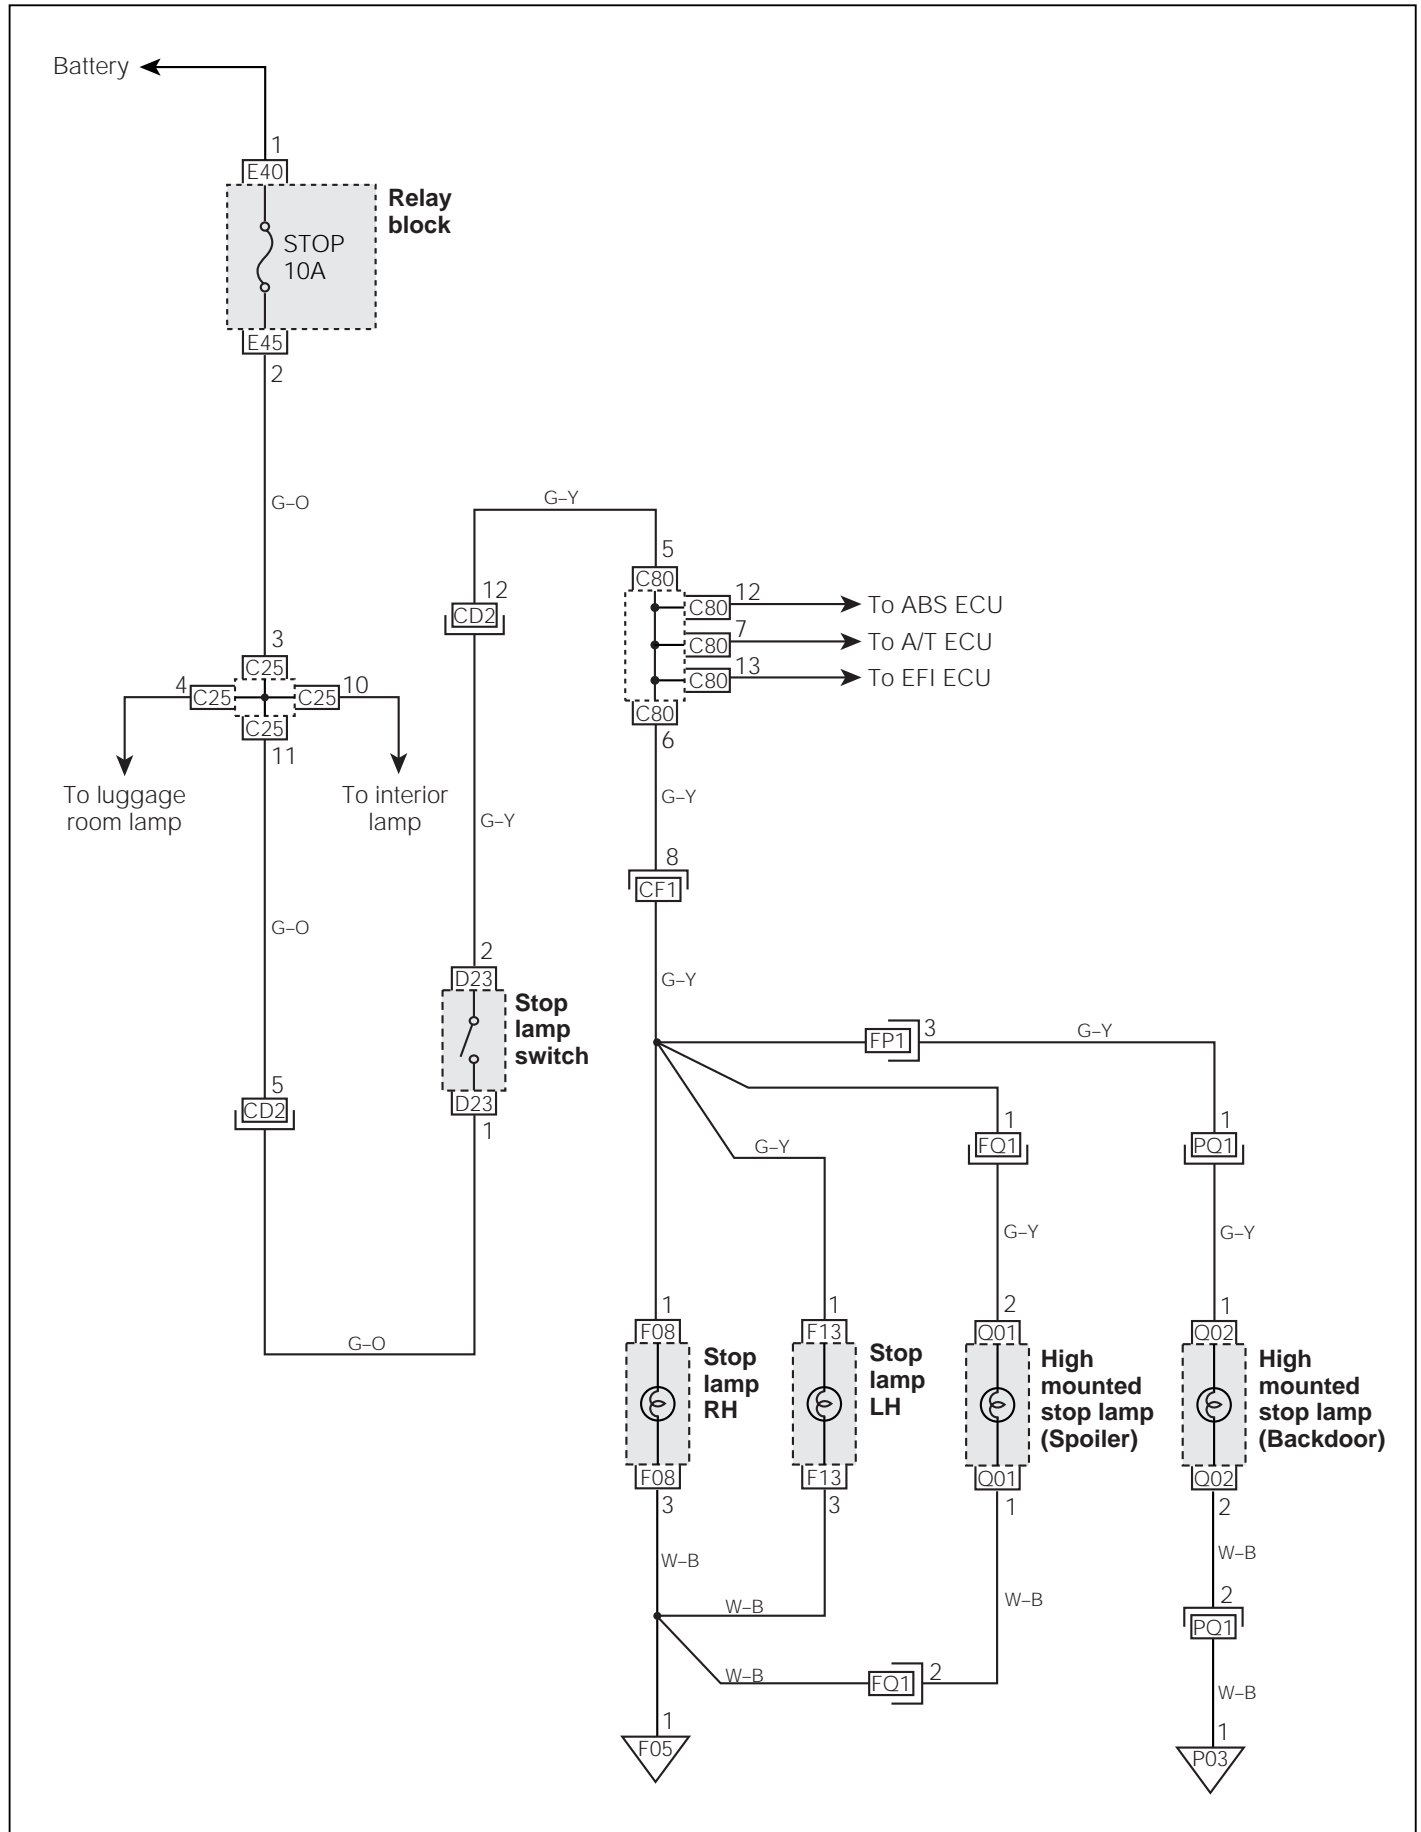


BACK UP LAMP (RHD)

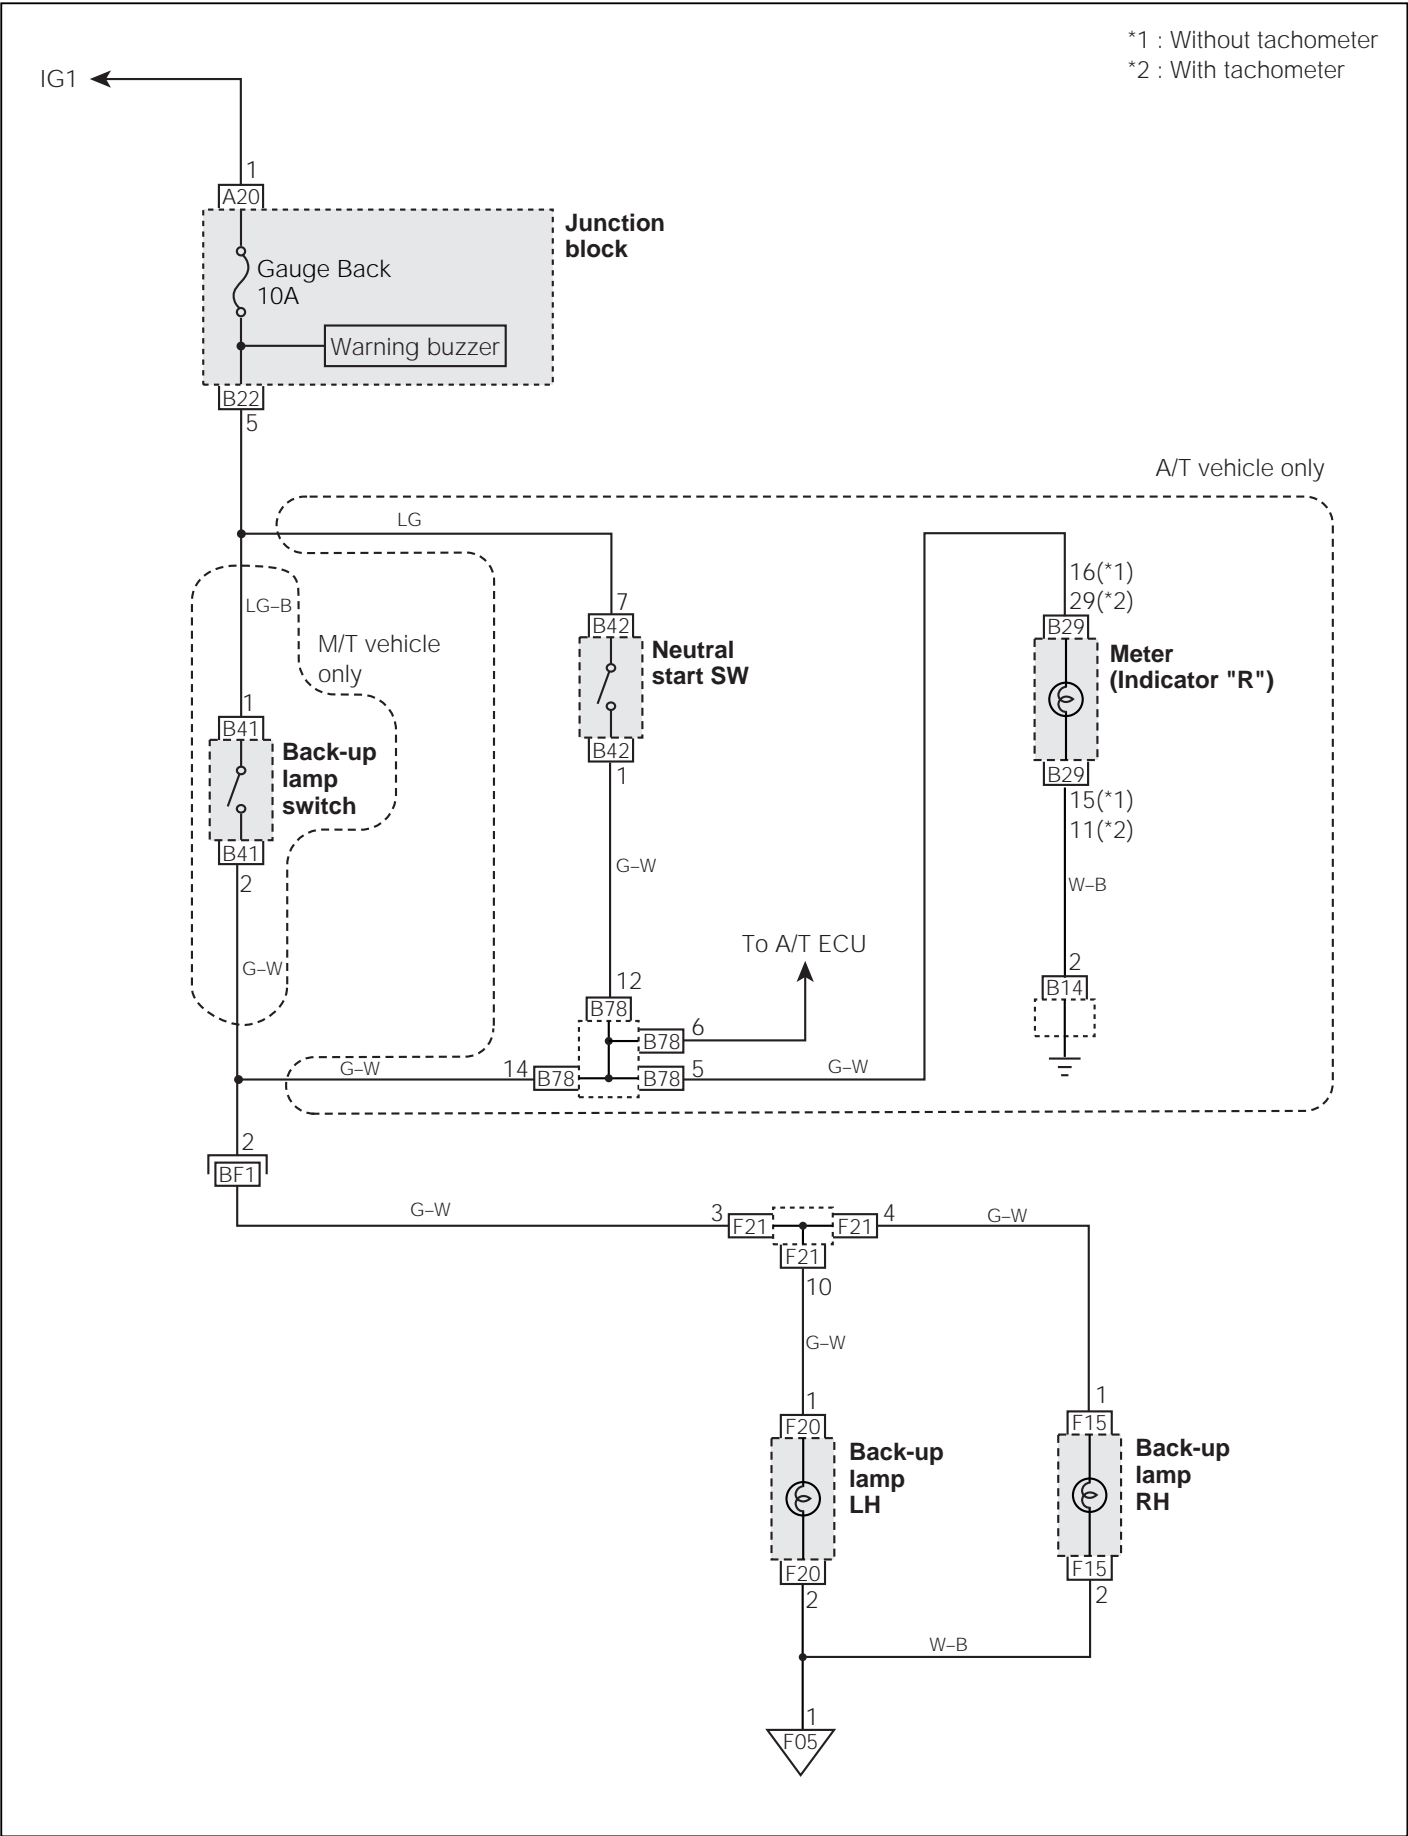

INTERIOR LAMP & LUGGAGE ROOM LAMP (RHD)

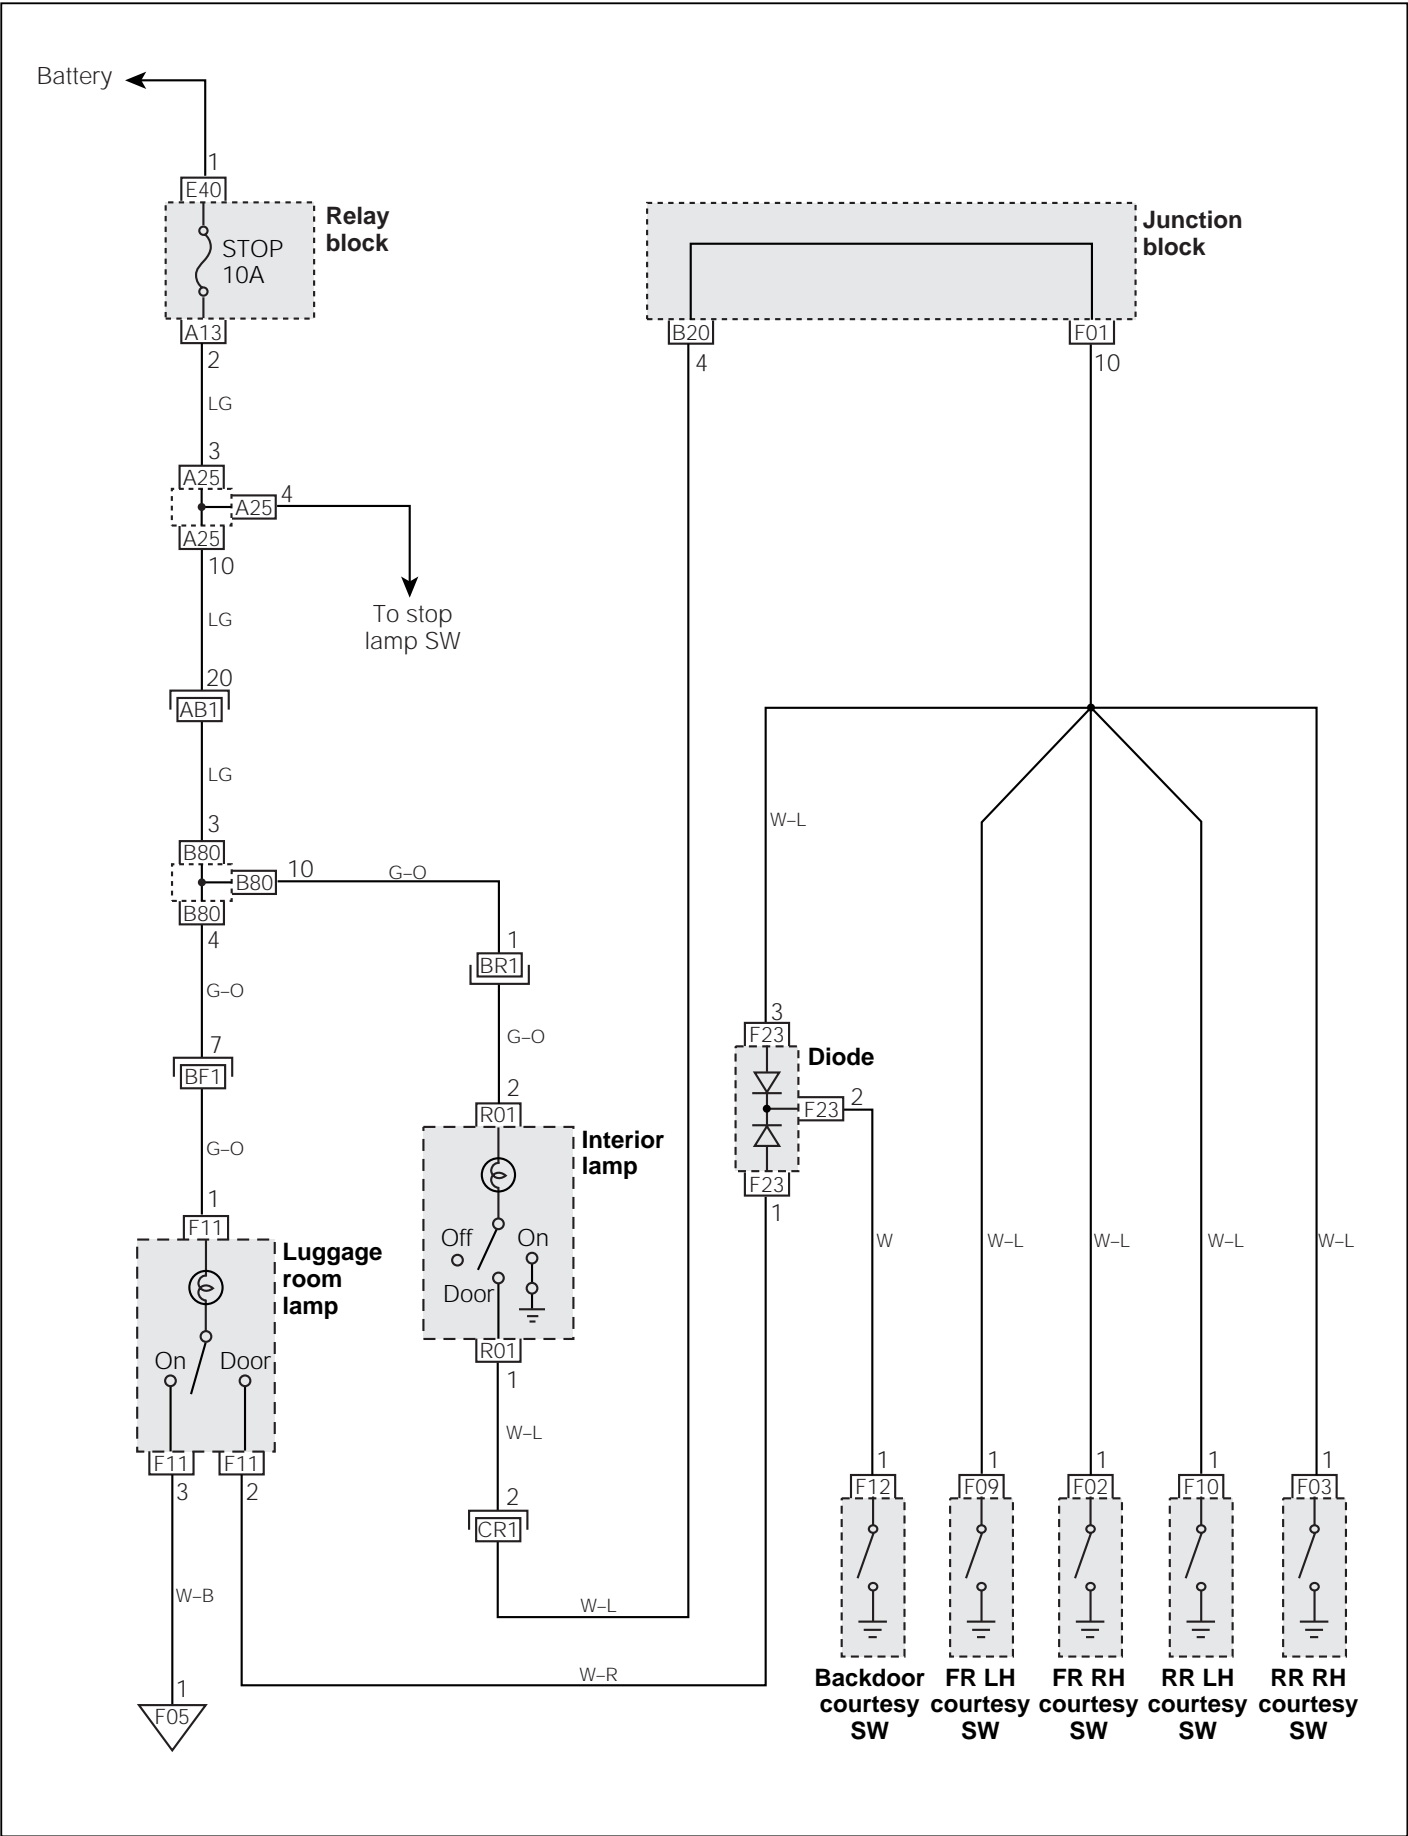


INTERIOR LAMP & LUGGAGE ROOM LAMP (LHD)

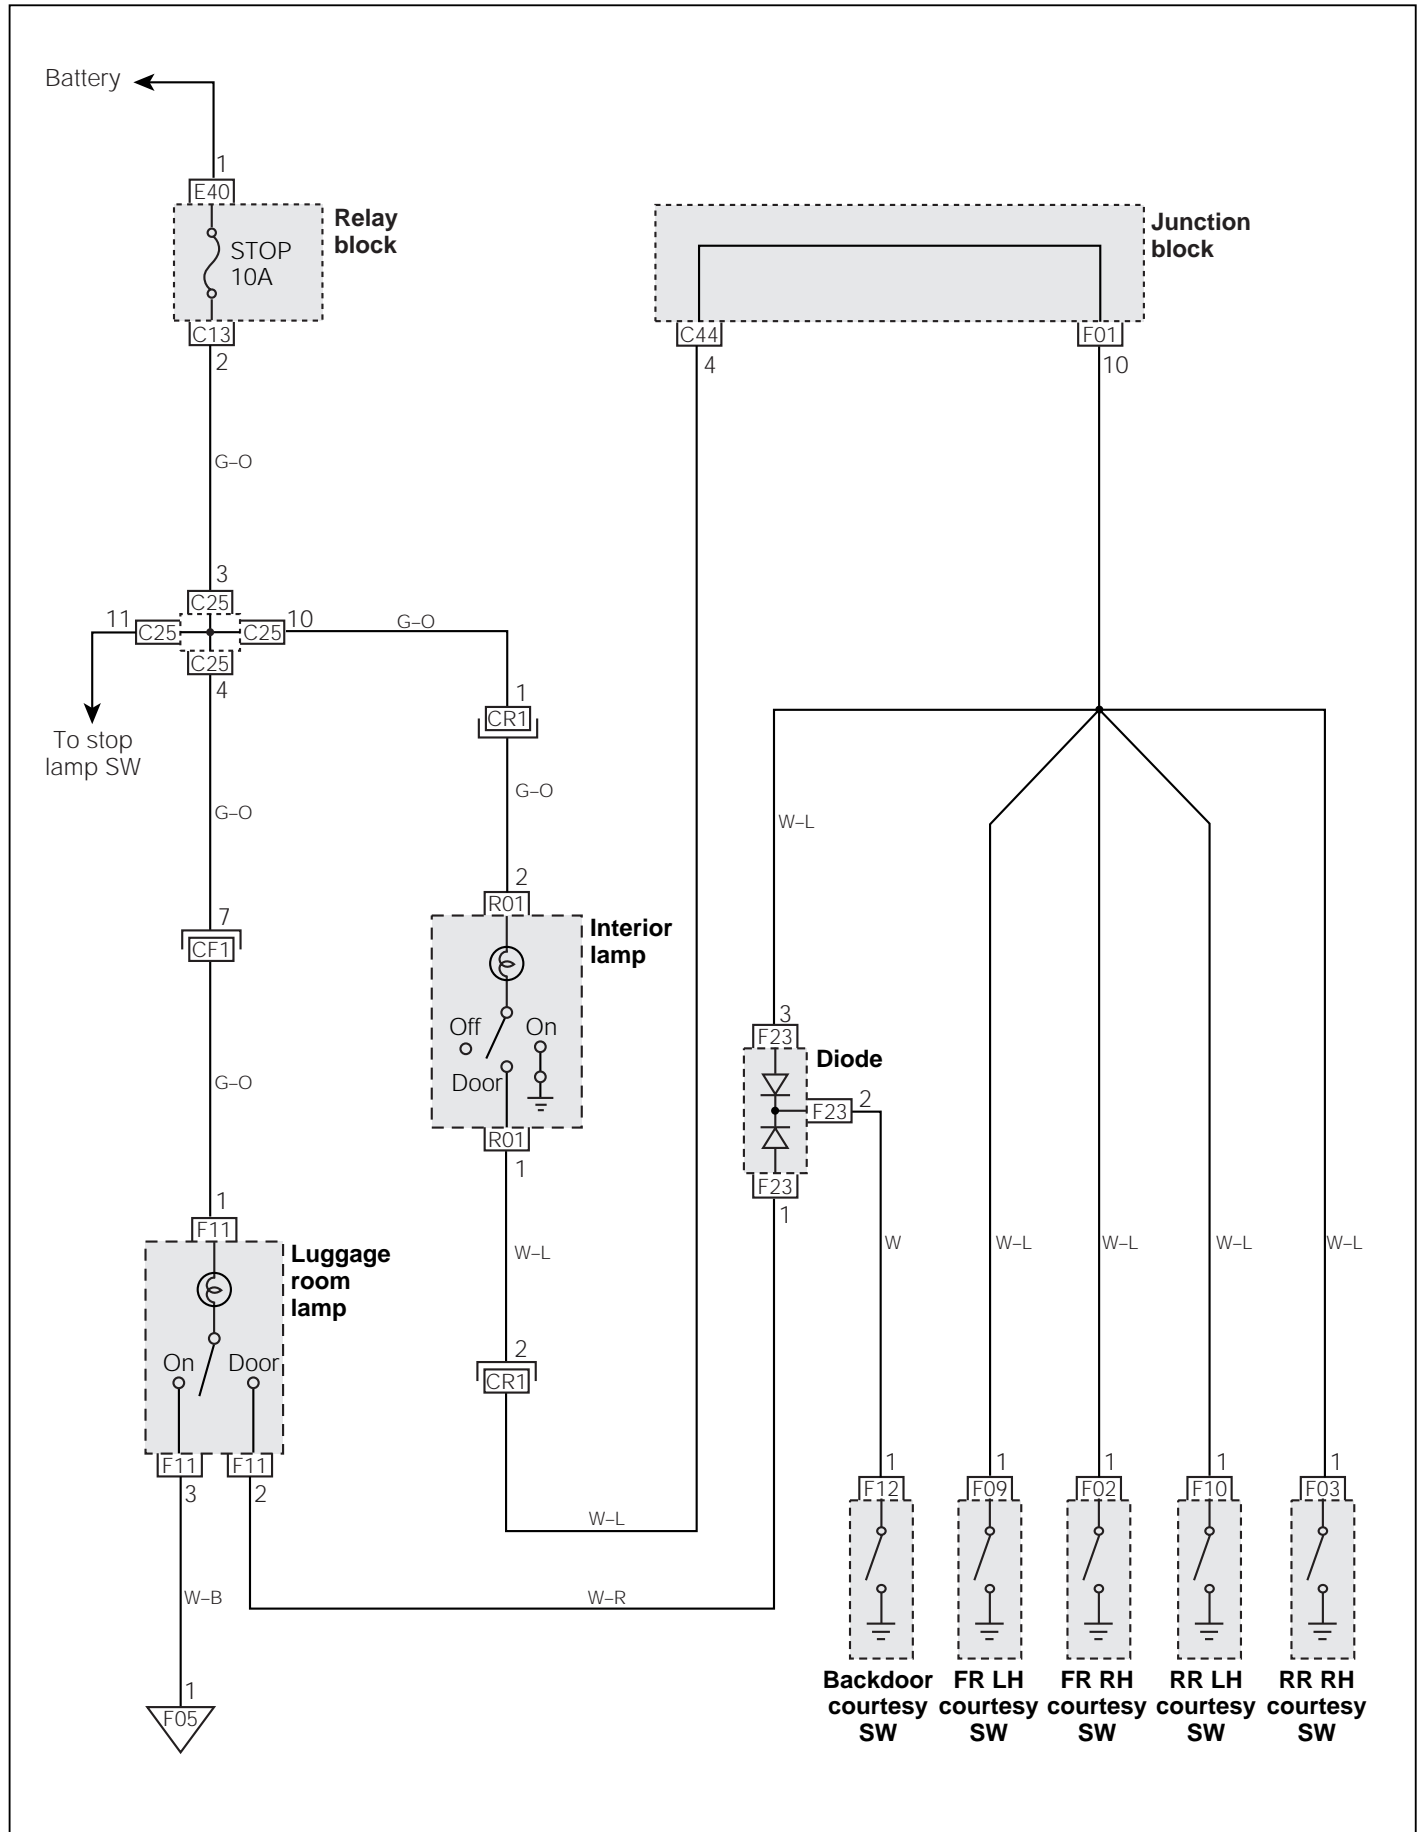


HW-66

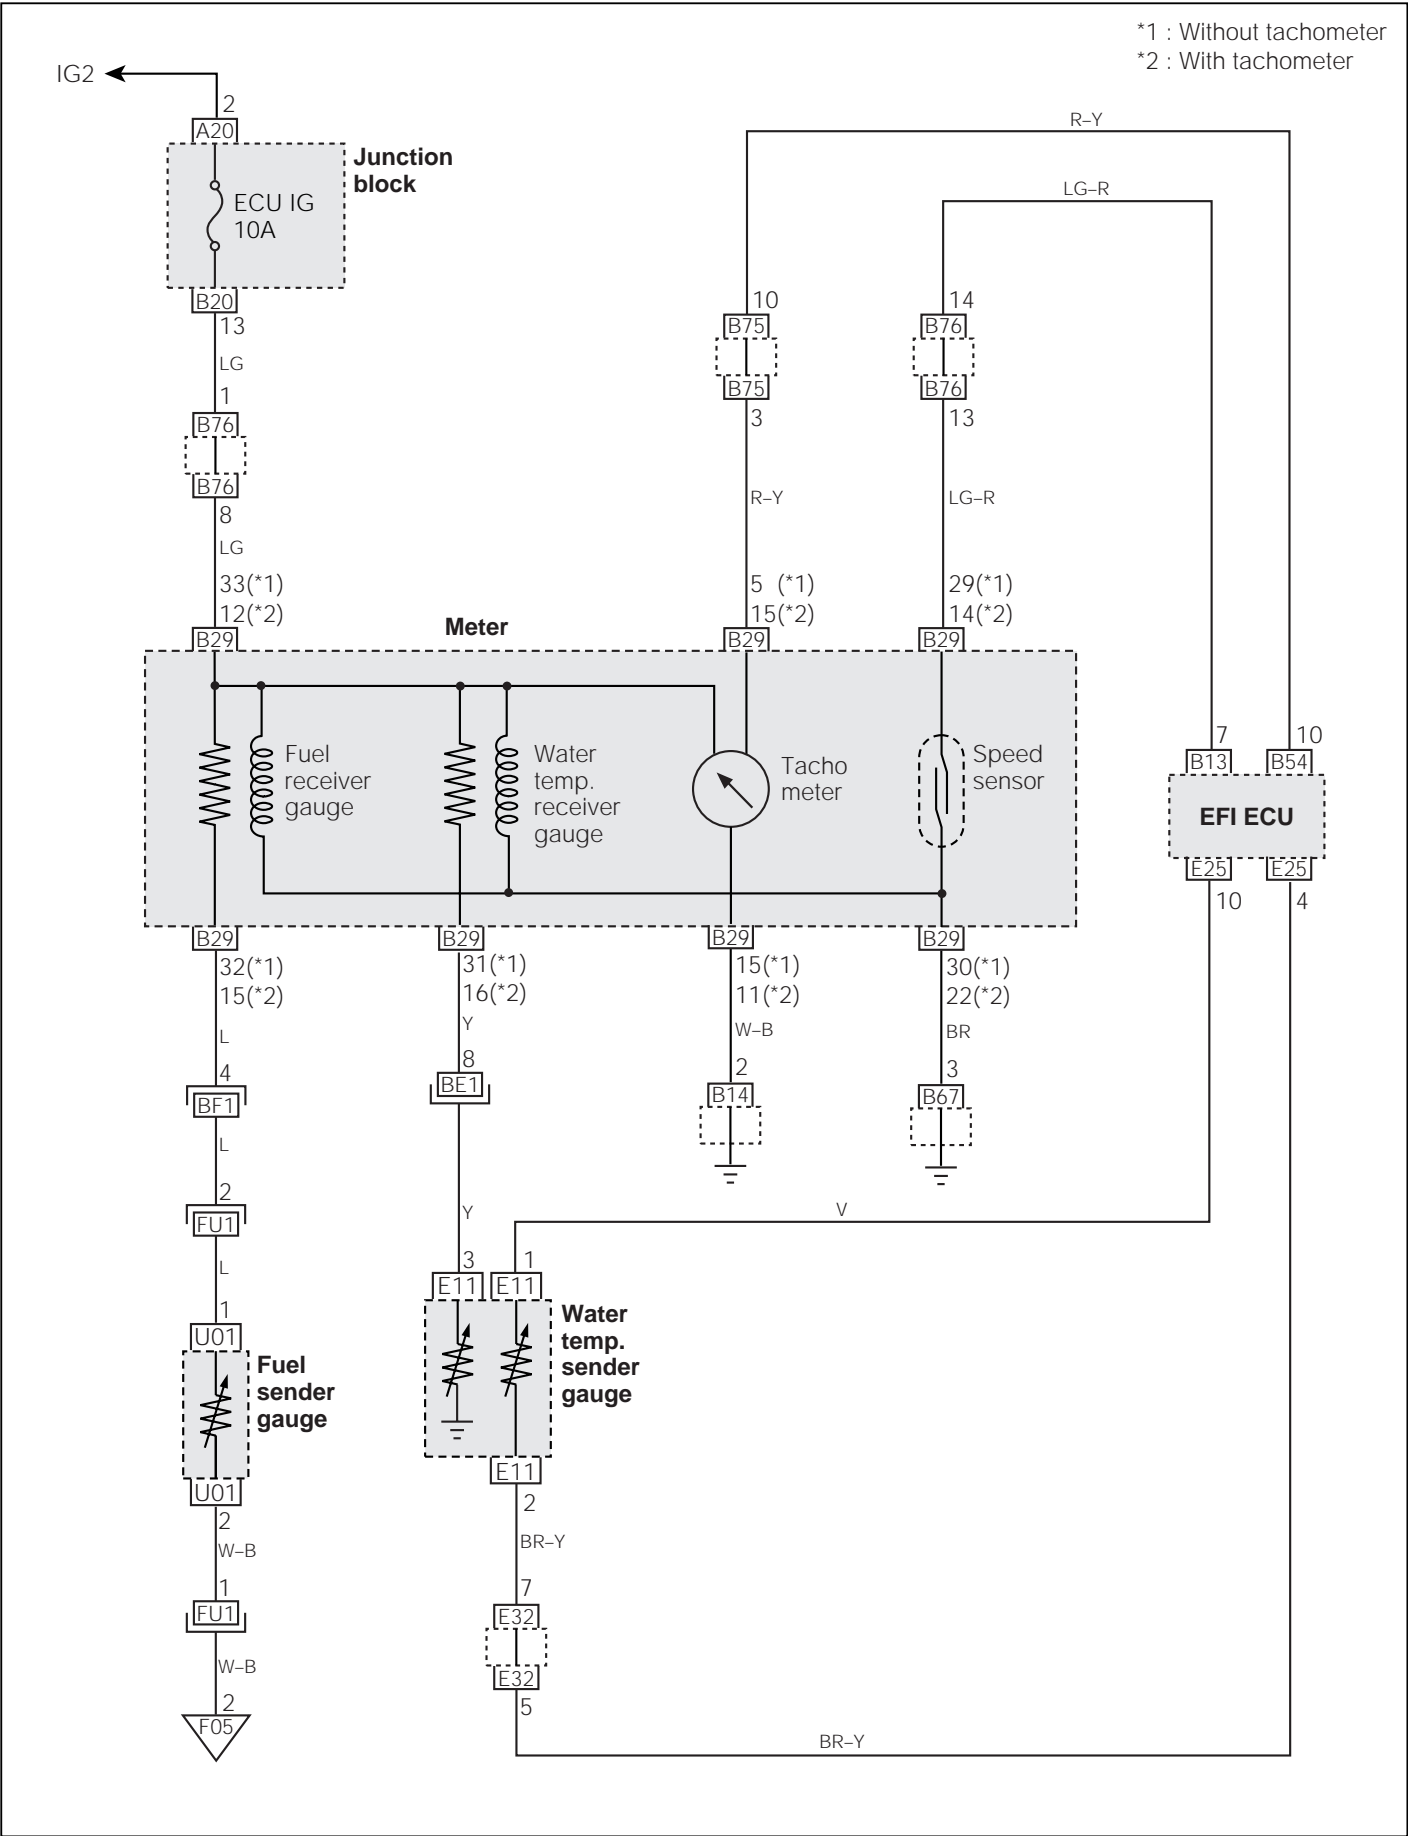
GAUGE, TACHOMETER & VEHICLE SPEED SENSOR (RHD / w/ METER CABLE)



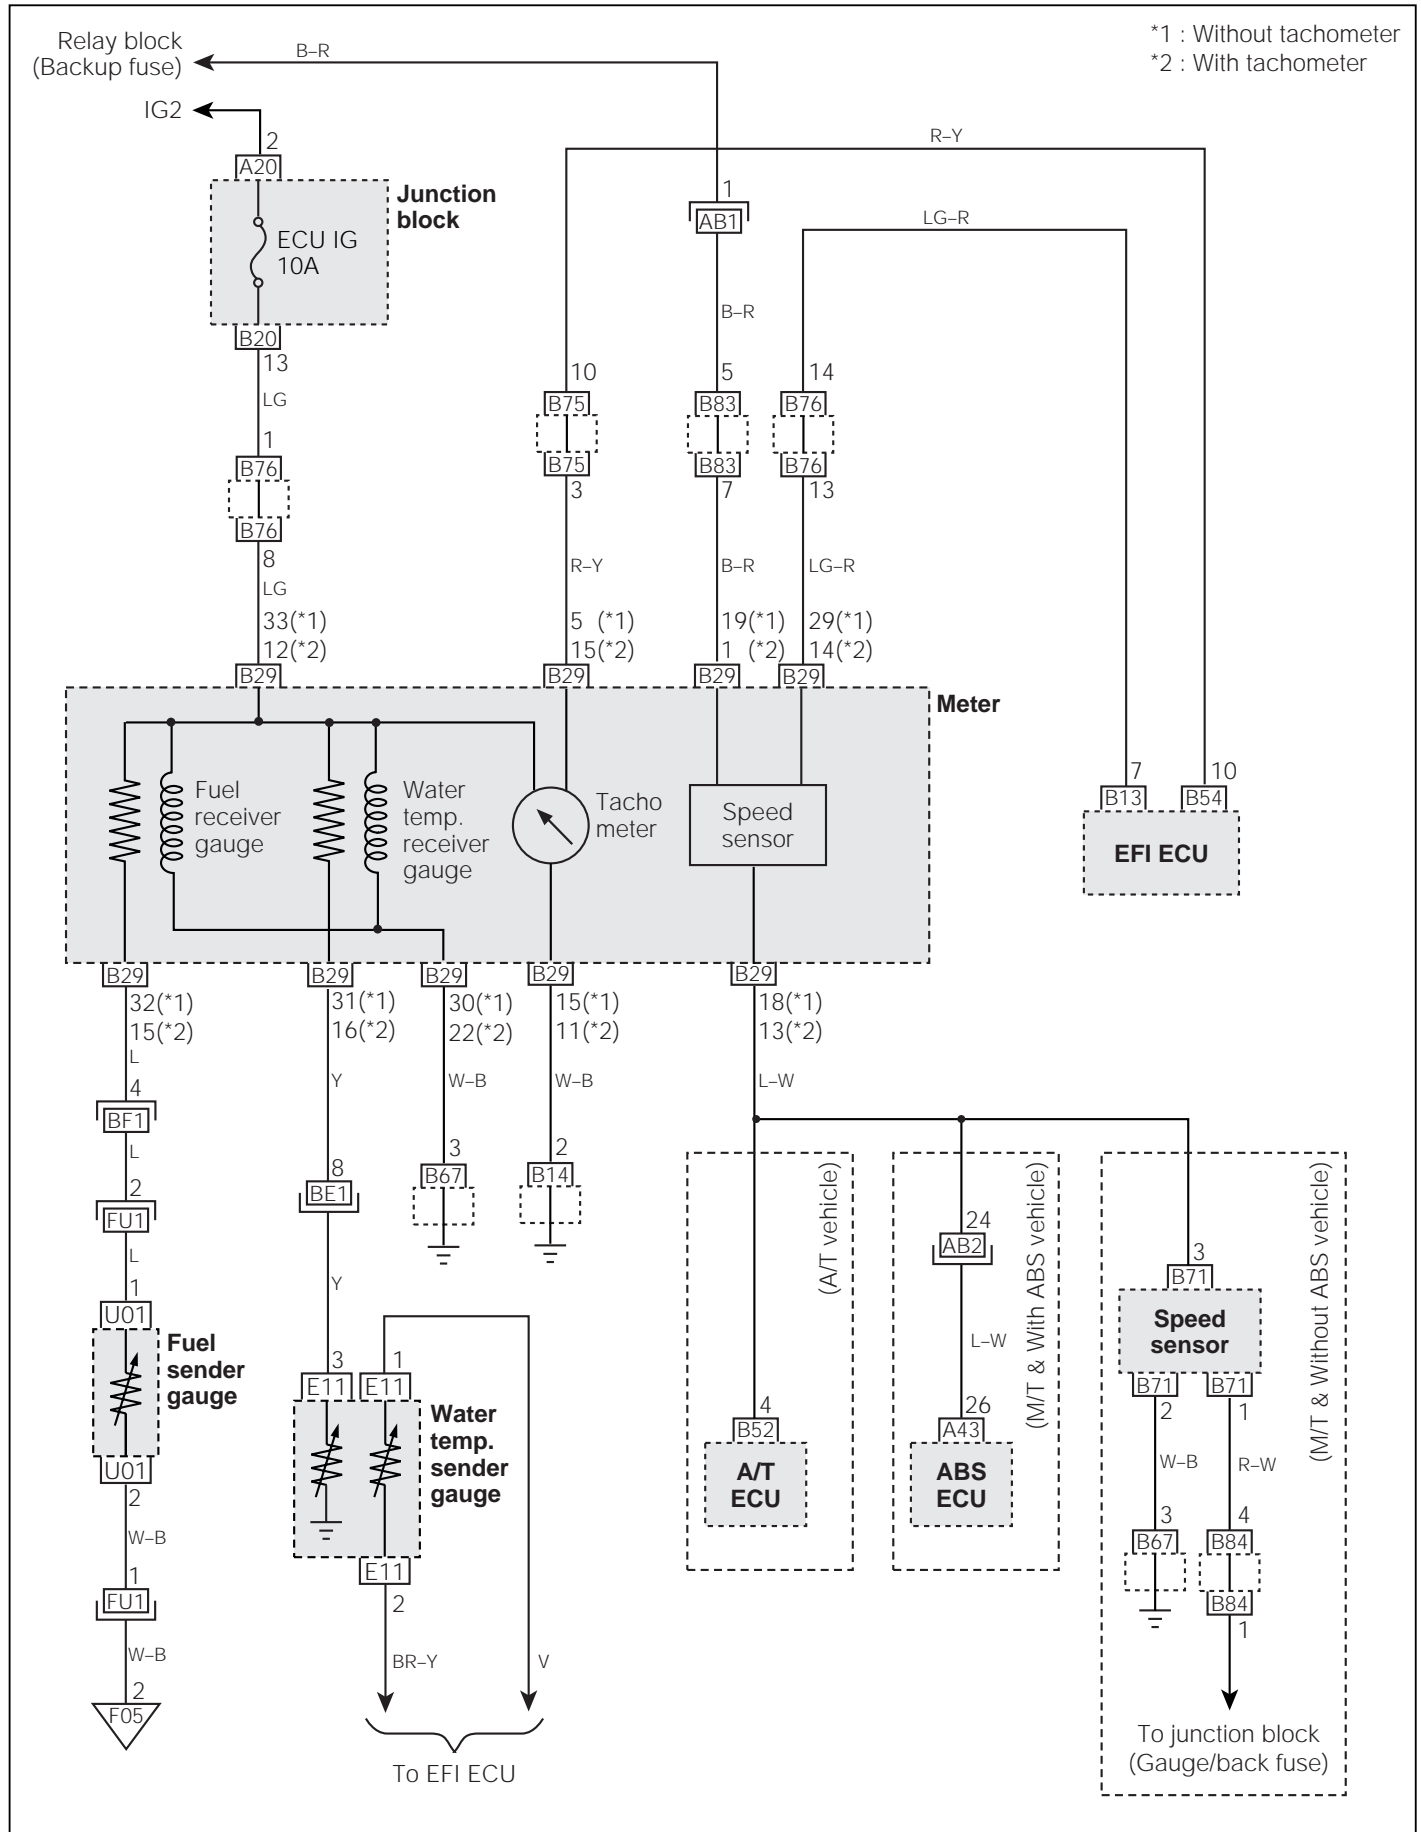
GAUGE, TACHOMETER & VEICLE SPEED SENSOR (RHD / w/o METER CABLE)



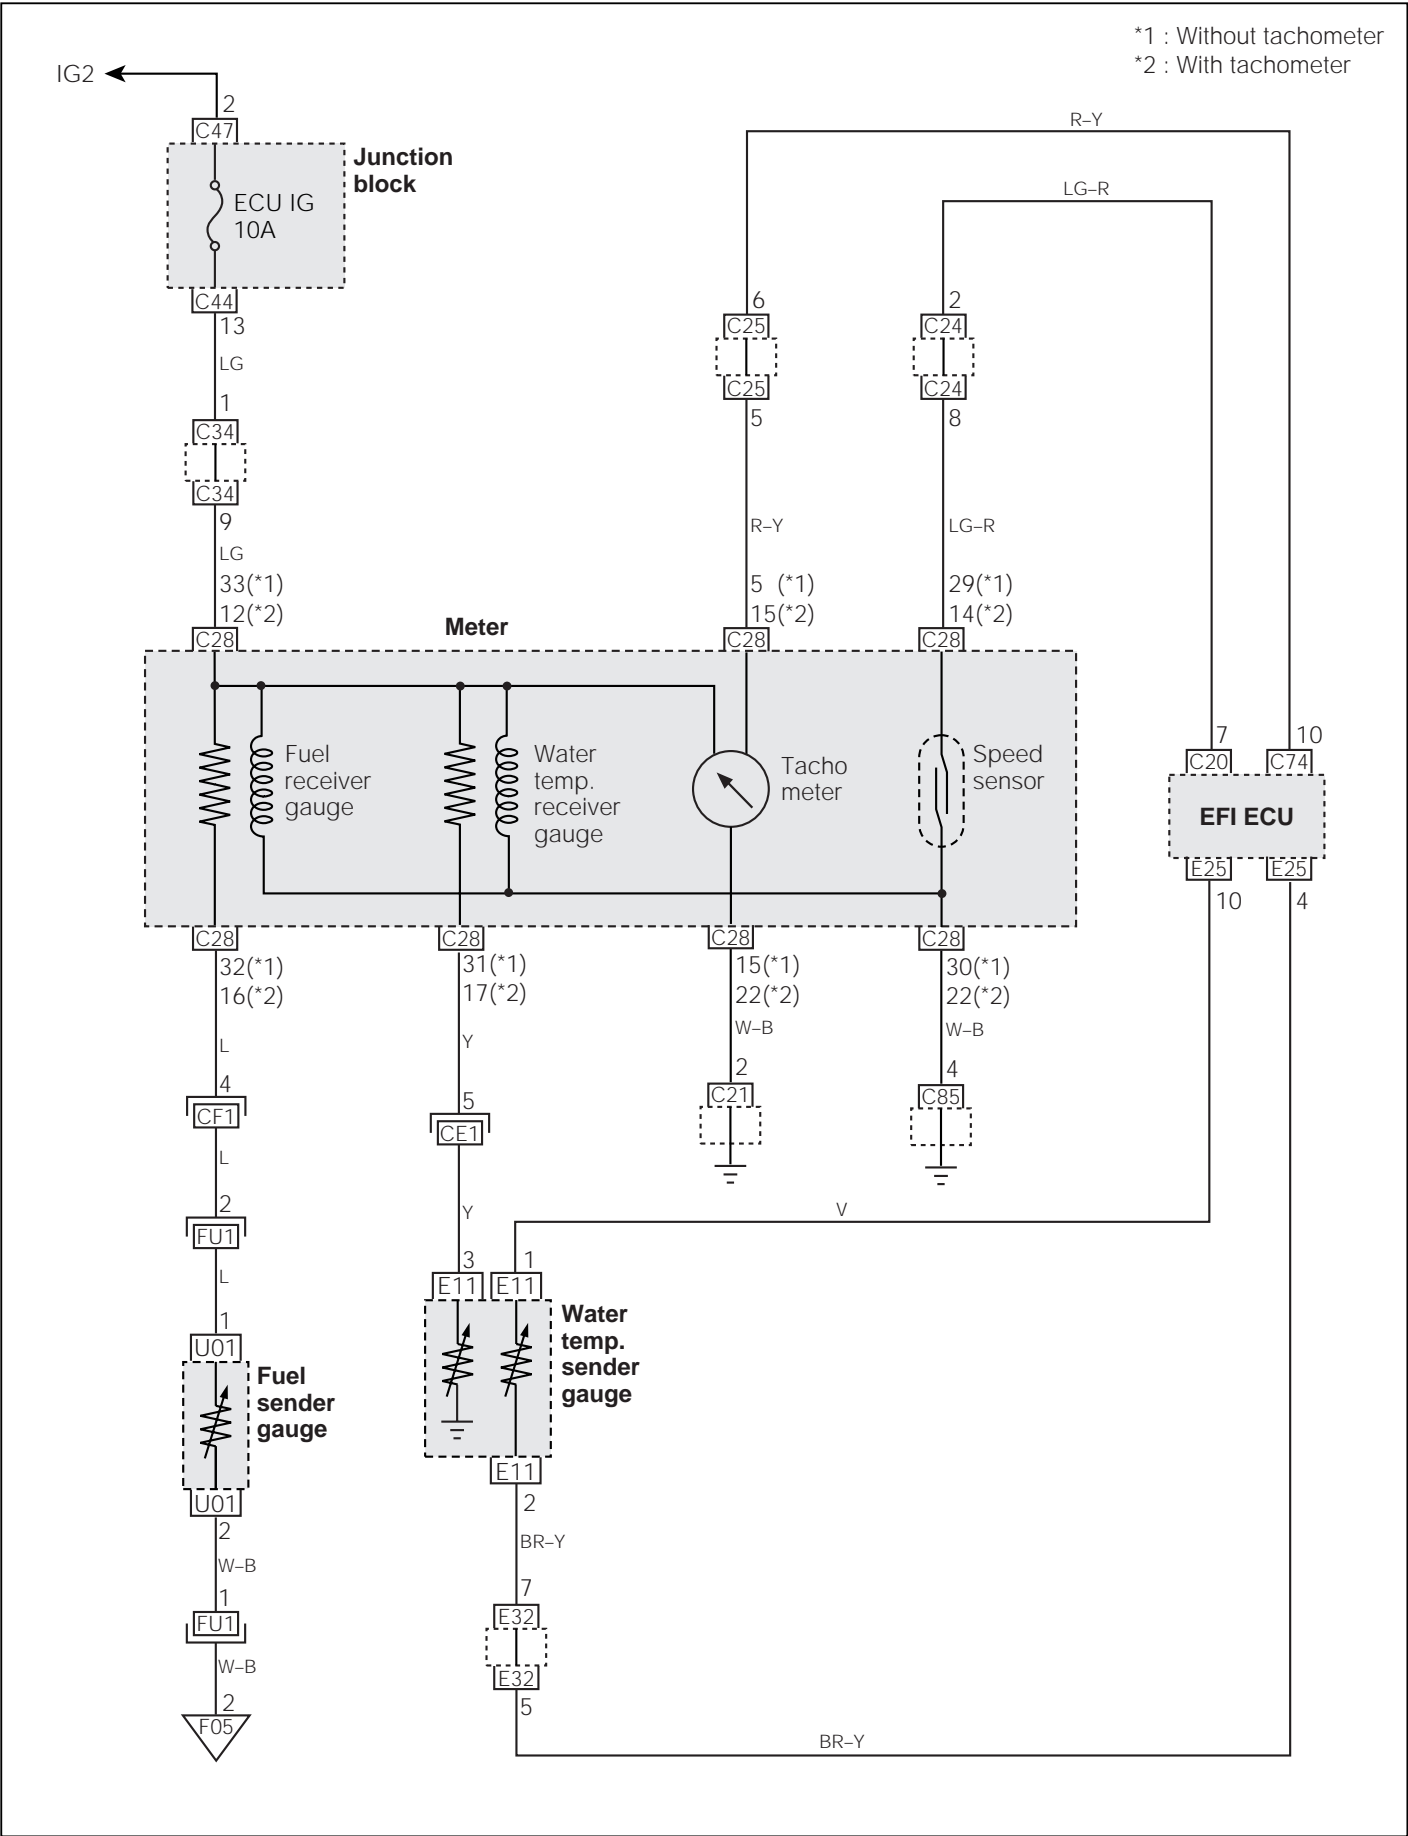
GAUGE, TACHOMETER & VEHICLE SPEED SENSOR (LHD / w/ METER CABLE)



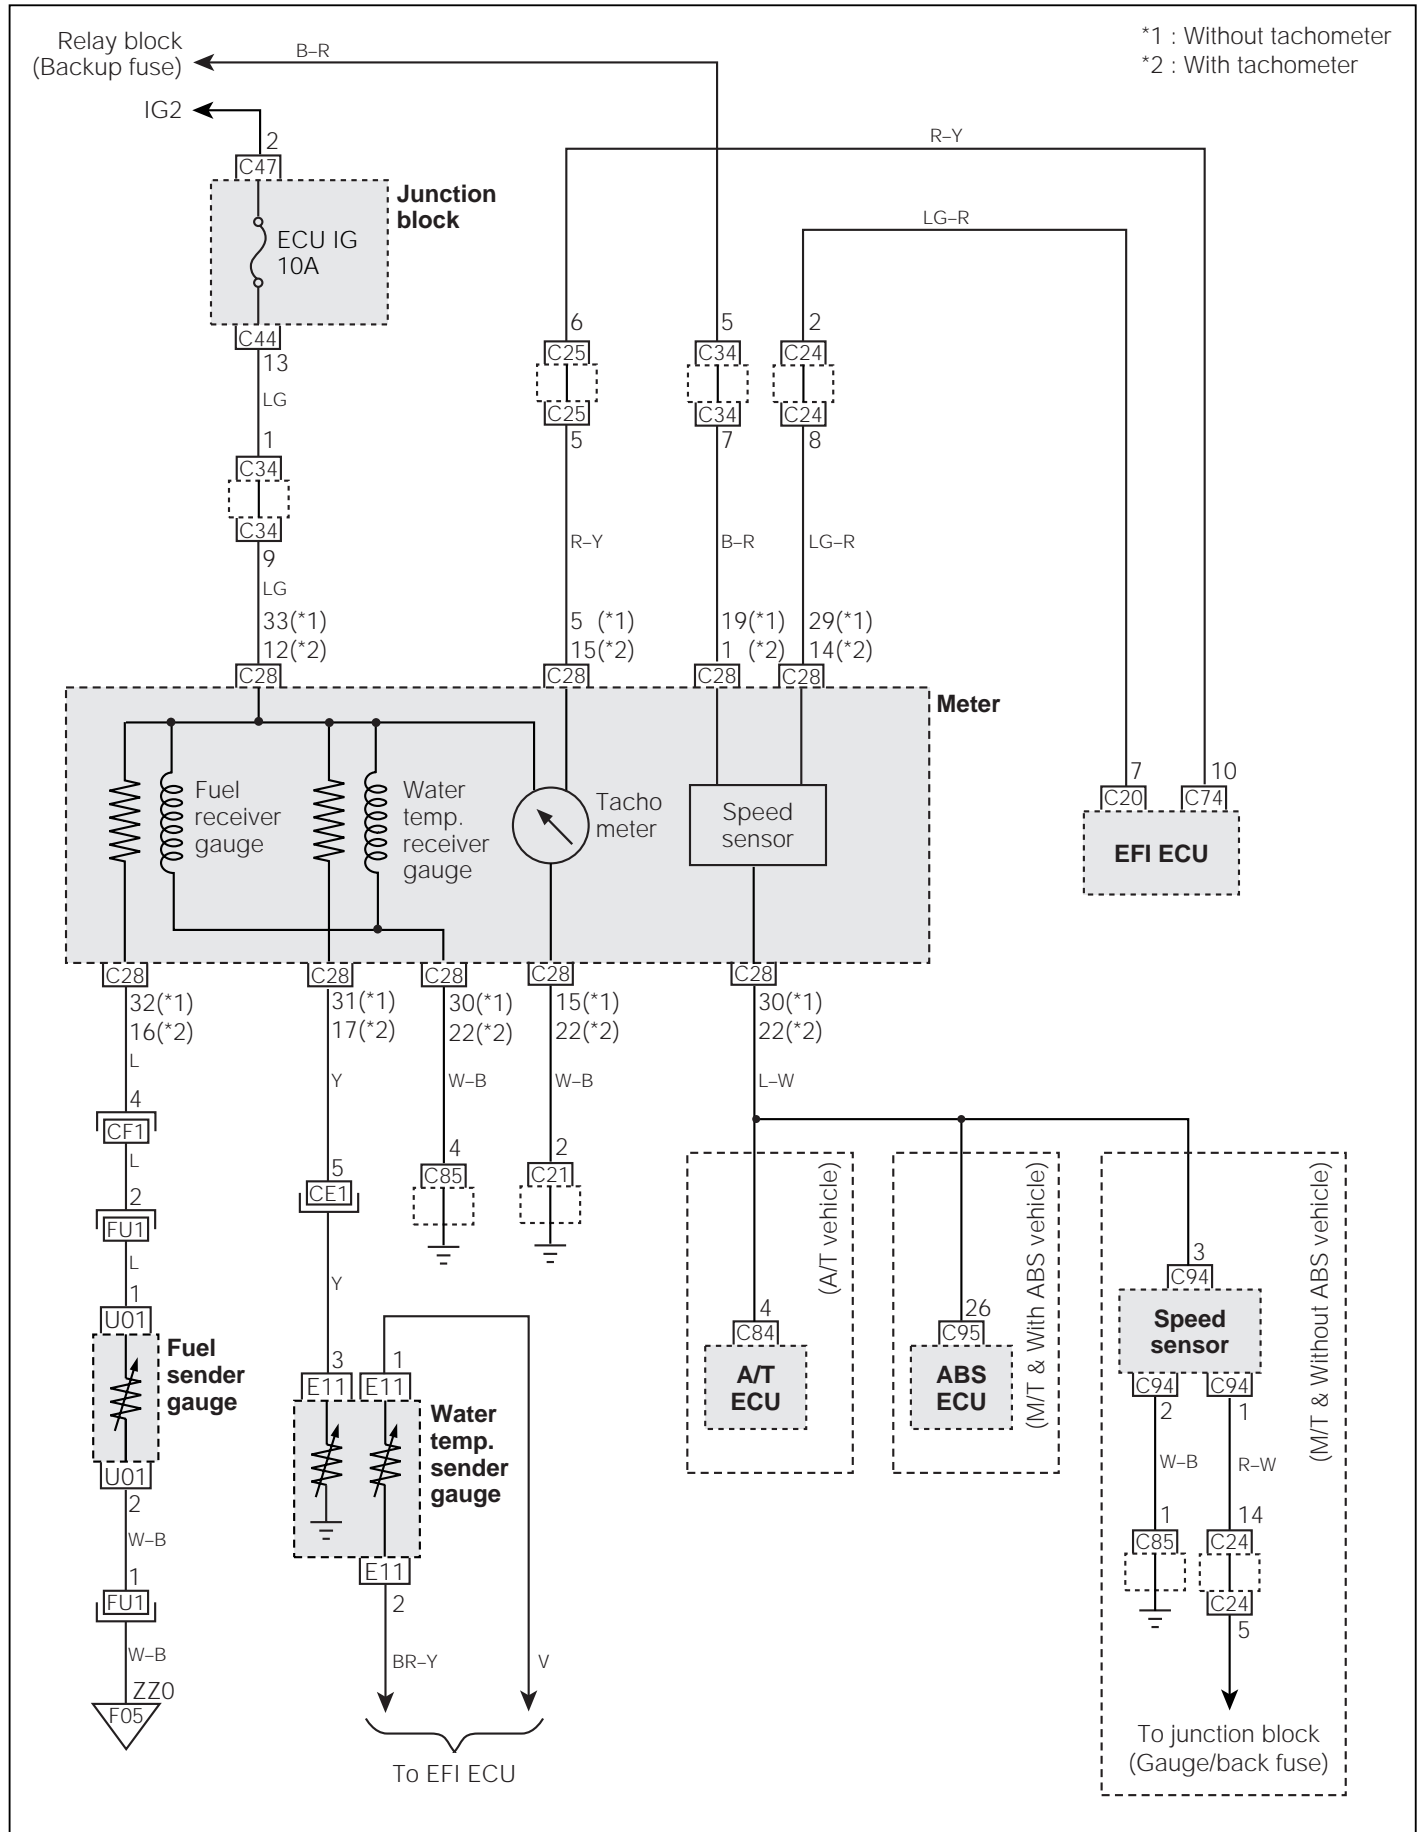
GAUGE, TACHOMETER & VEHICLE SPEED SENSOR (LHD / w/o METER CABLE)



WARNING LAMP (RHD)

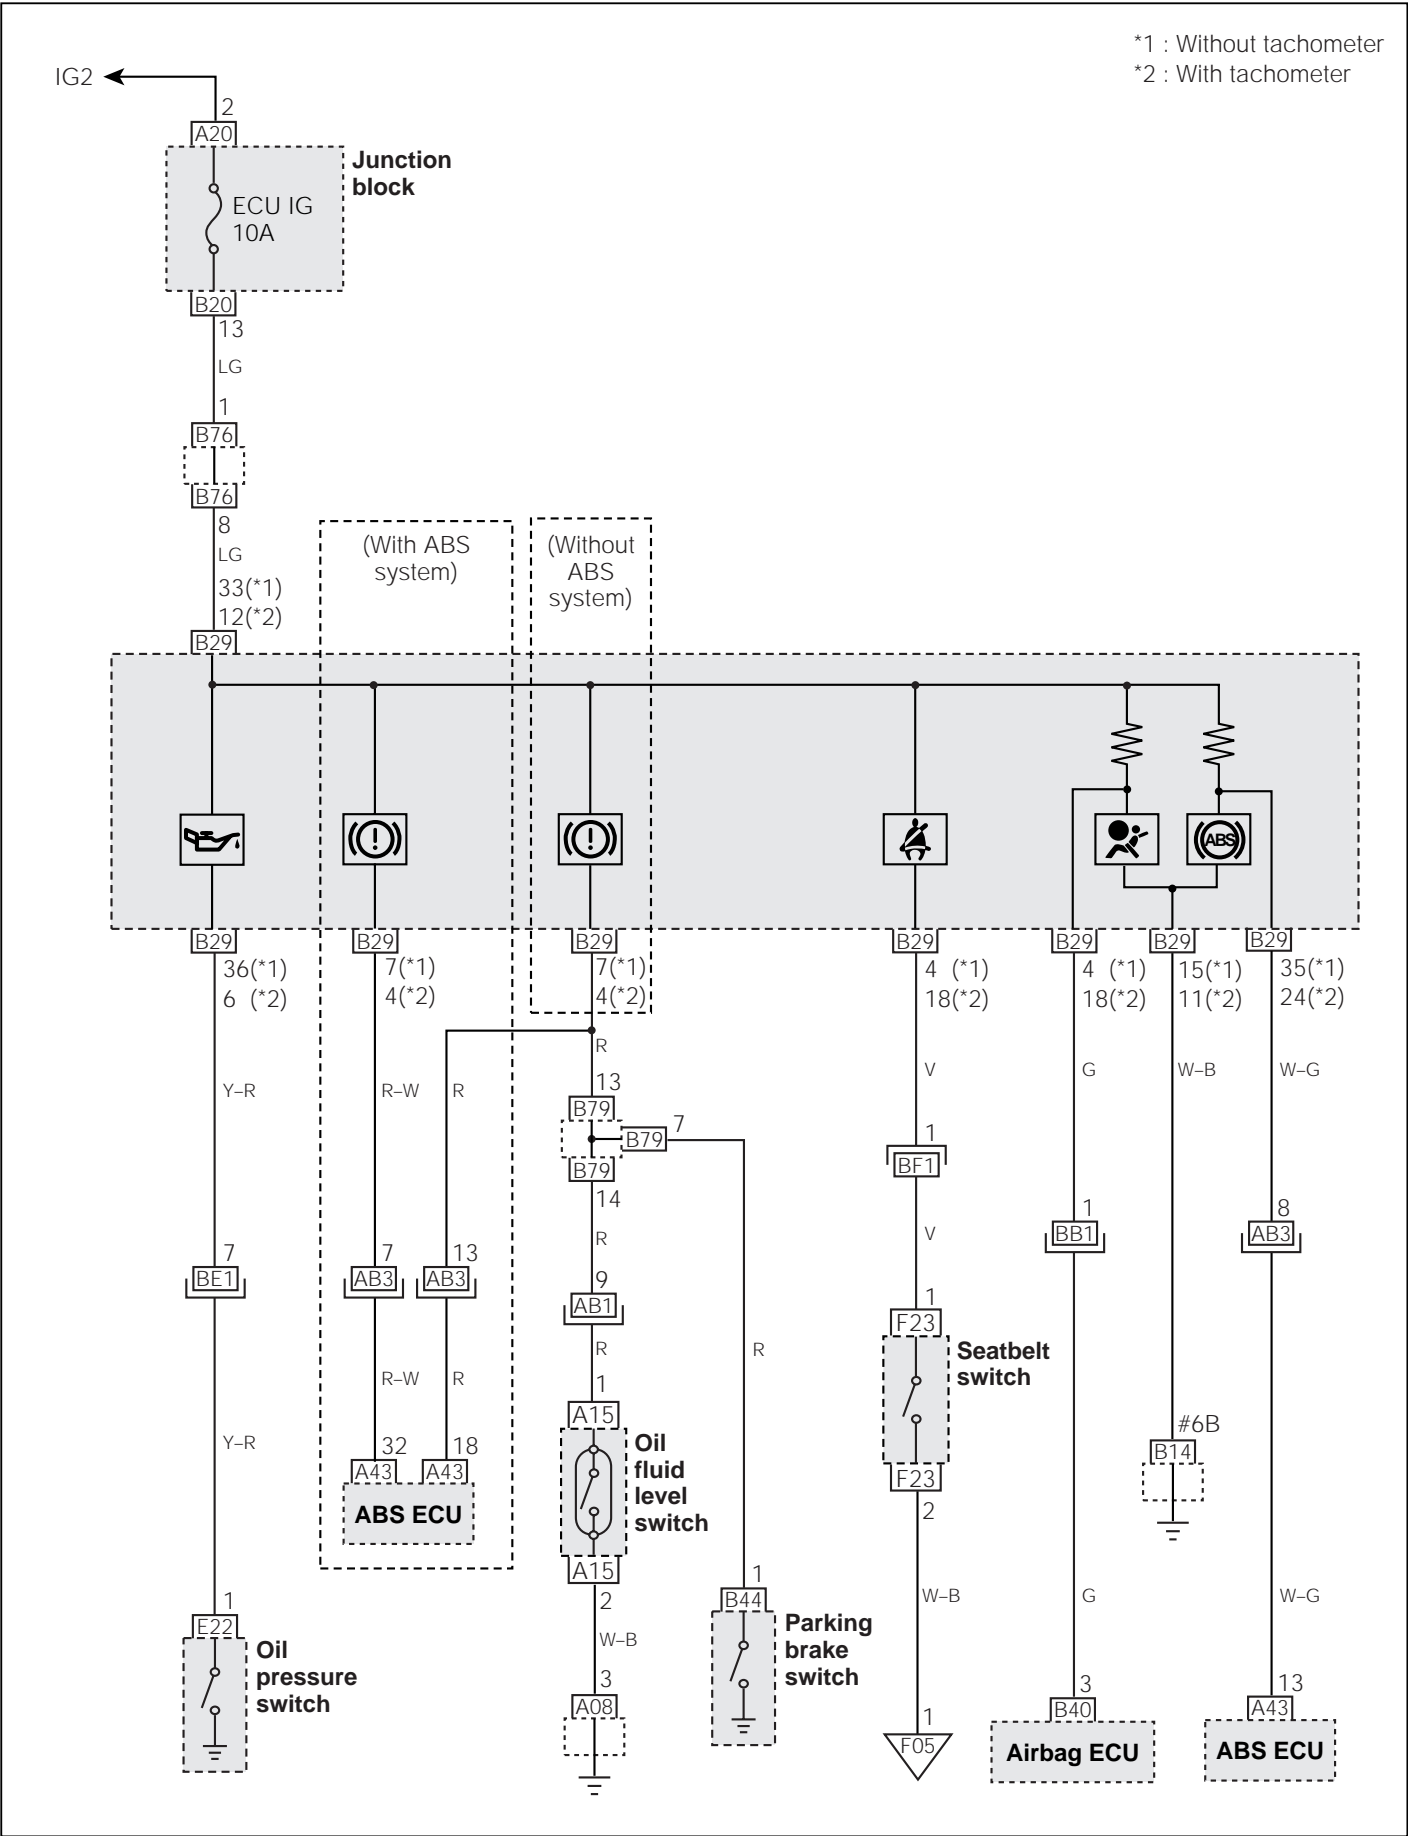


WARNING LAMP (LHD)

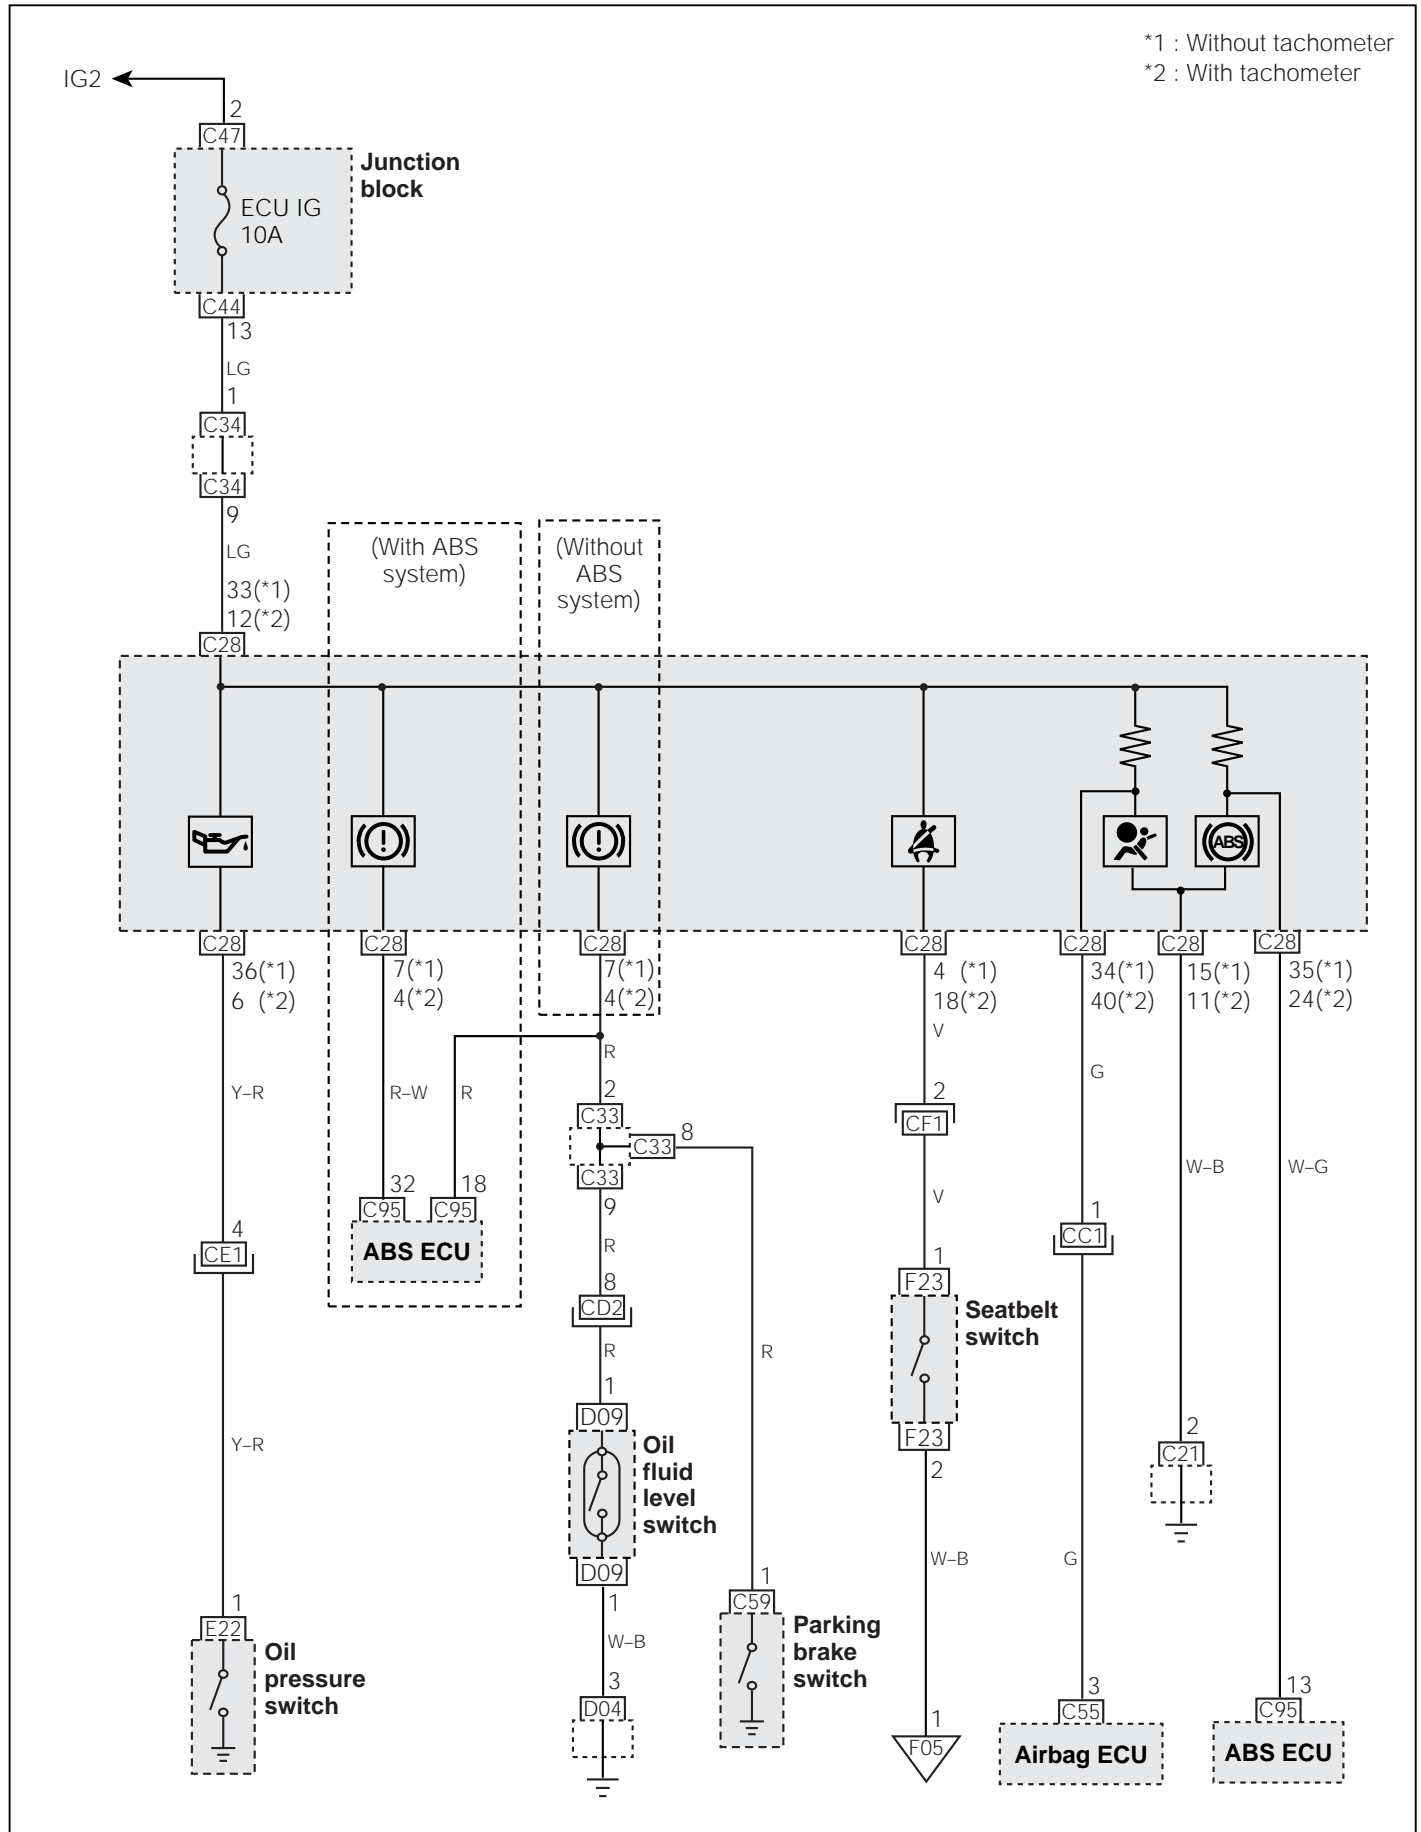


HW-72

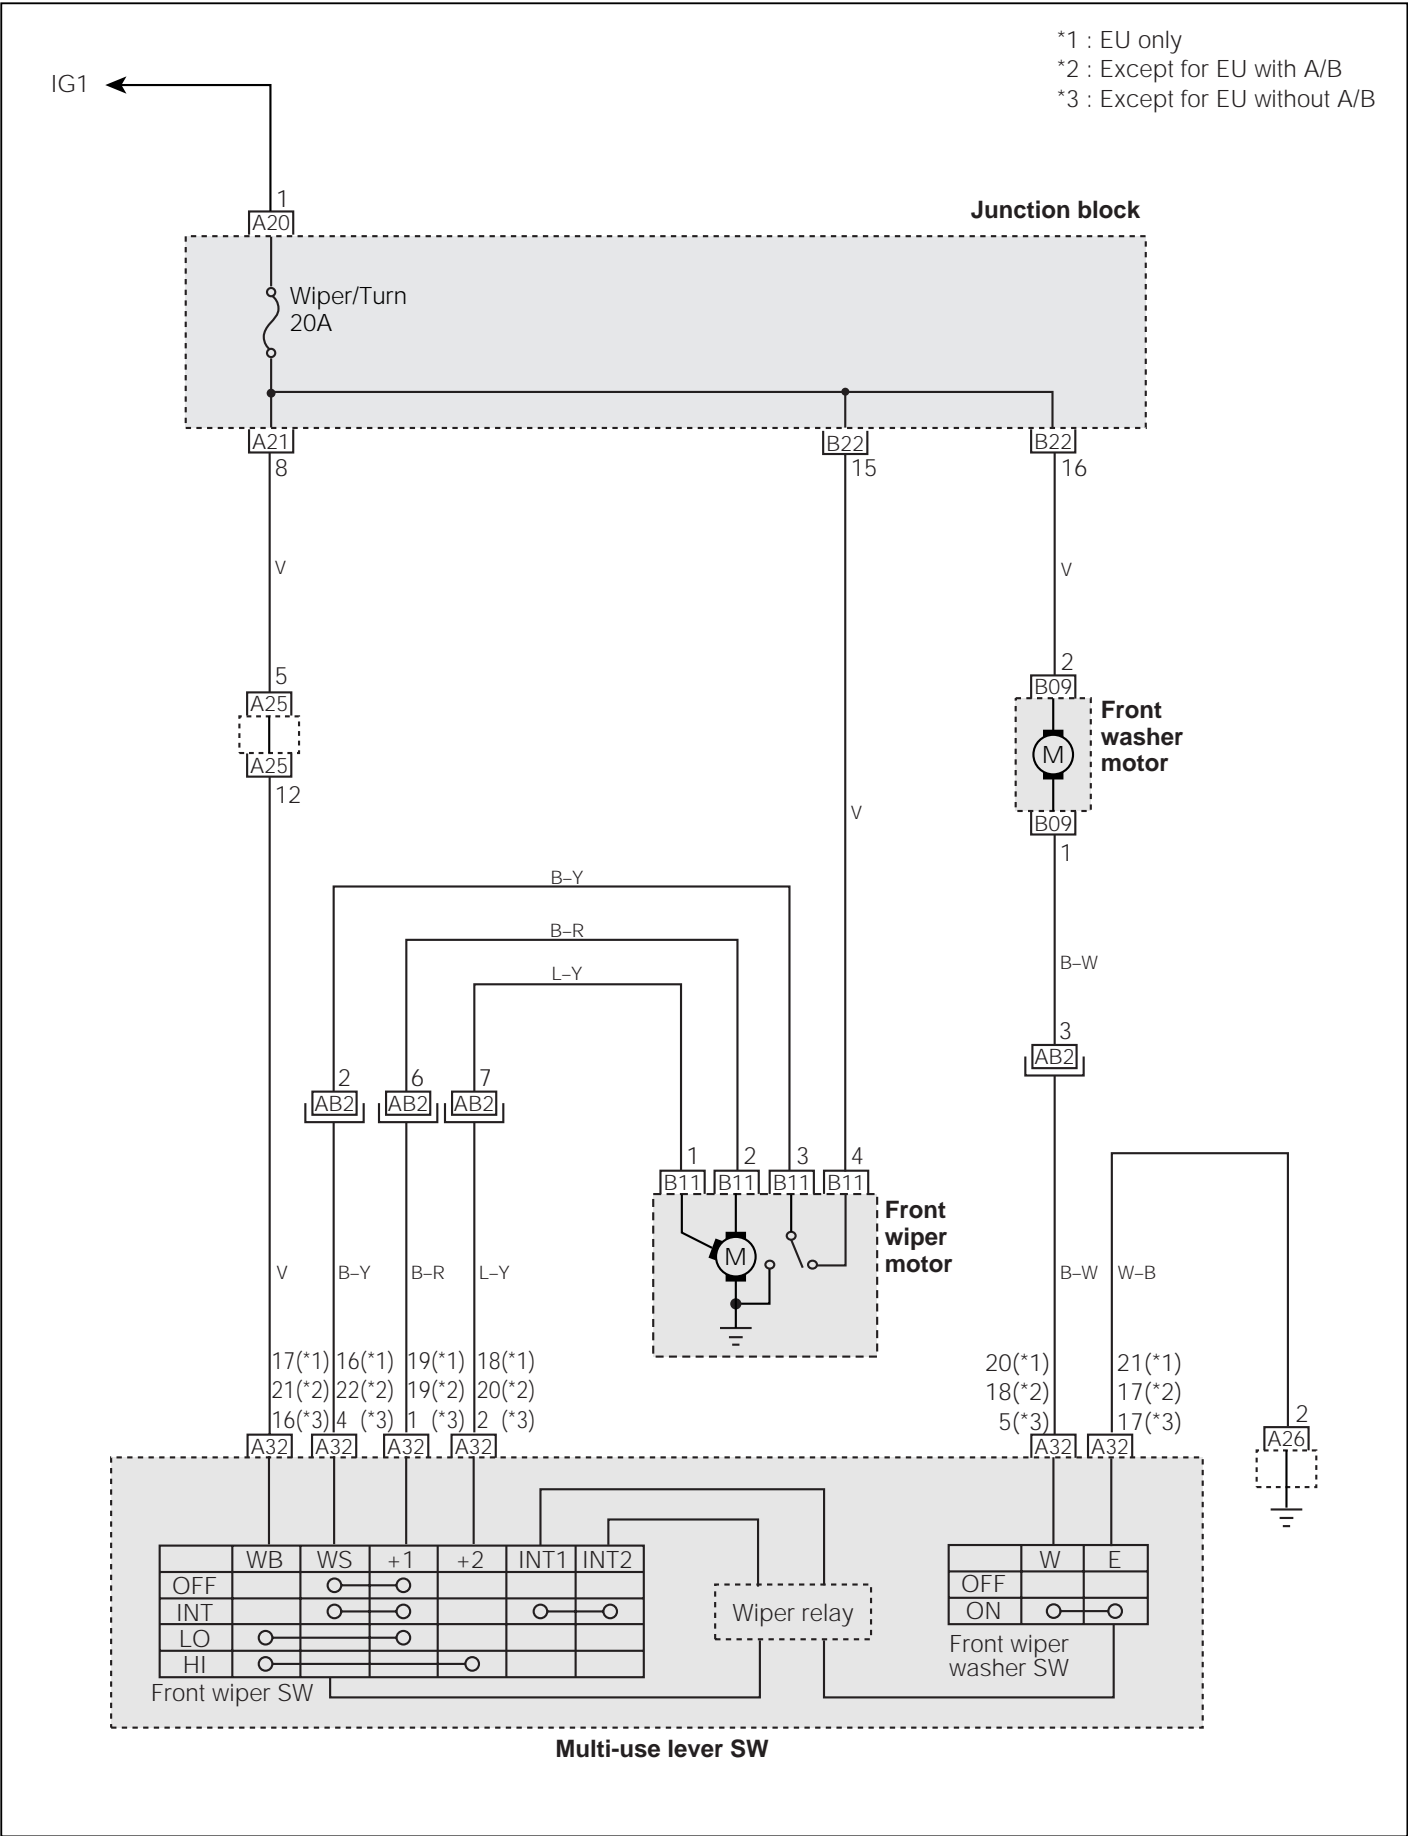
FRONT WIPER & WASHER (RHD)




FRONT WIPER & WASHER (LHD)

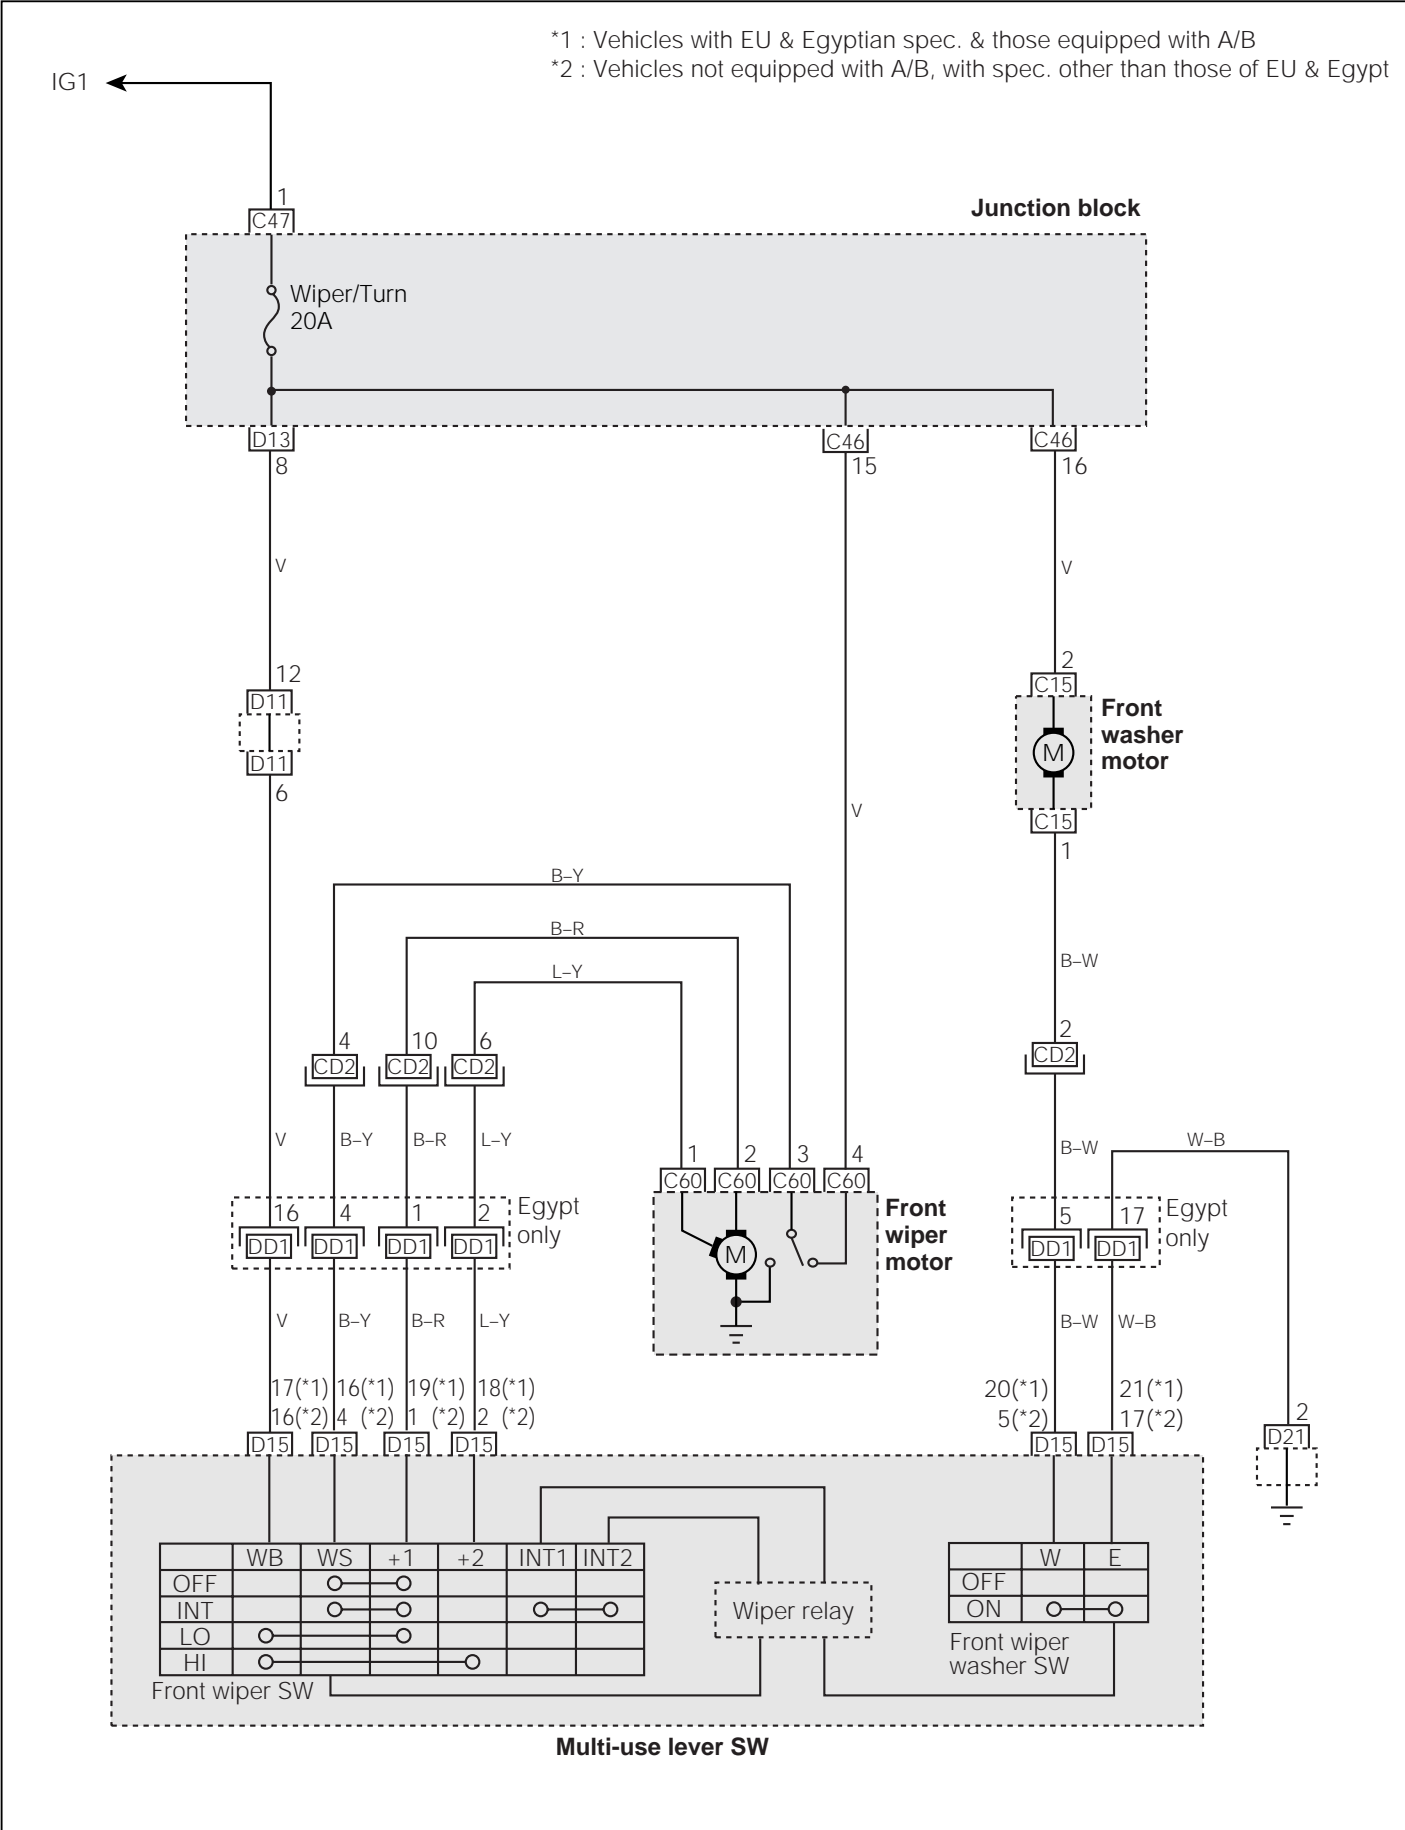


REAR WIPER & WASHER (RHD)

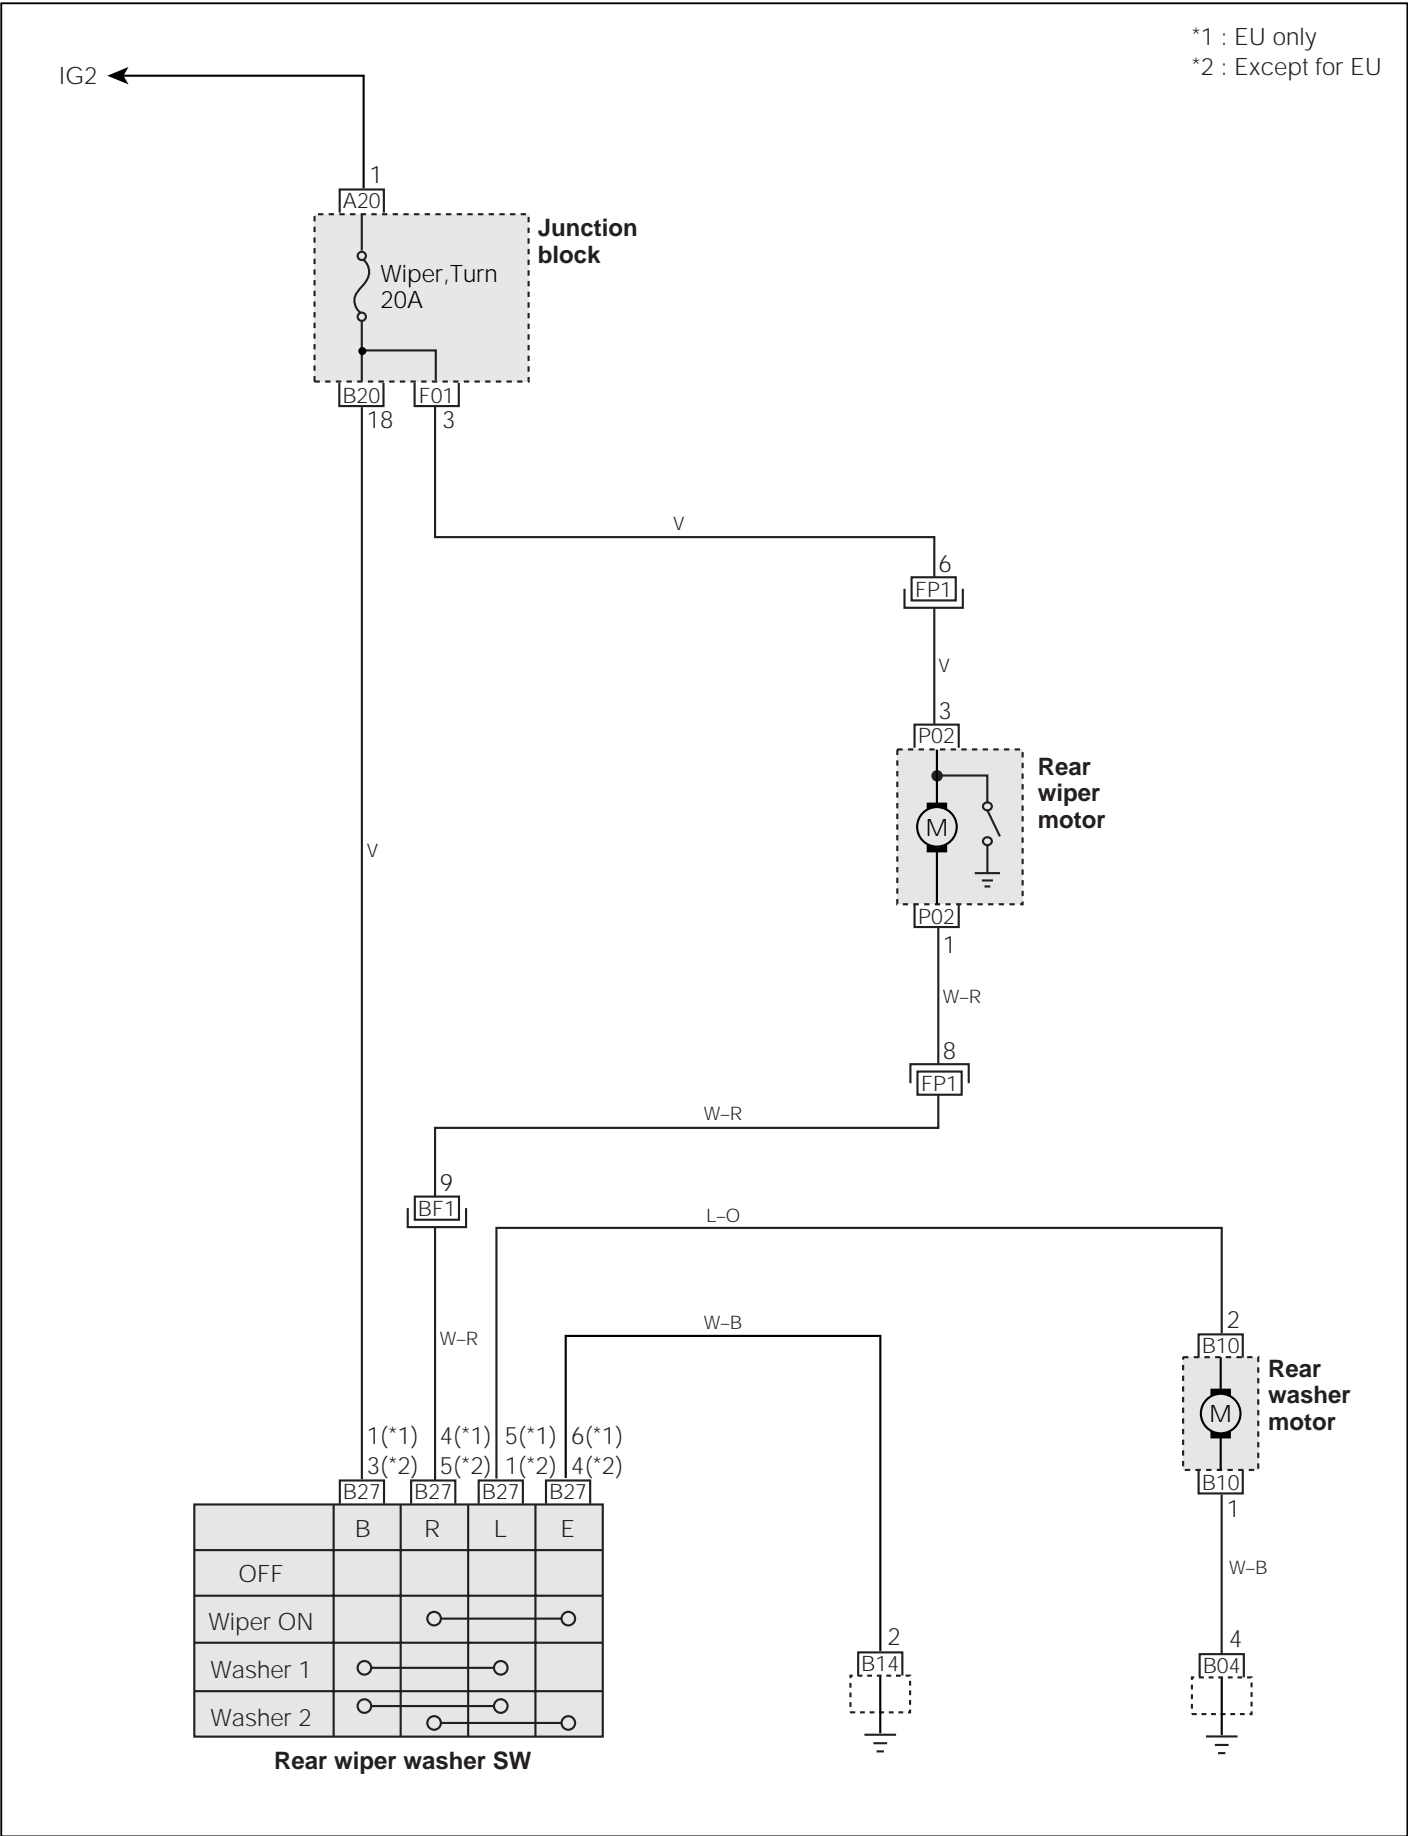


REAR WIPER & WASHER (LHD)

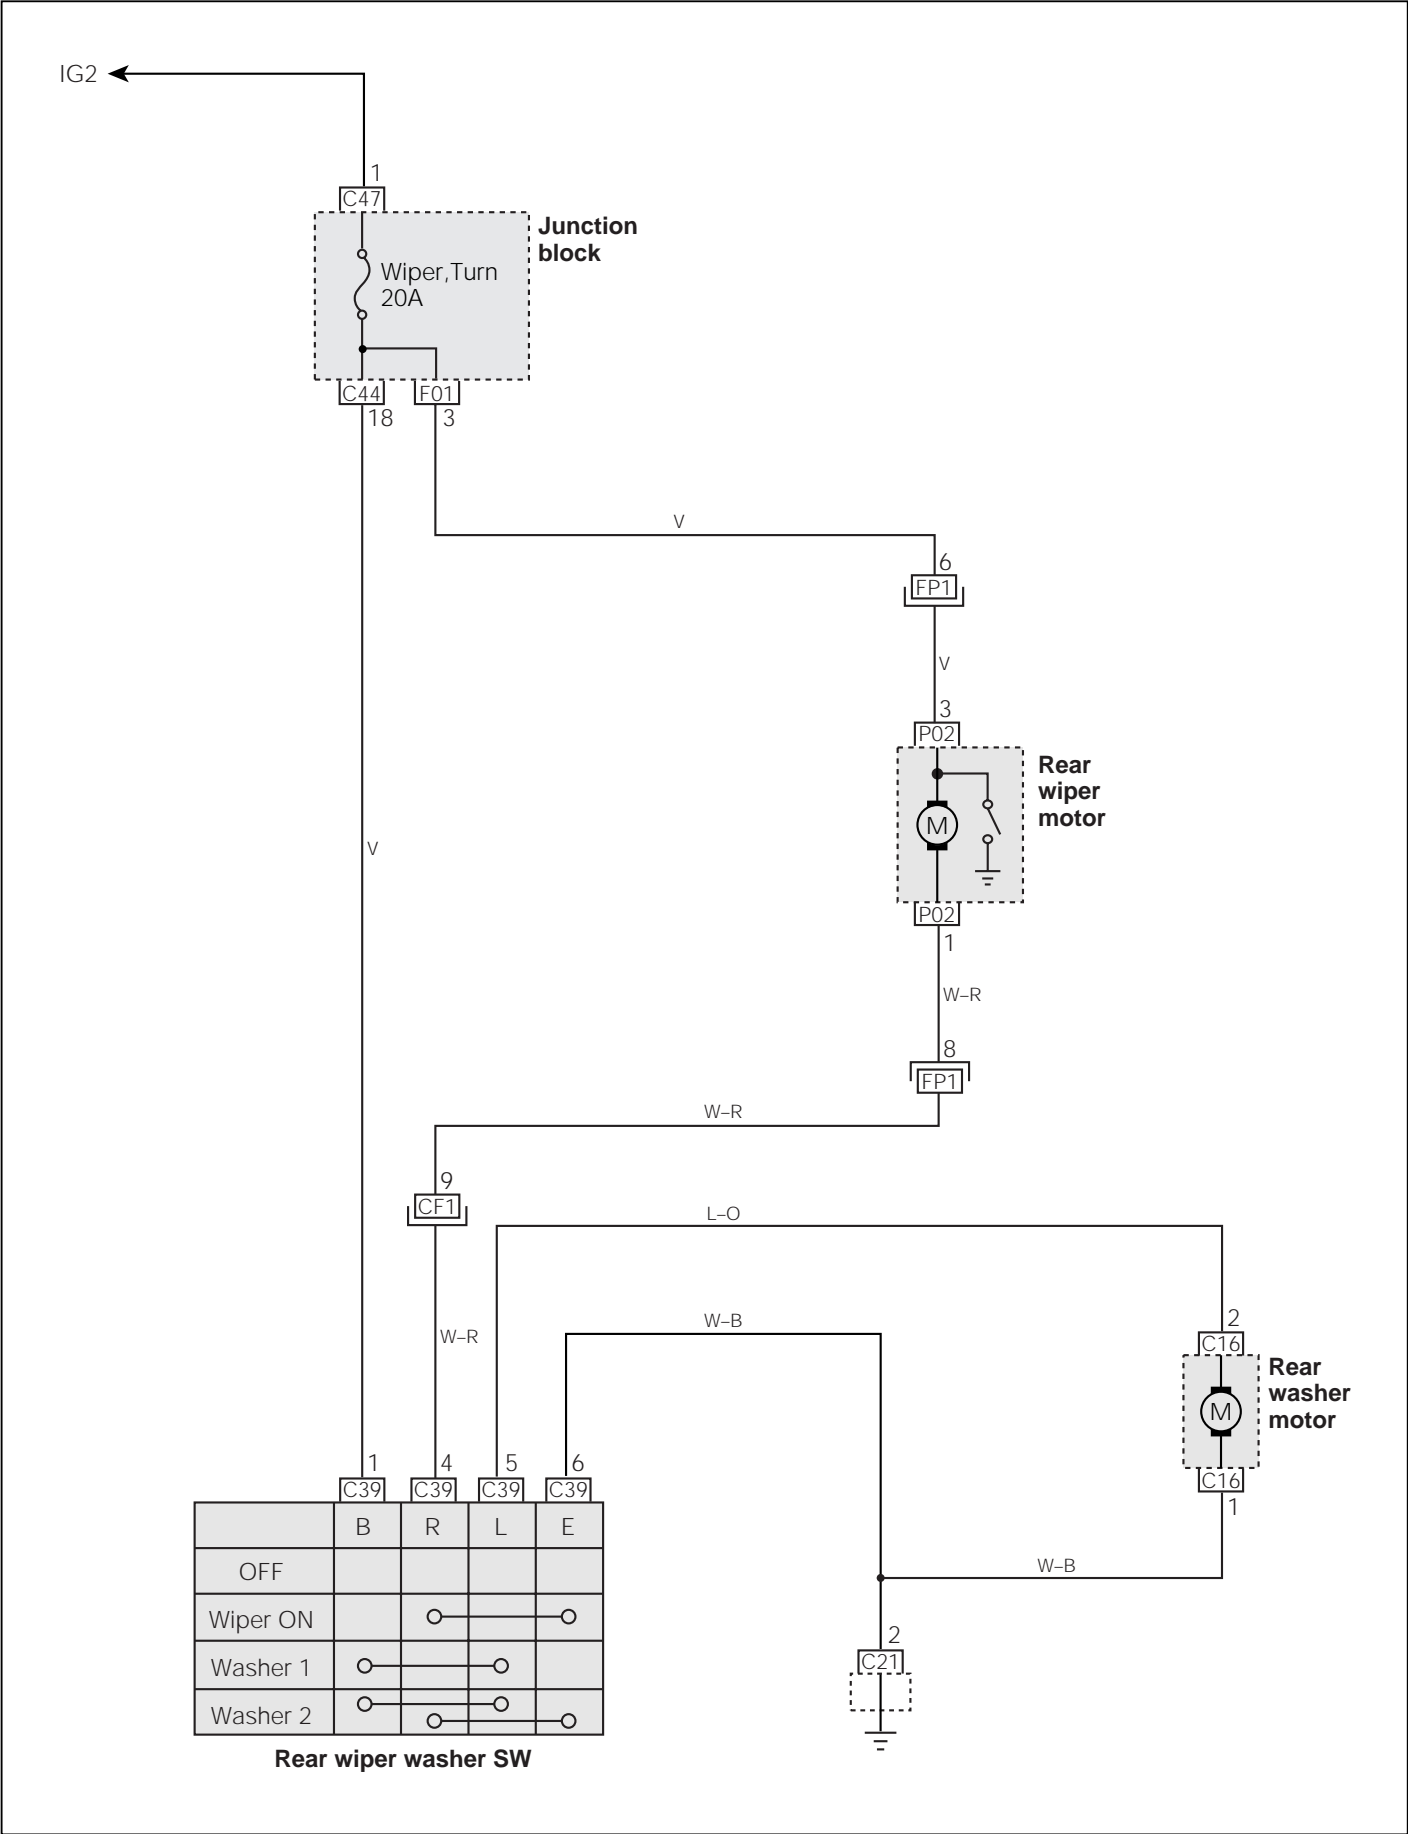


DEFOGGER (RHD)

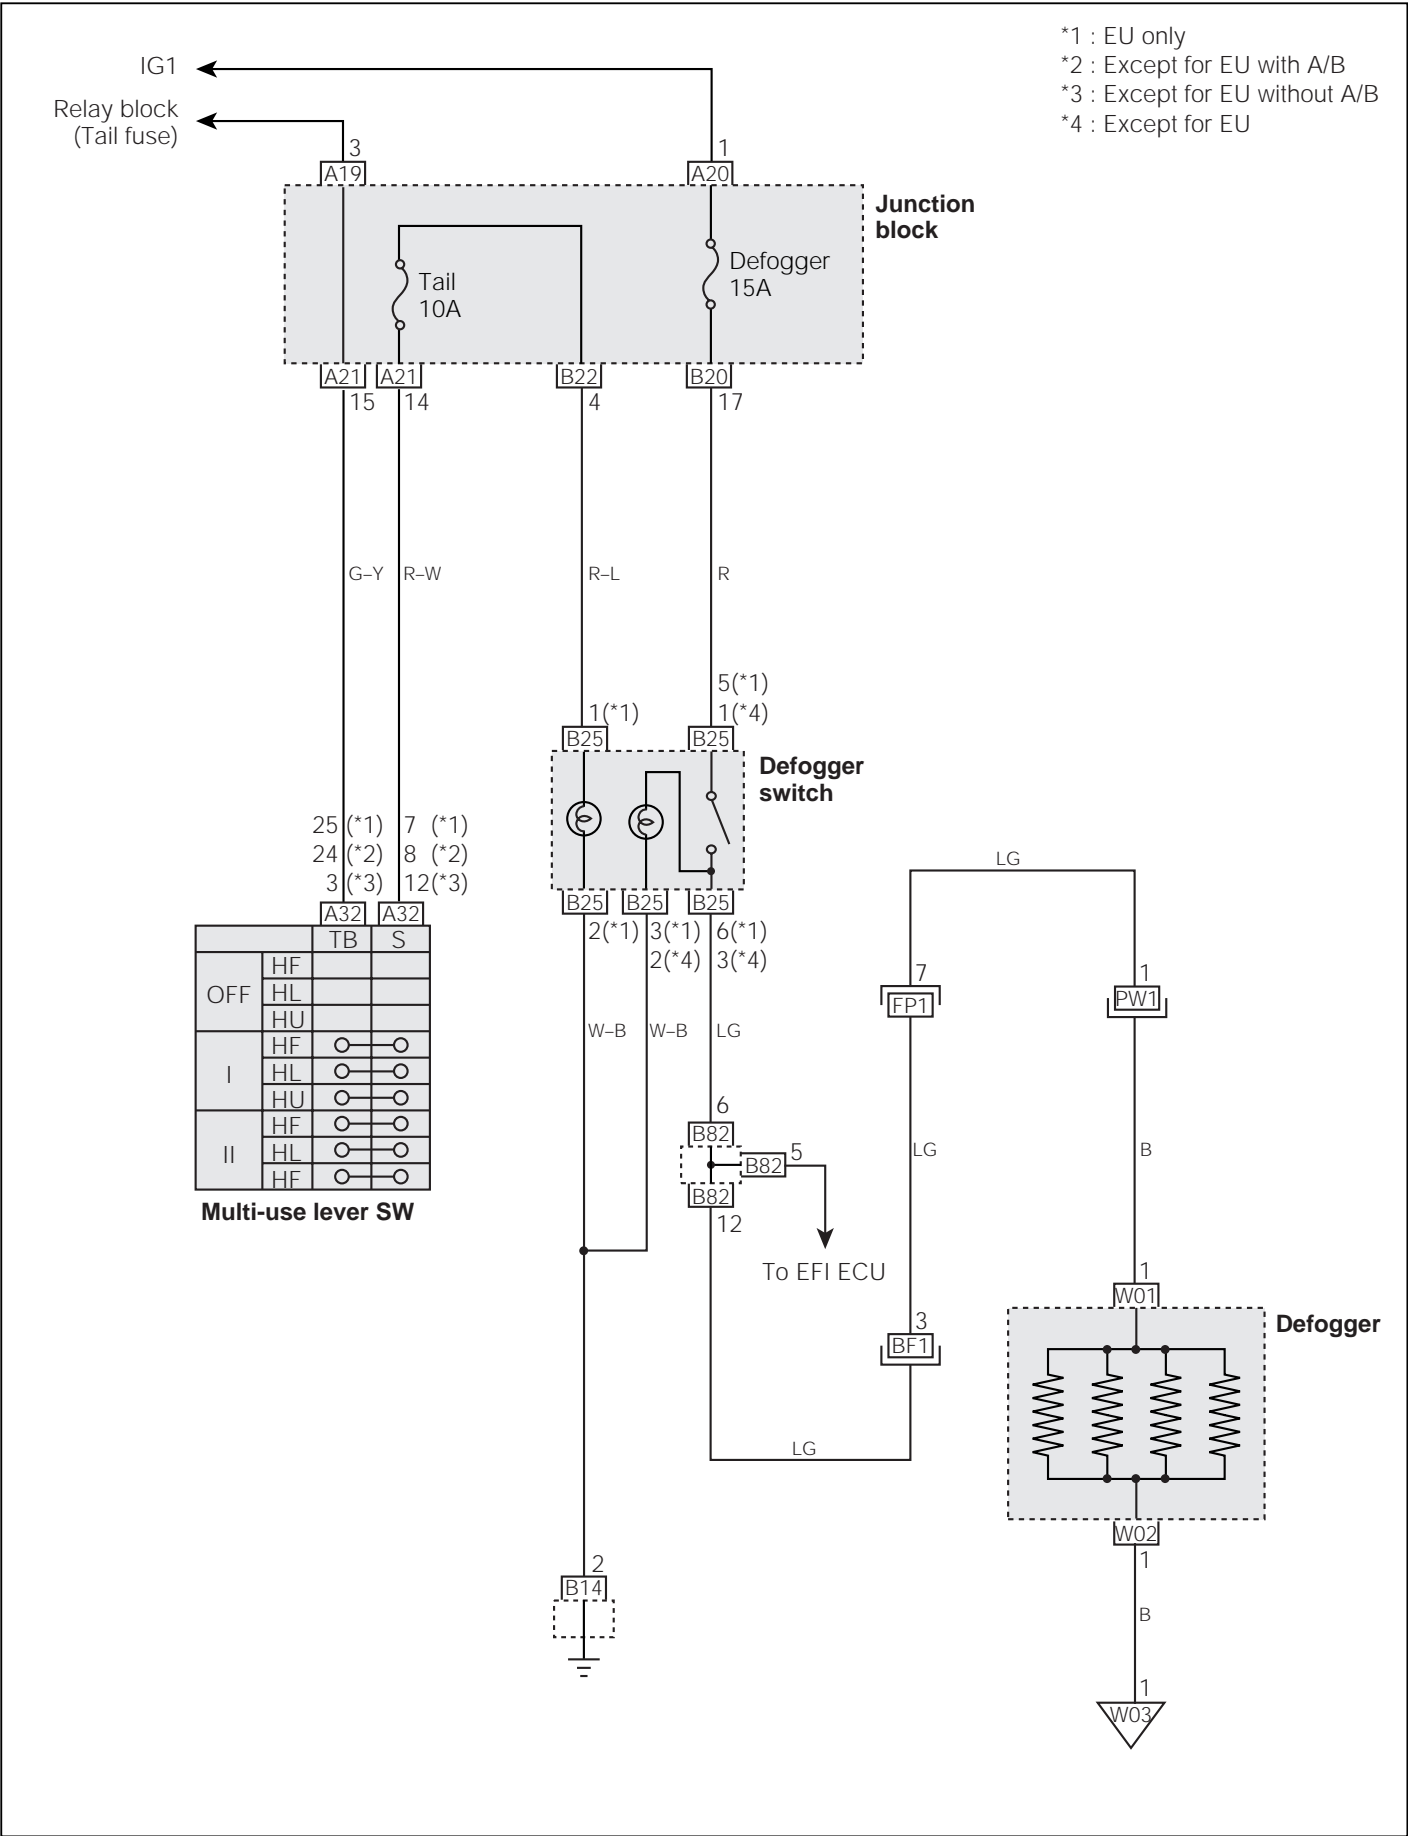


DEFOGGER (LHD)

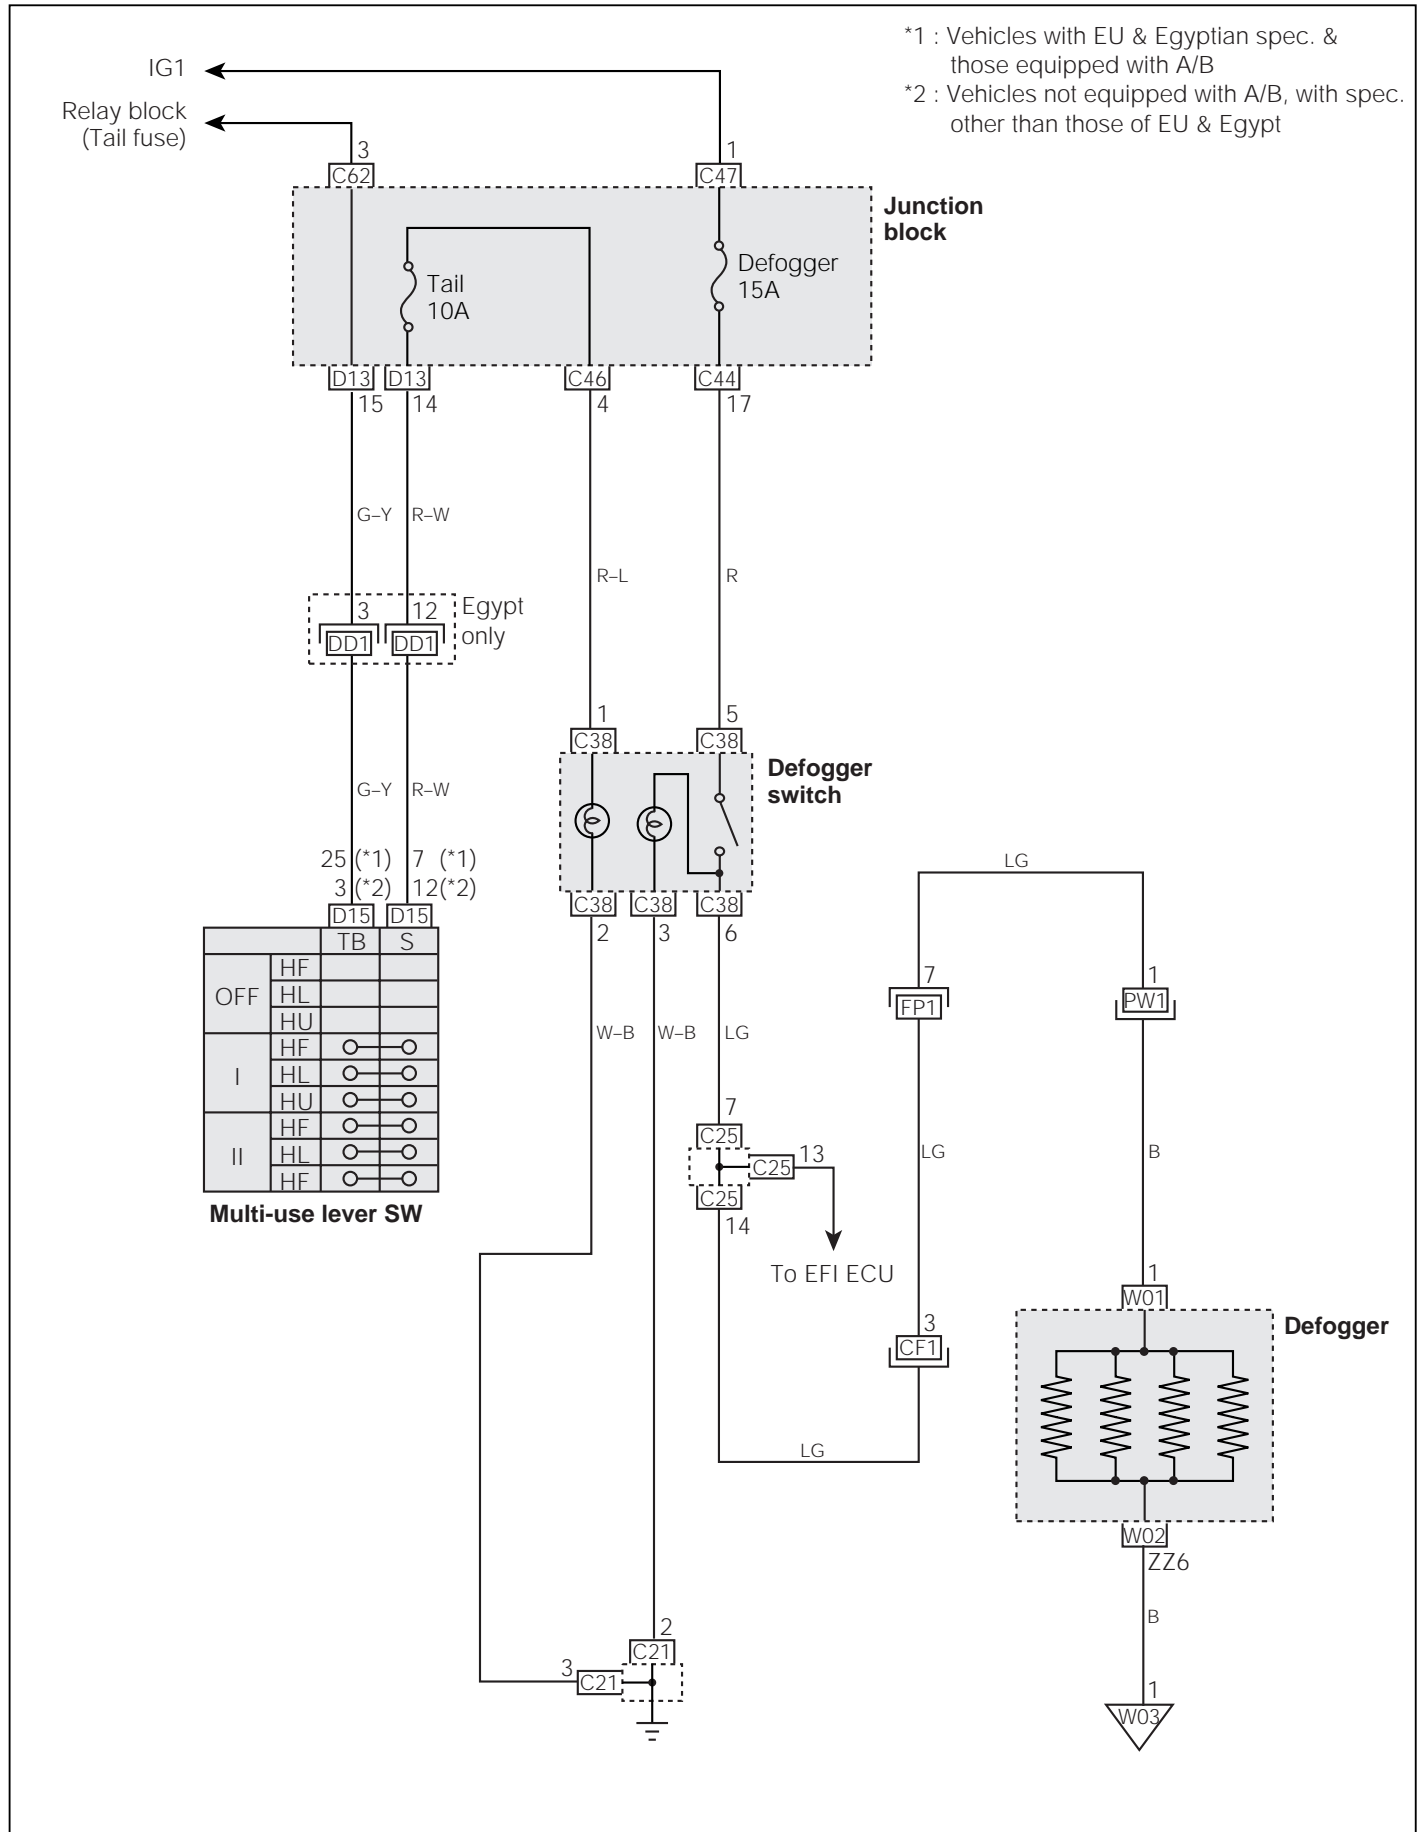

REAR VIEW MIRROR (RHD)

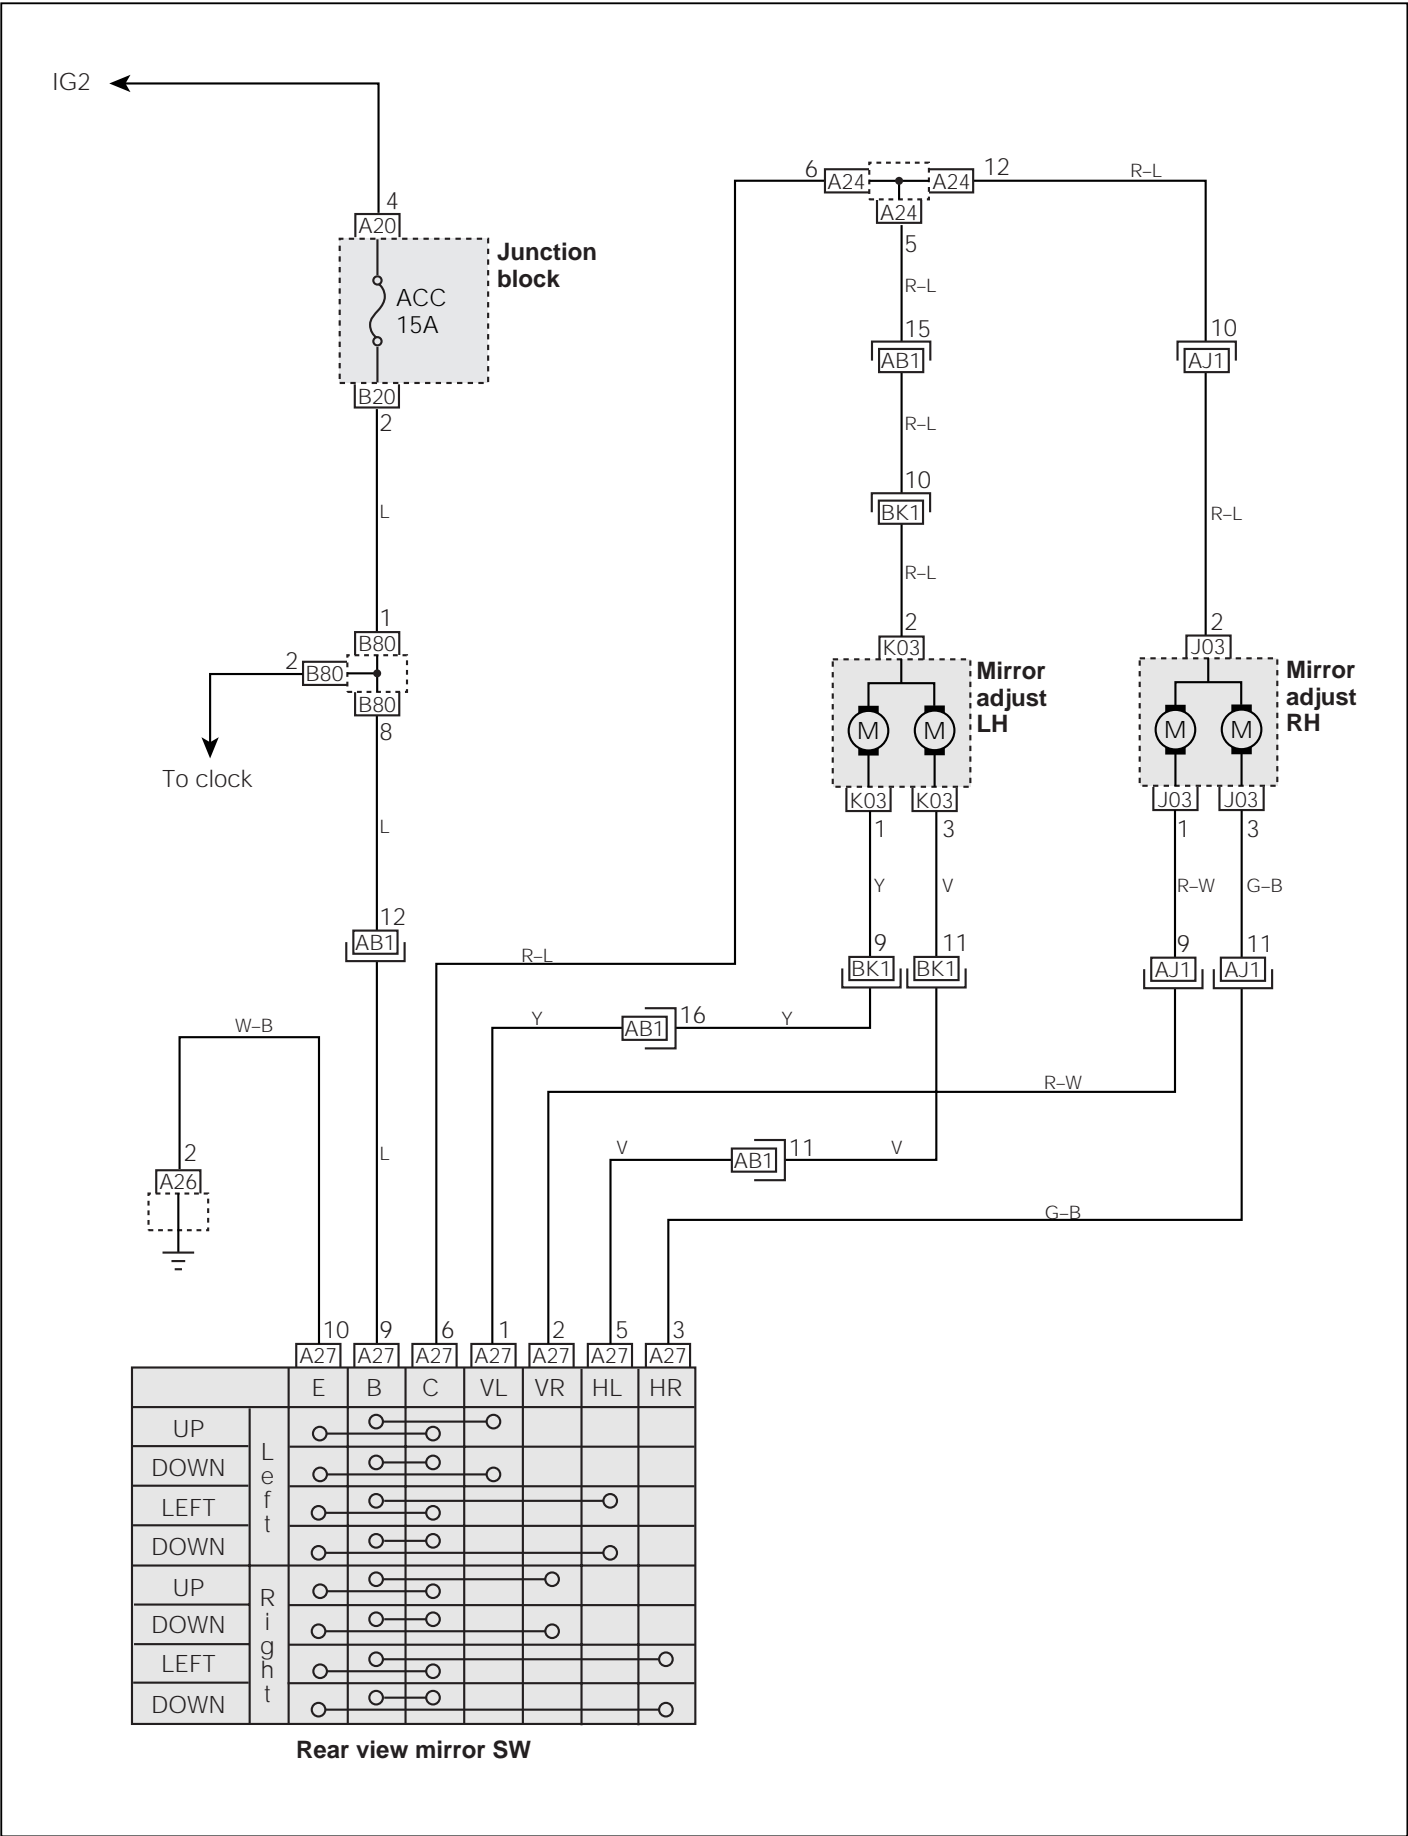


REAR VIEW MIRROR (LHD)

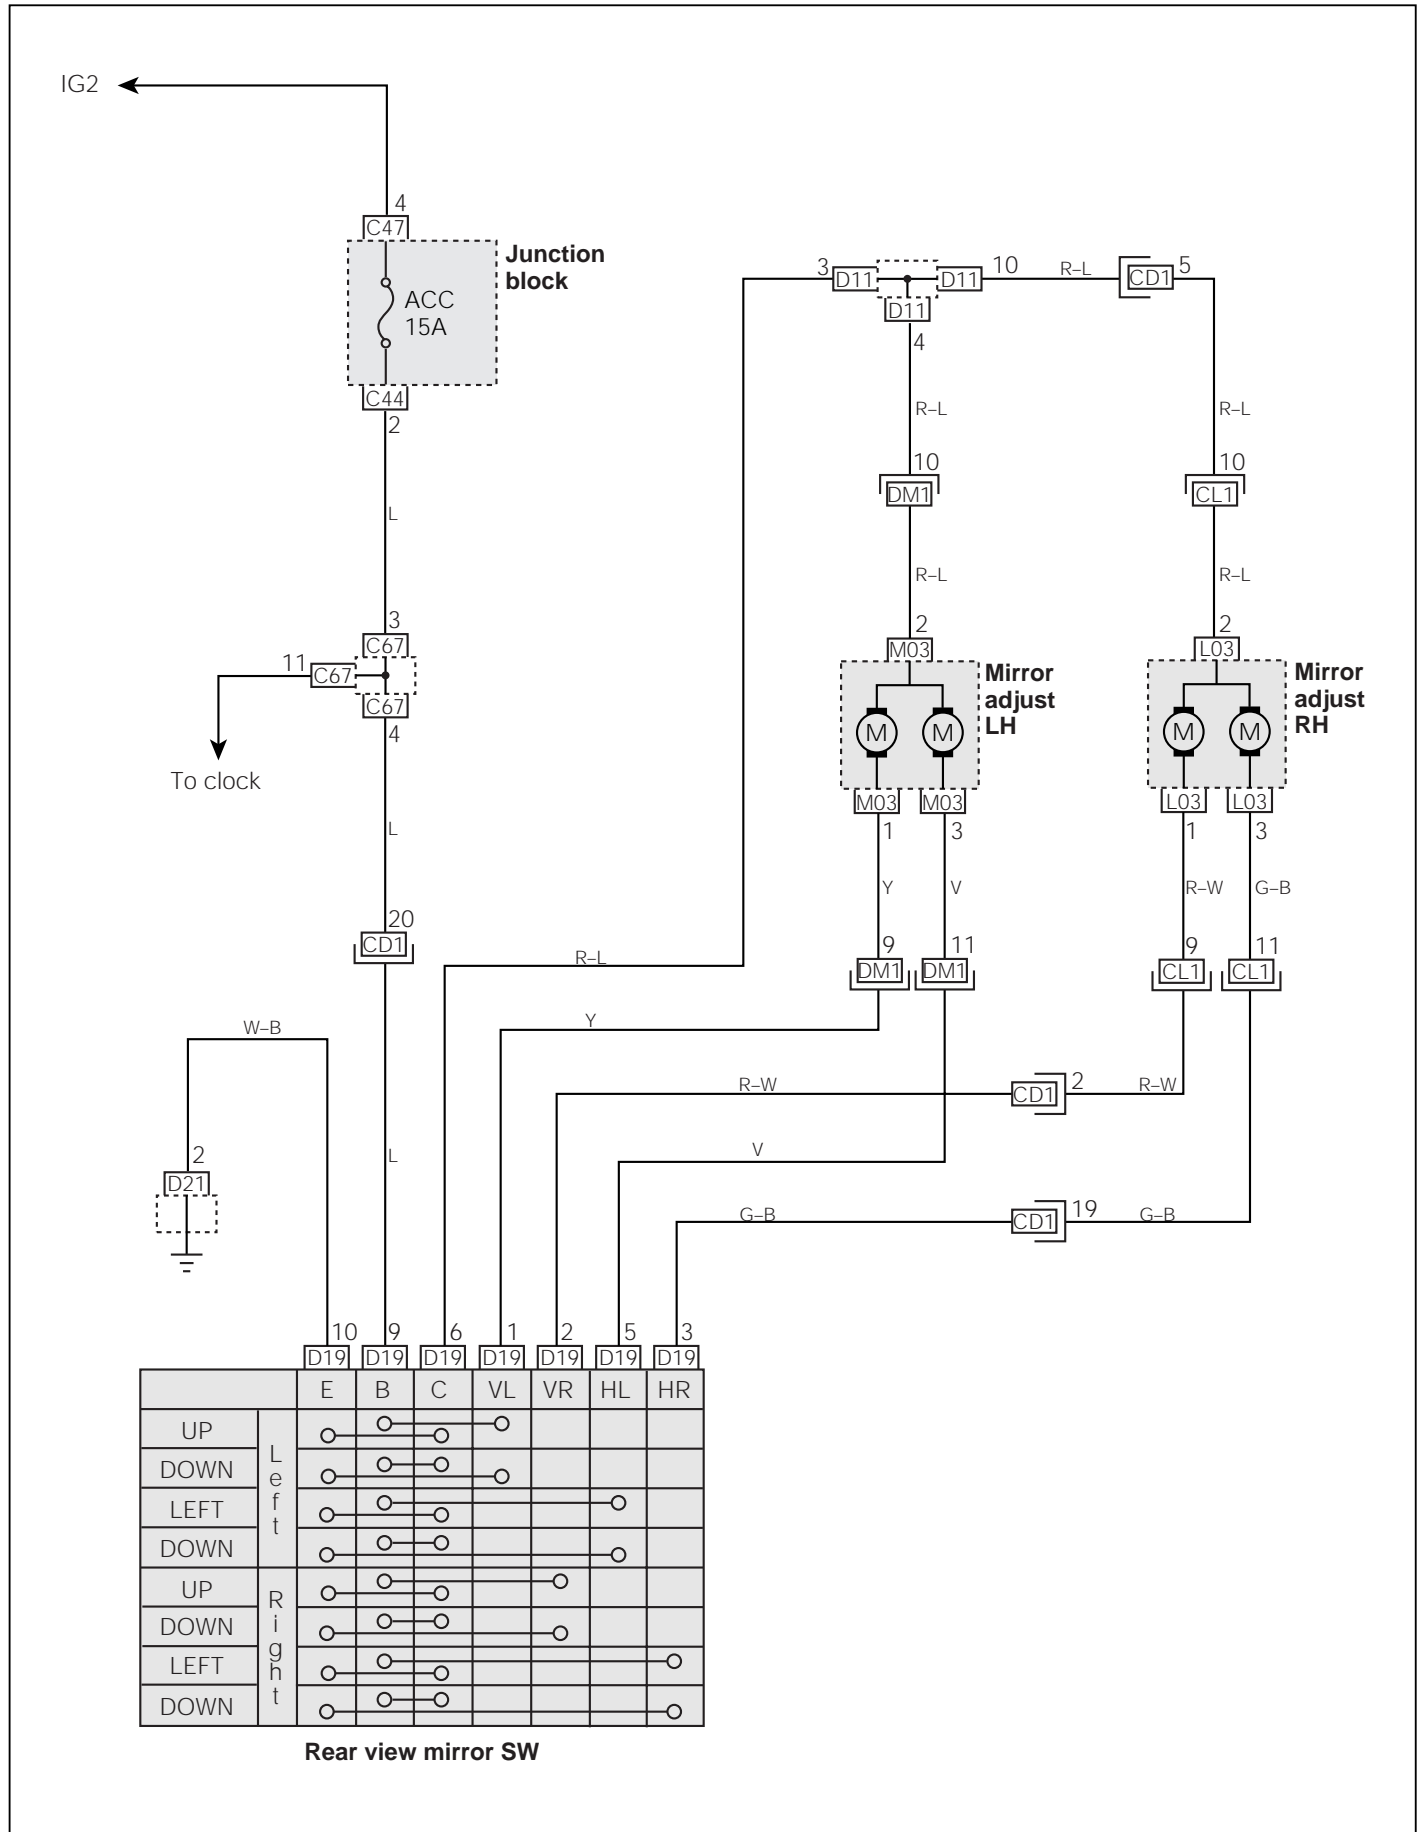


HW-80

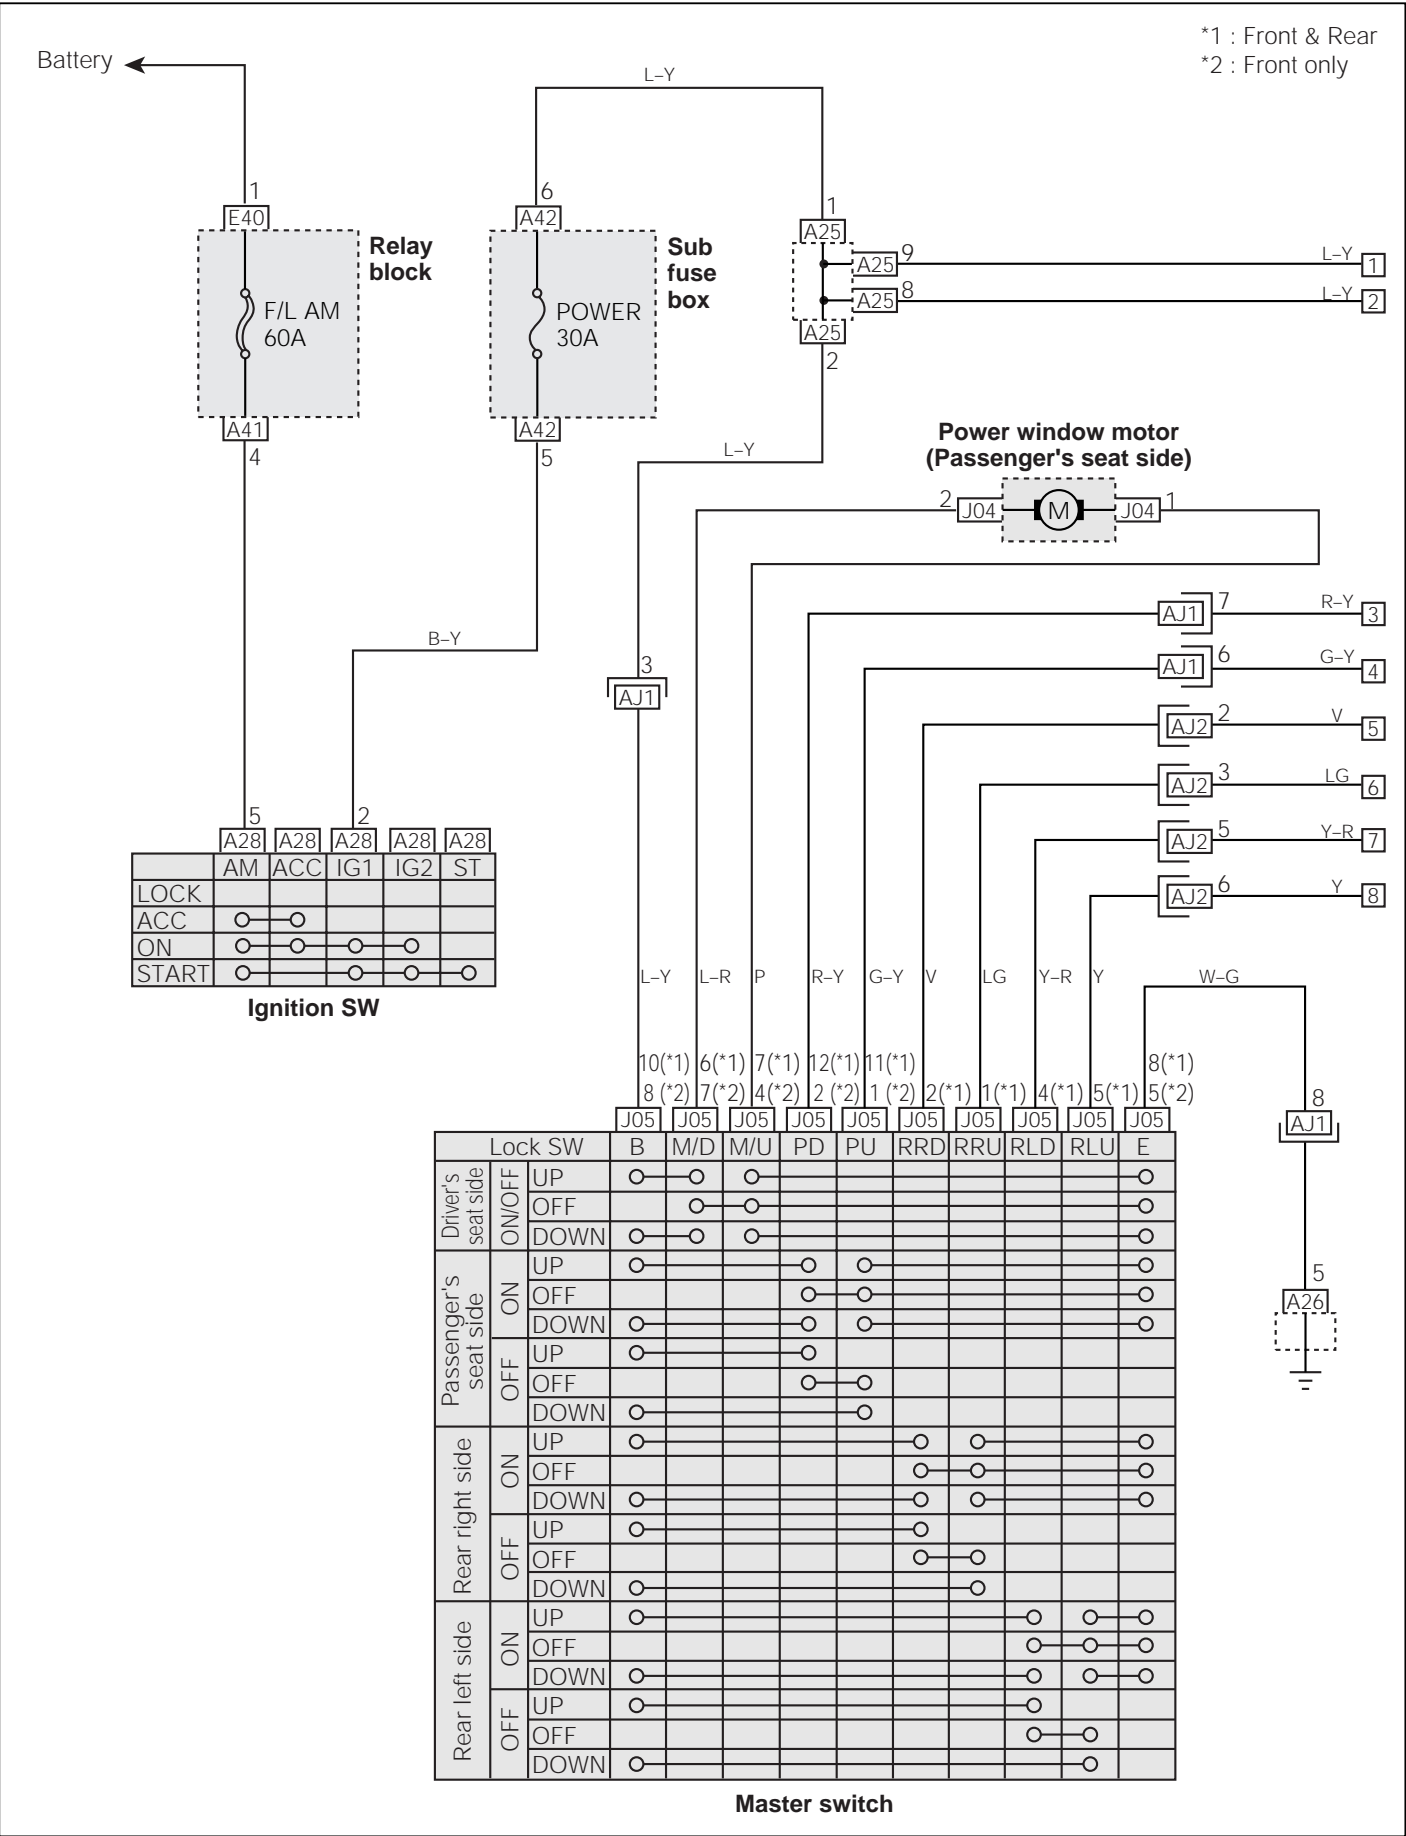
POWER WINDOW (RHD) -1



POWER WINDOW (RHD) -2

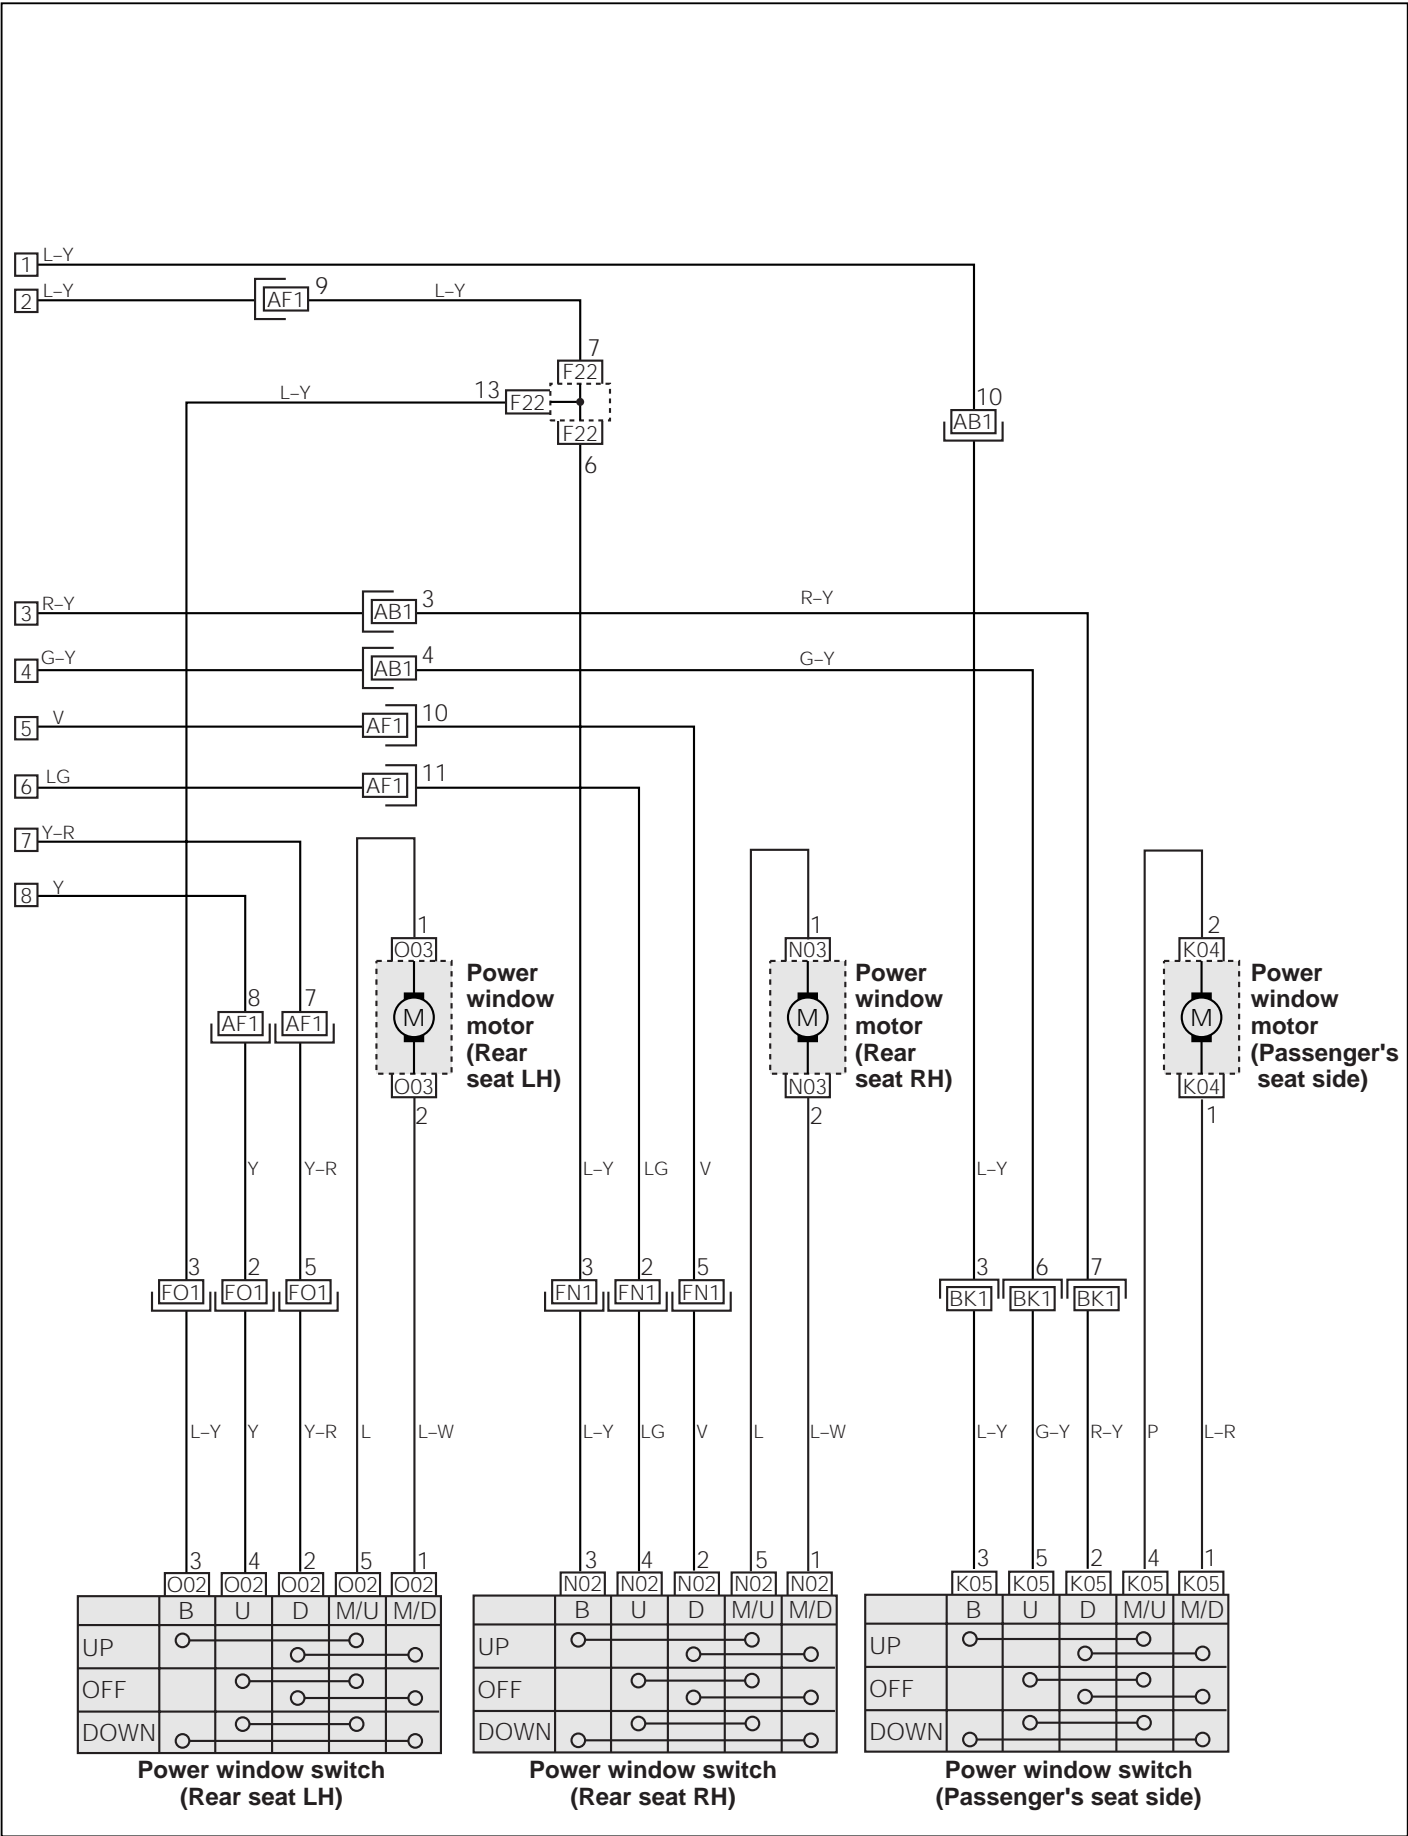

POWER WINDOW (LHD)

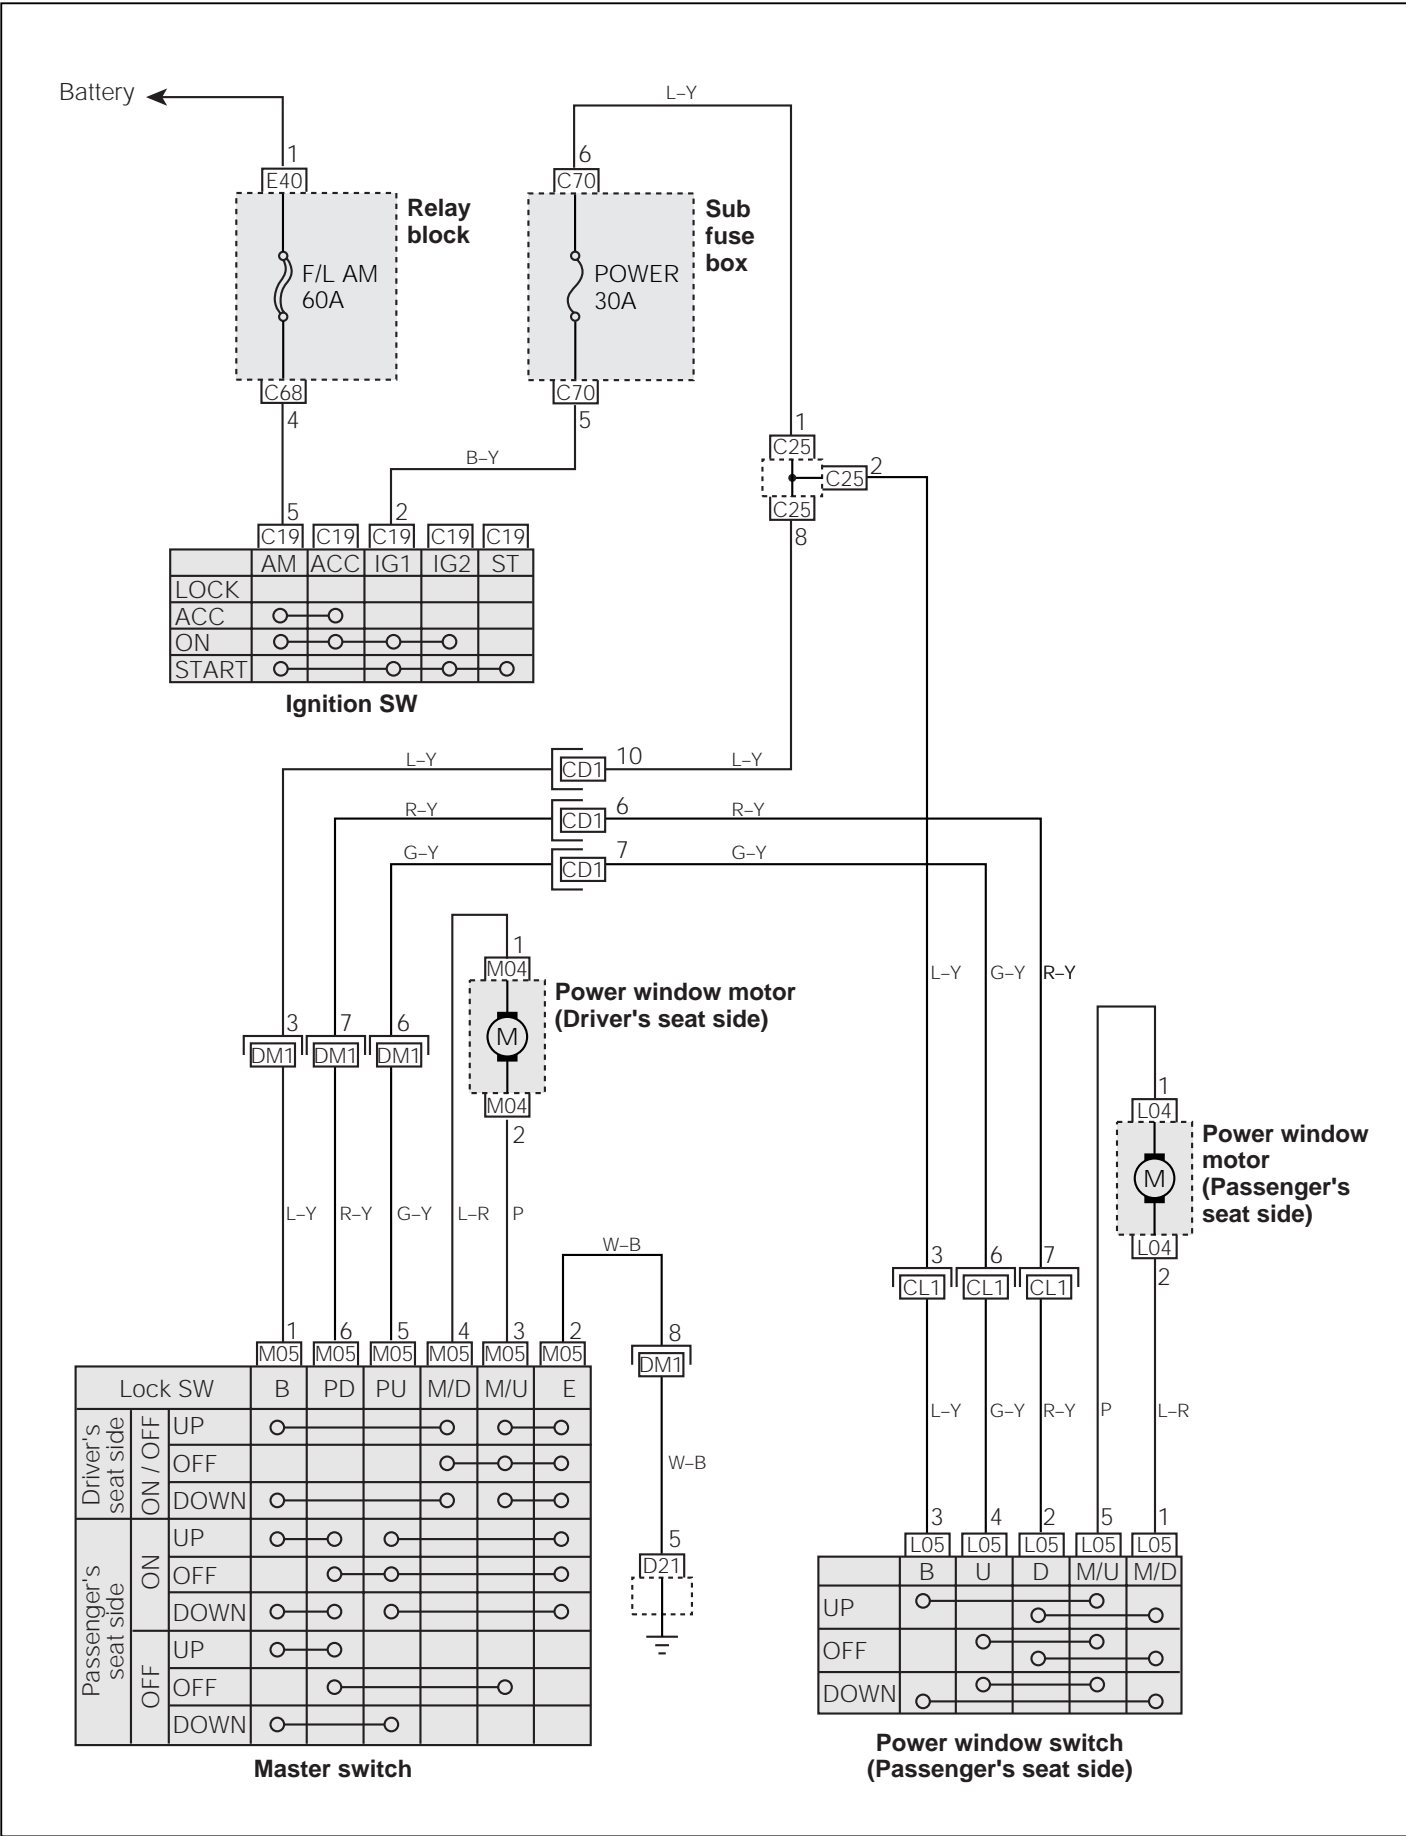


MEMO


Handwriting practice lines consisting of 25 sets of three horizontal dashed lines.


HW-84

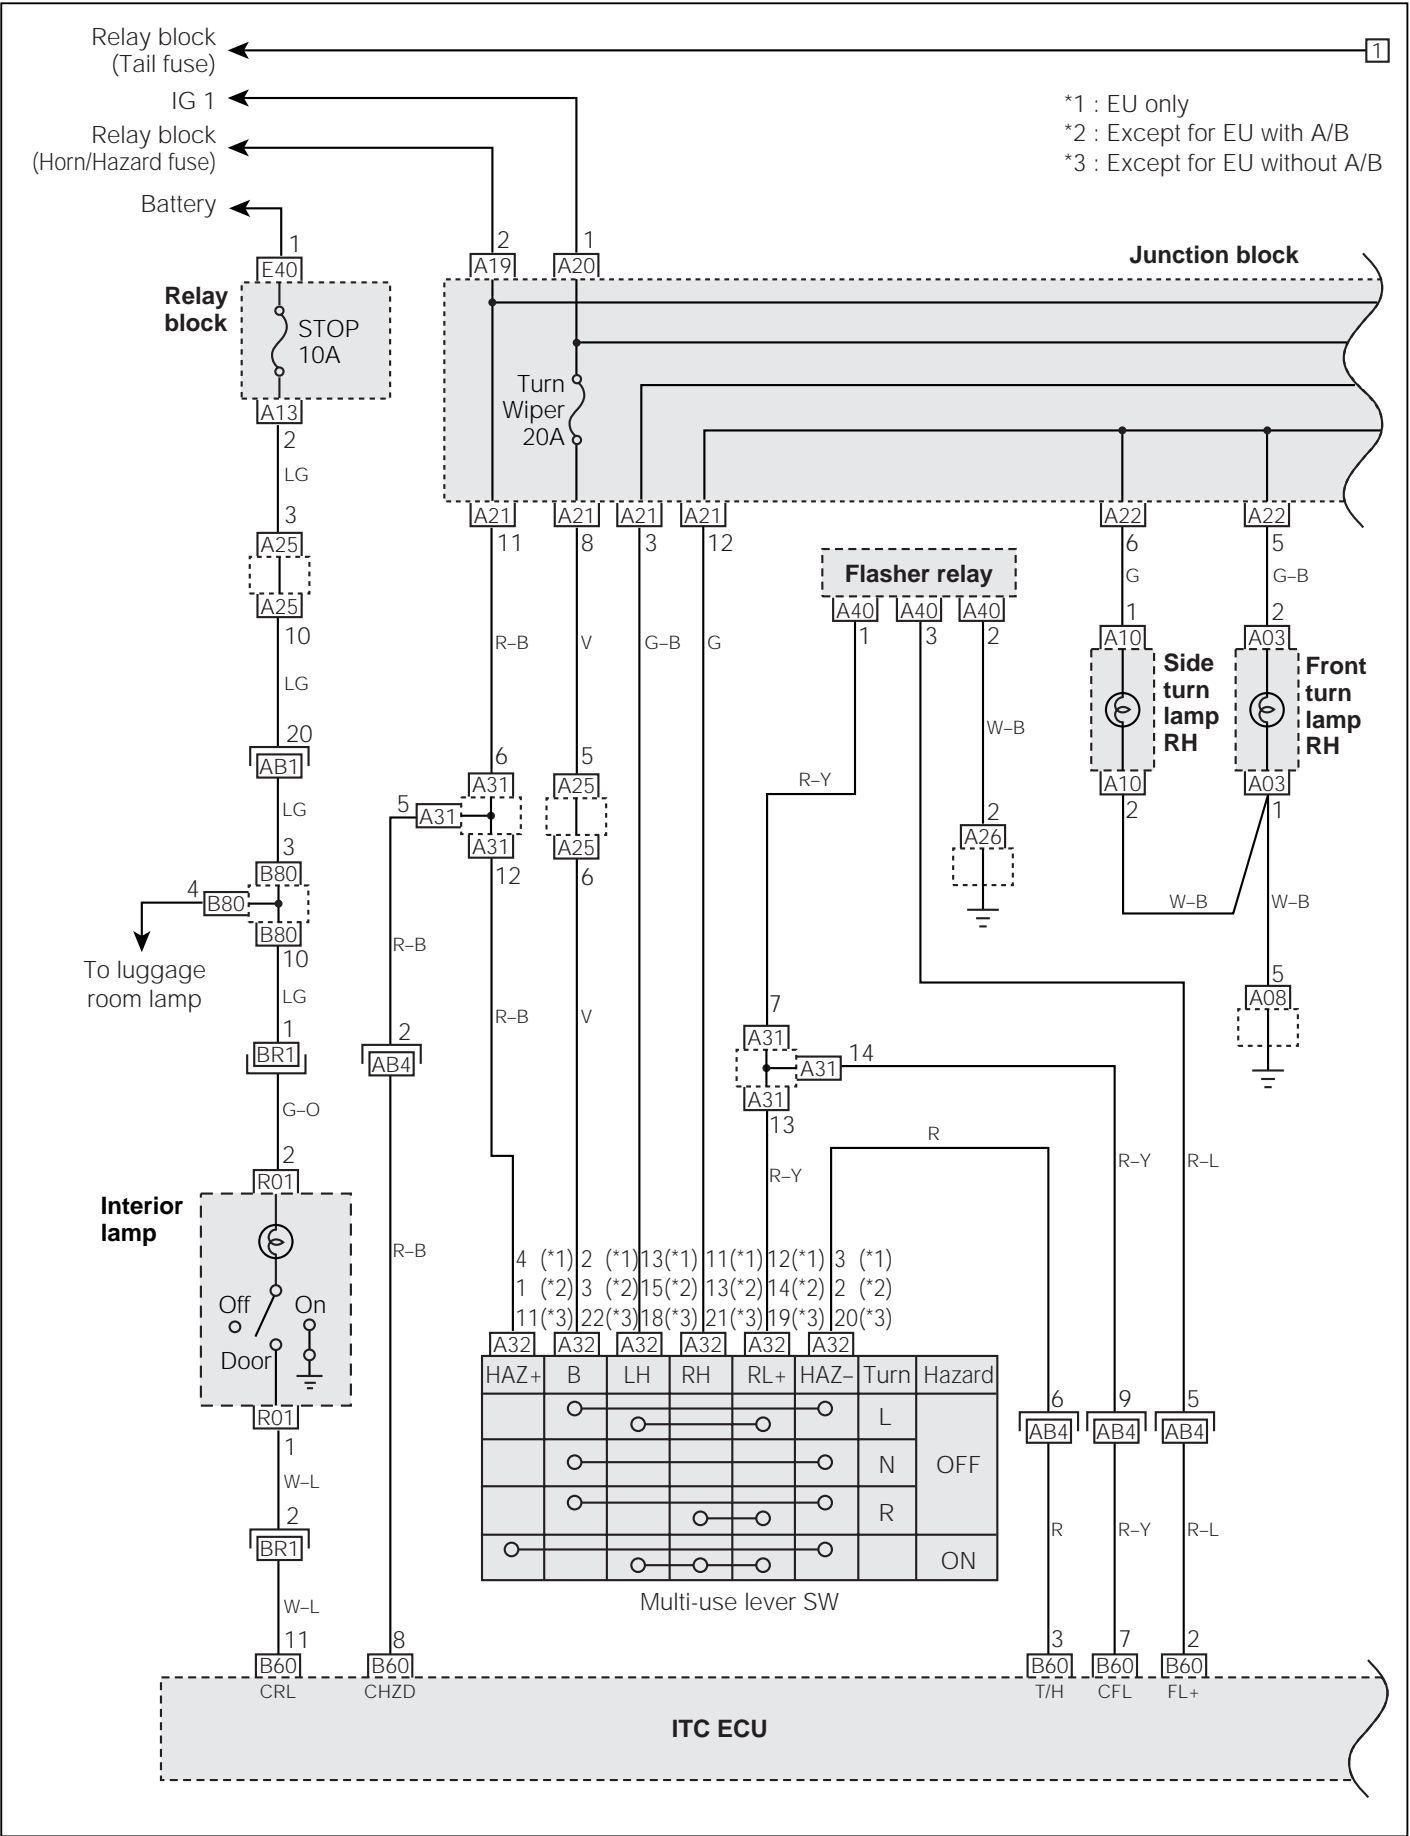ITC SYSTEM (RHD) -1



ITC SYSTEM (RHD) -2

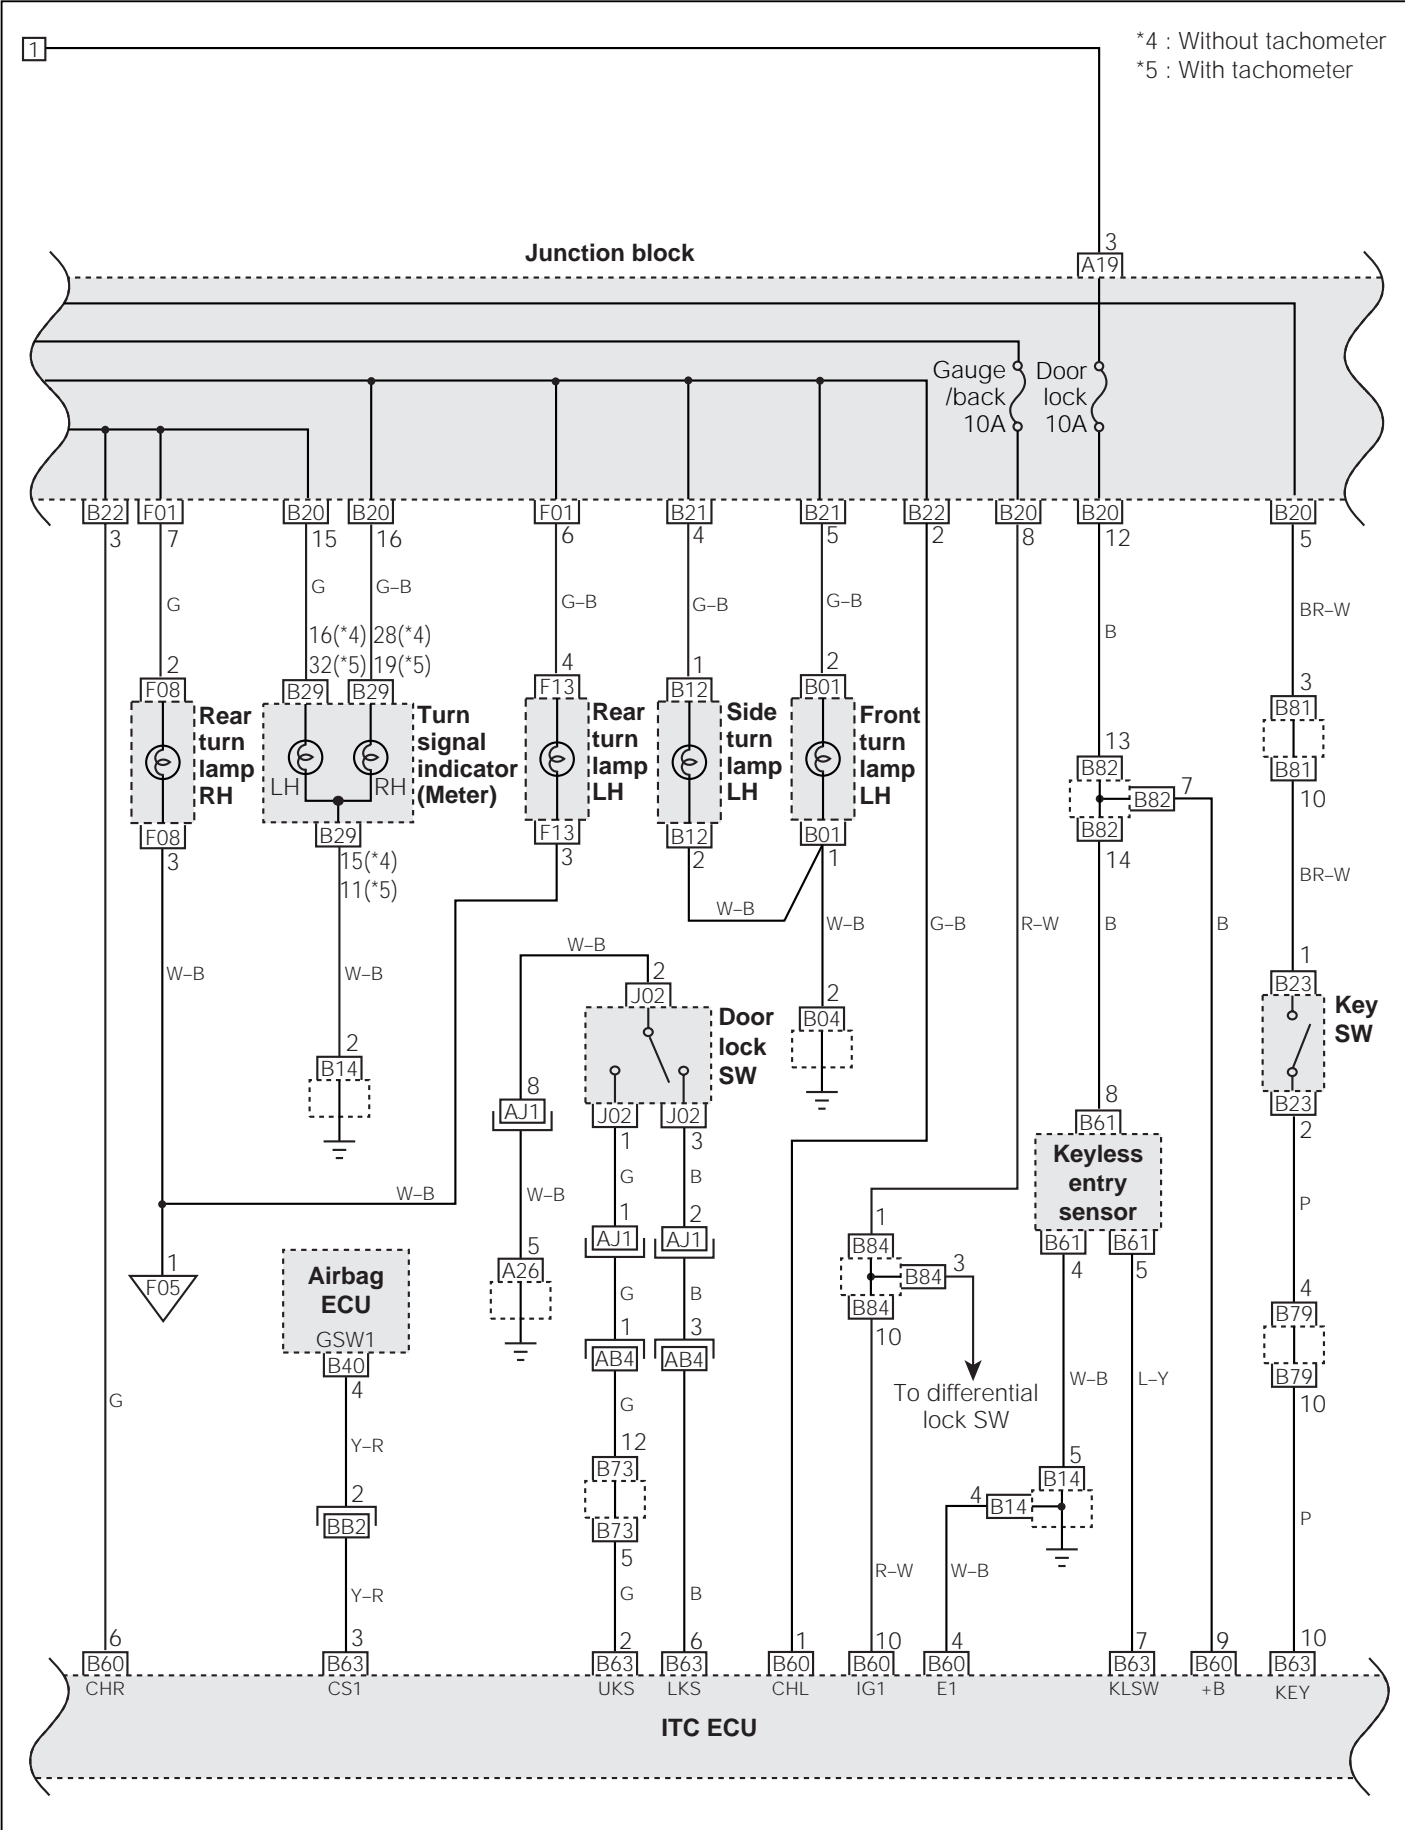


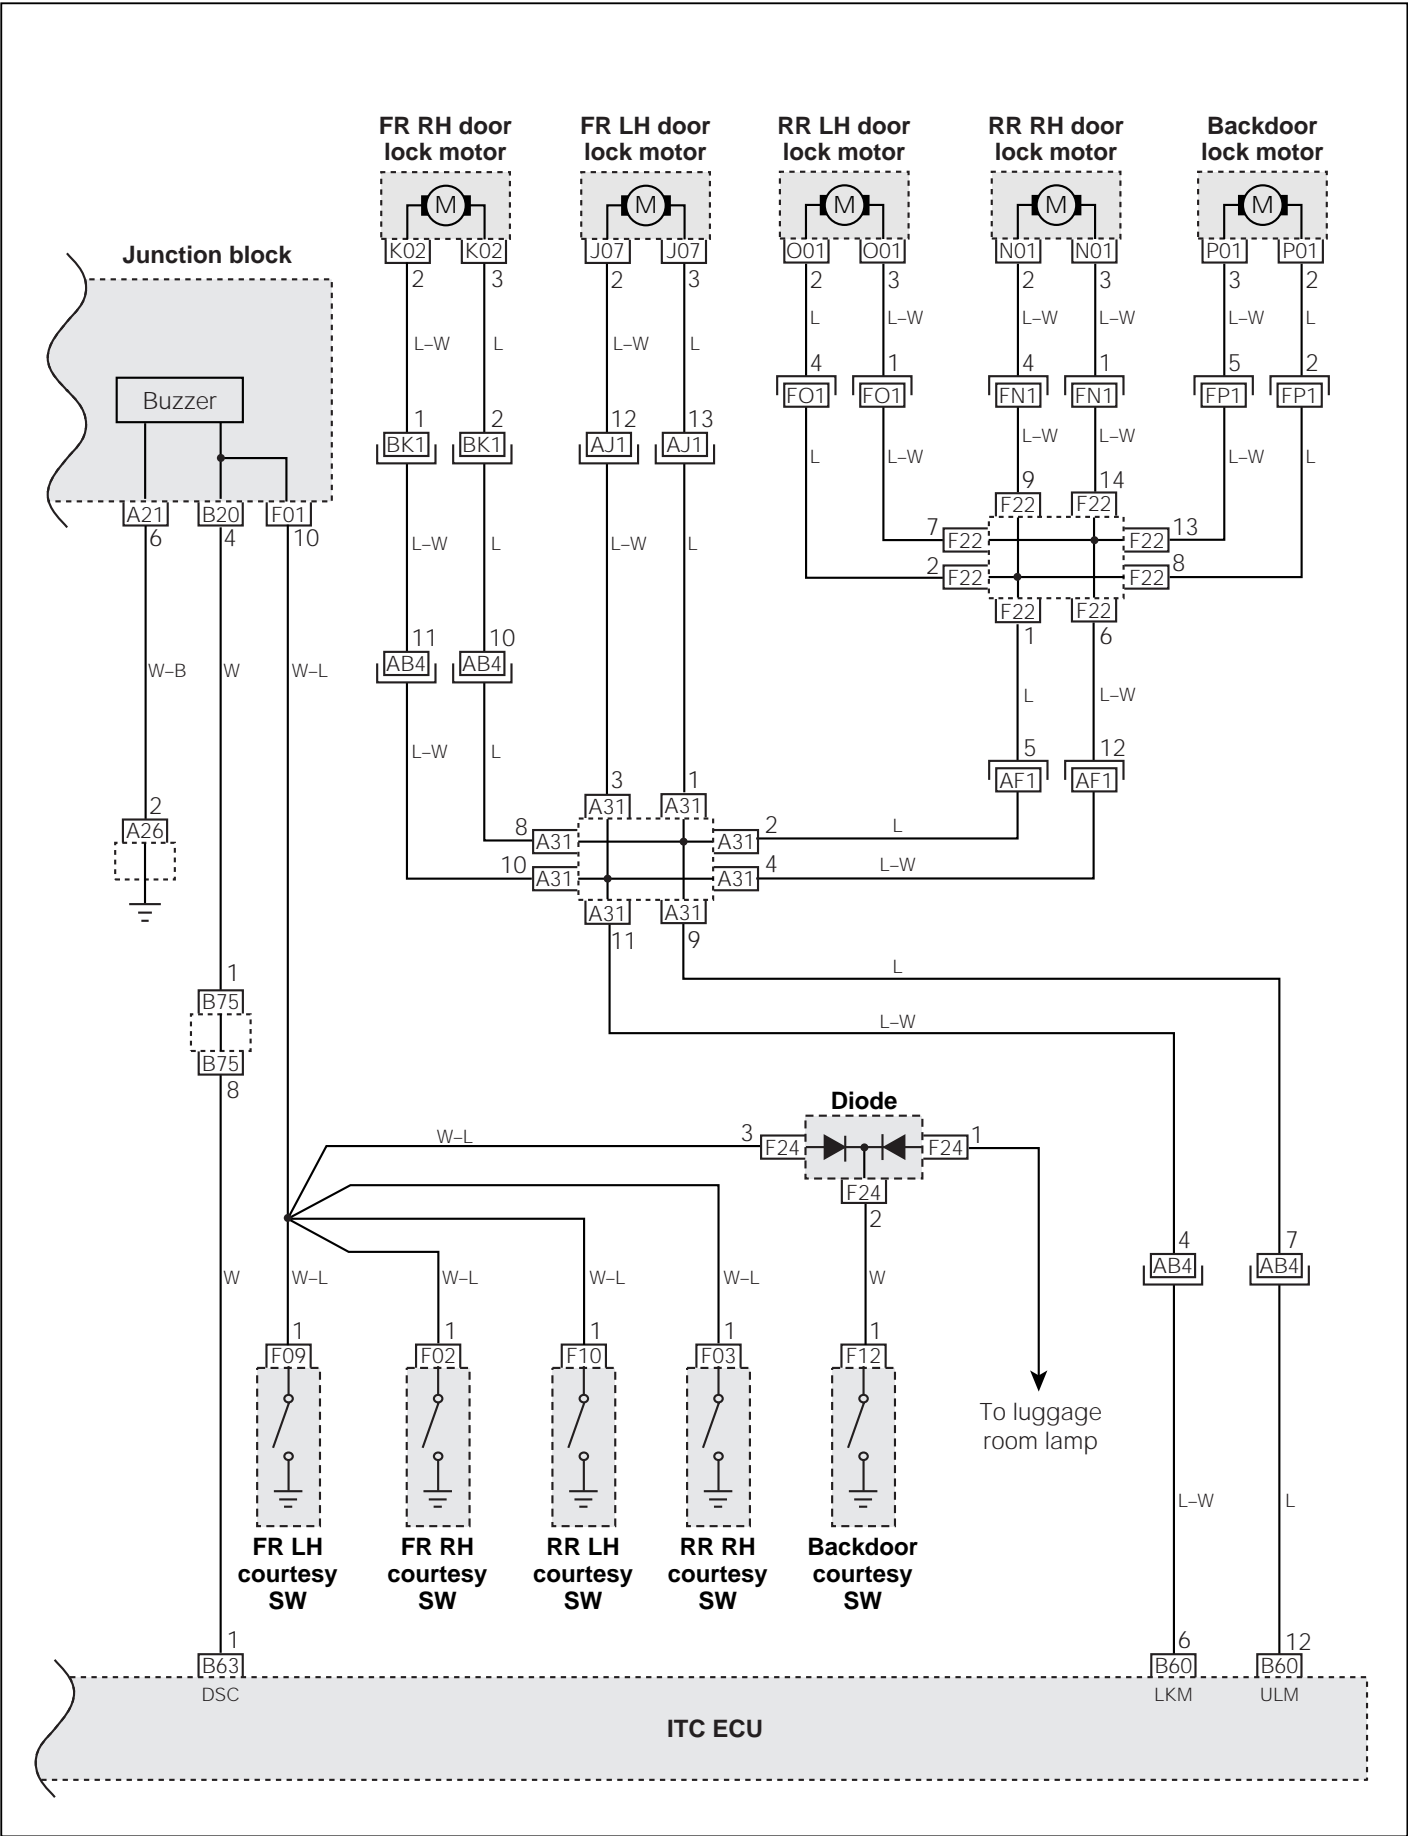


MEMO

Handwriting practice area with 25 horizontal dashed lines.

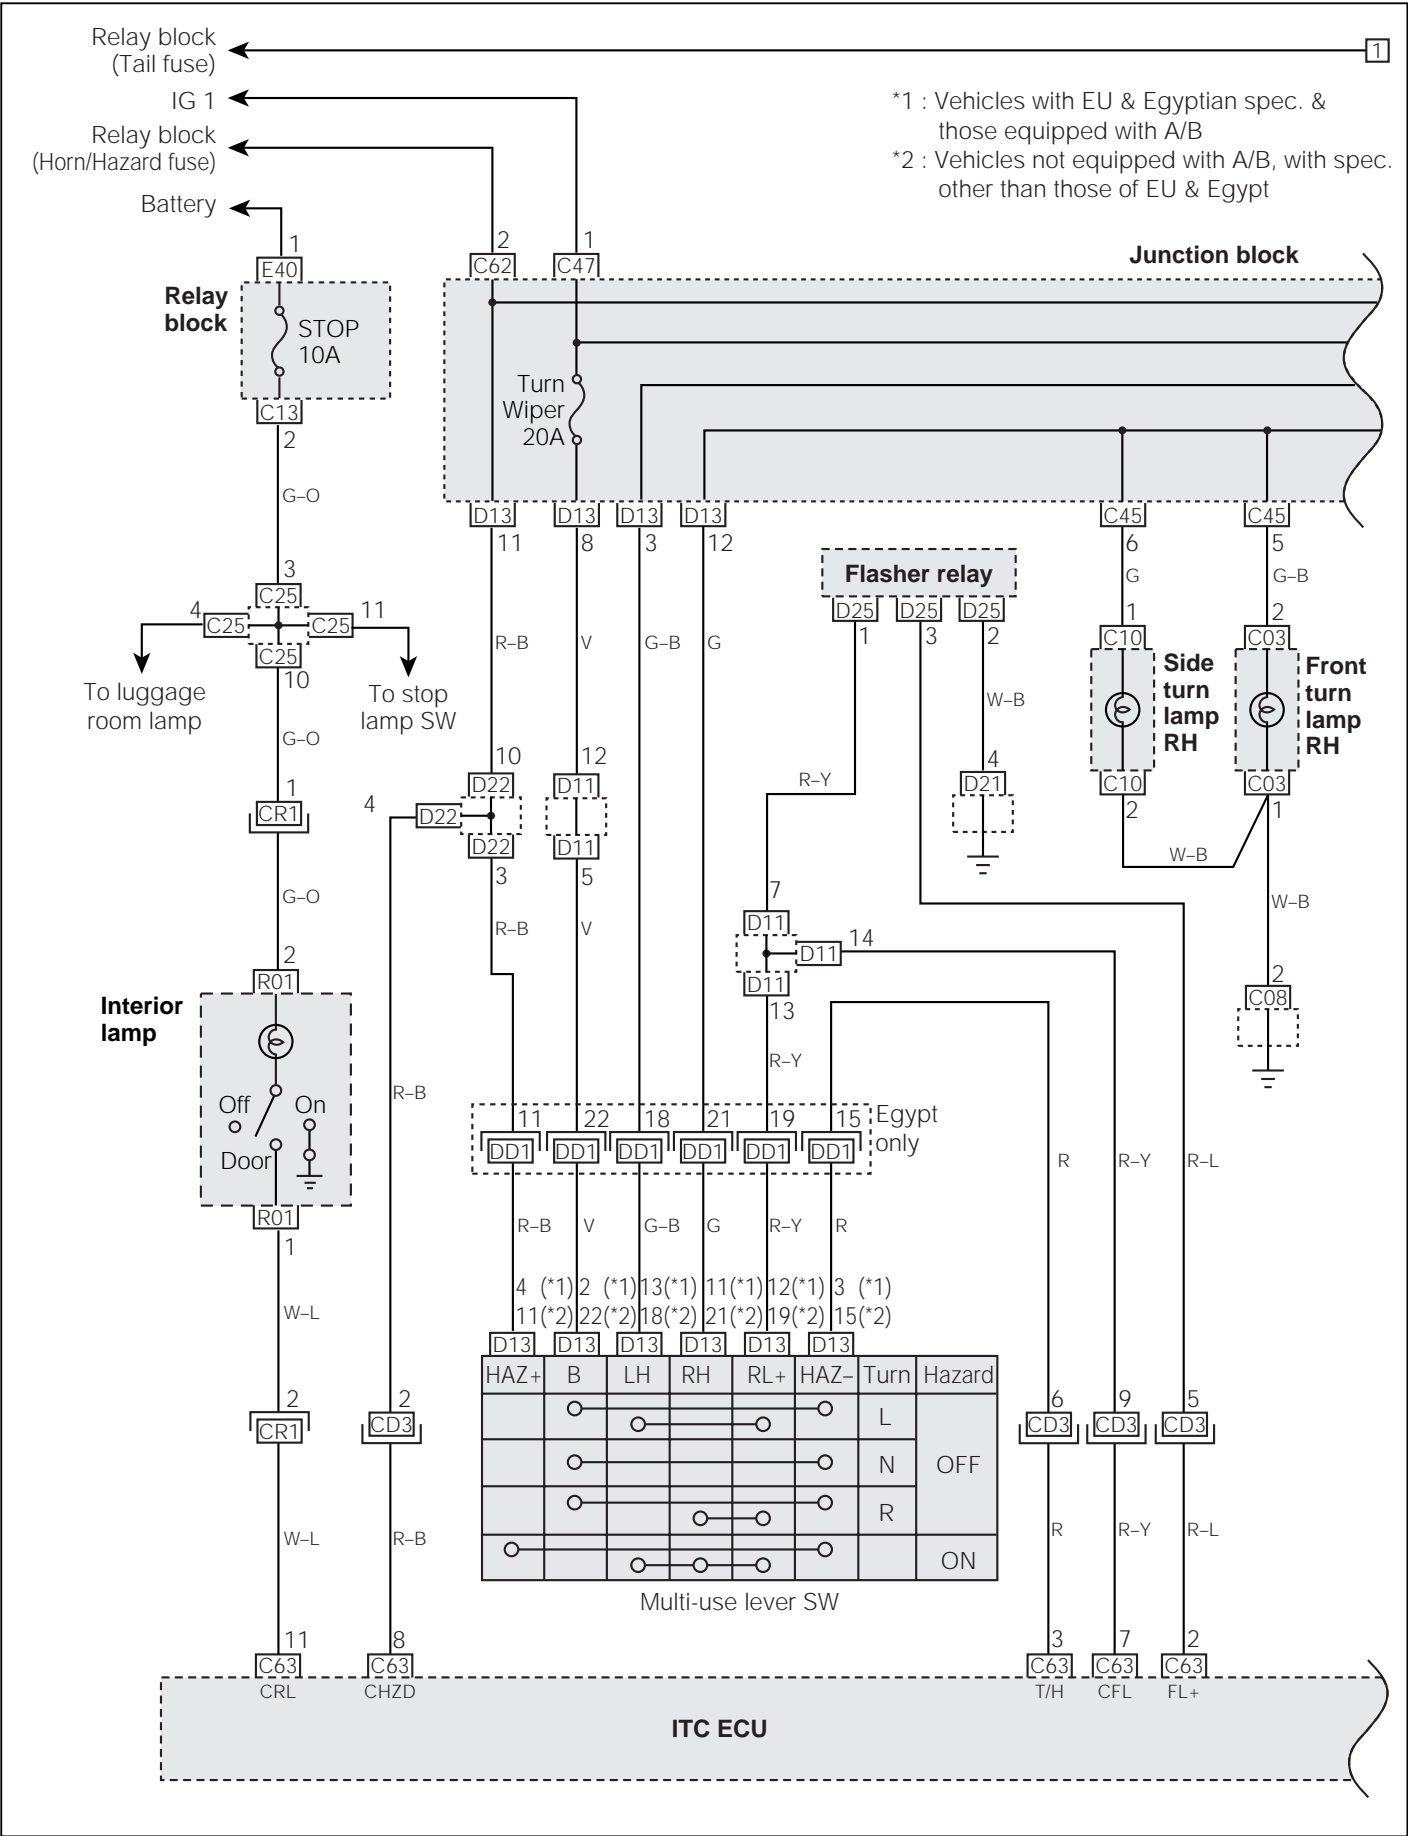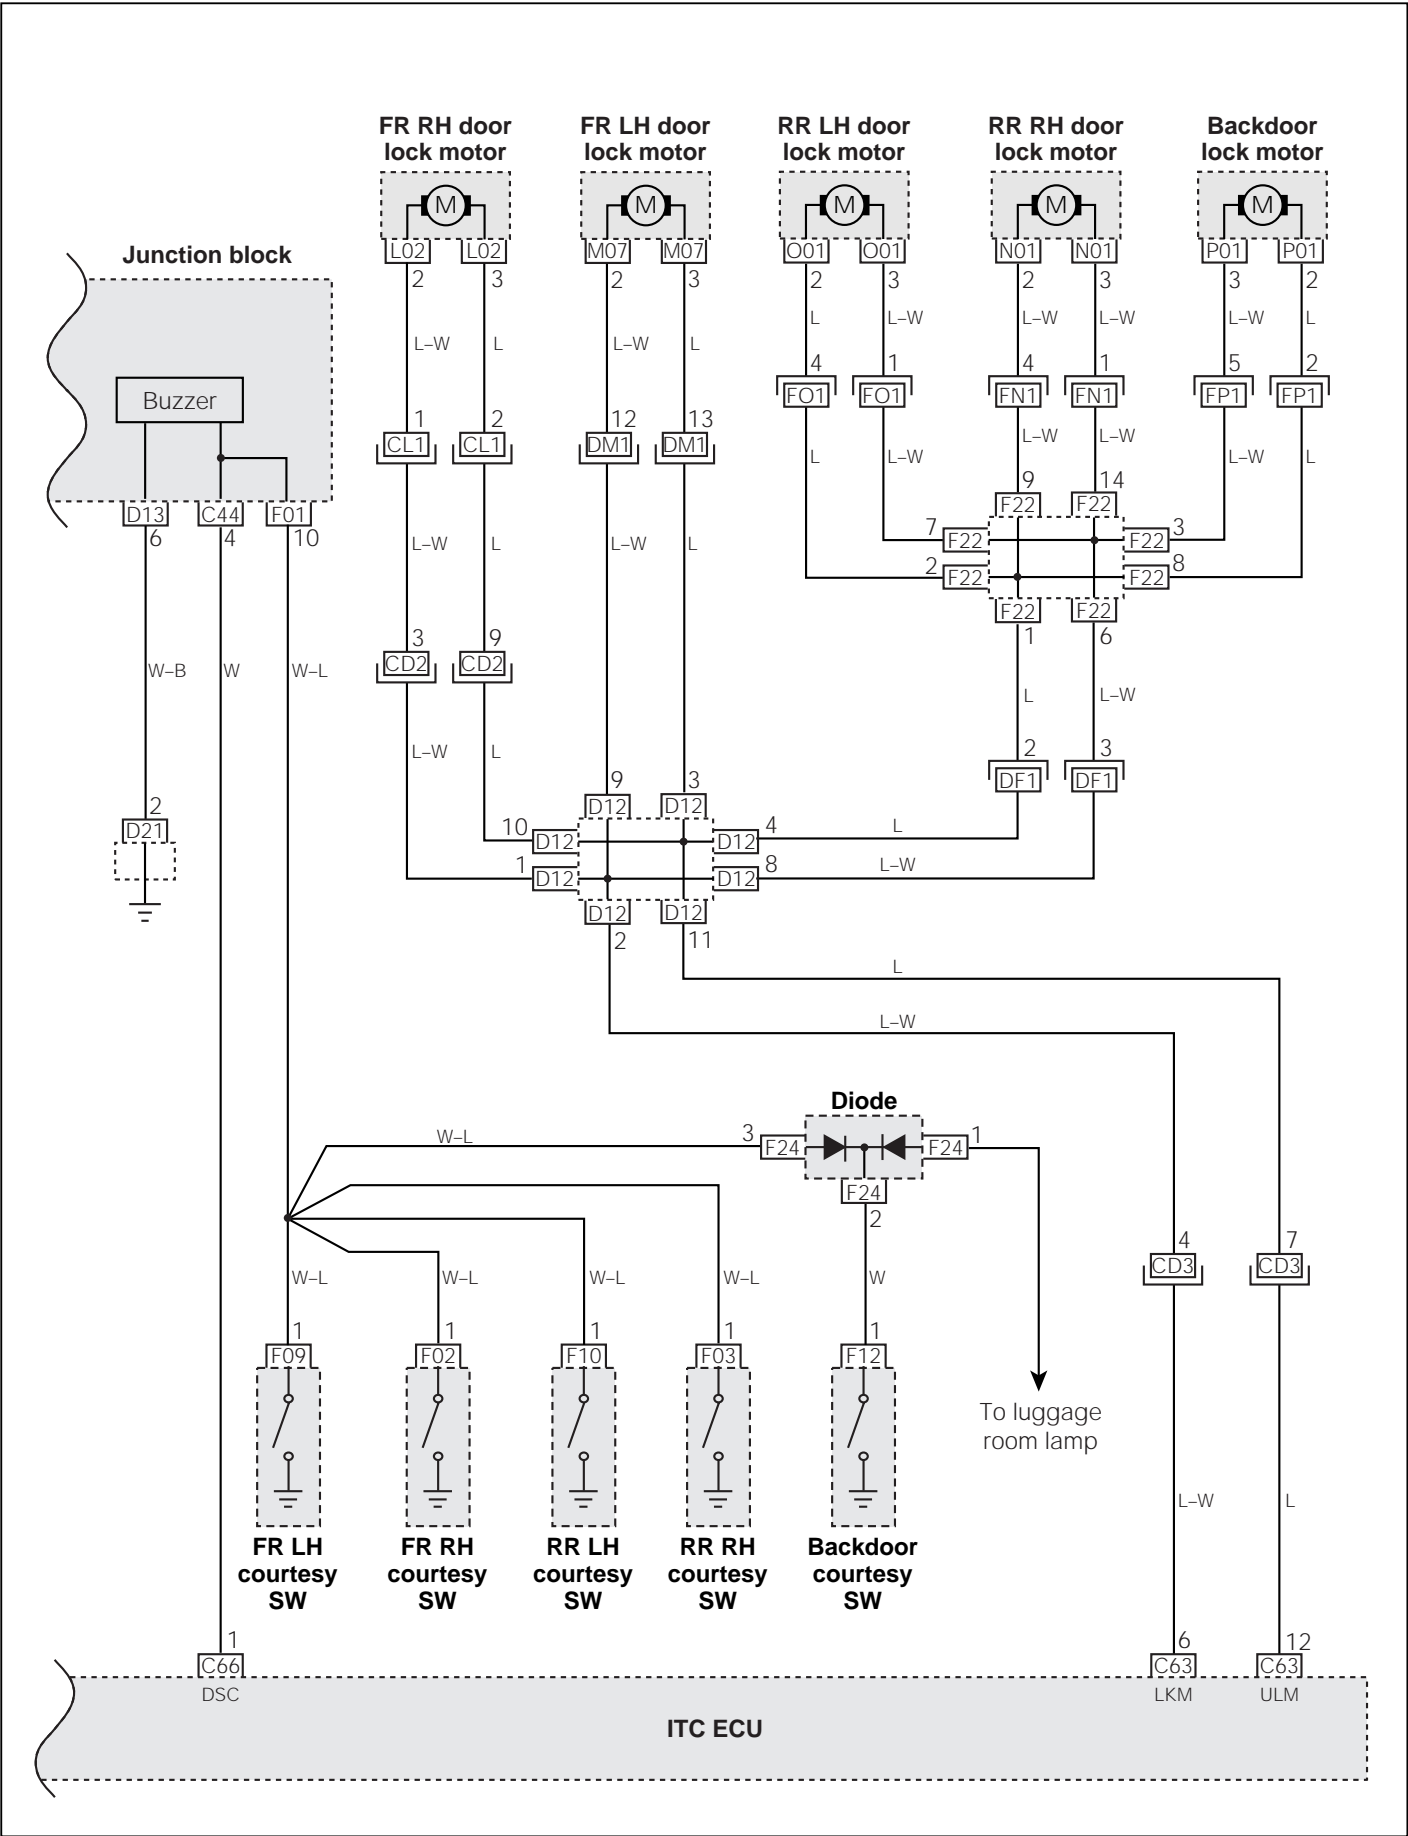ITC SYSTEM (LHD) -1









MEMO

Handwriting practice area with 25 horizontal dashed lines.

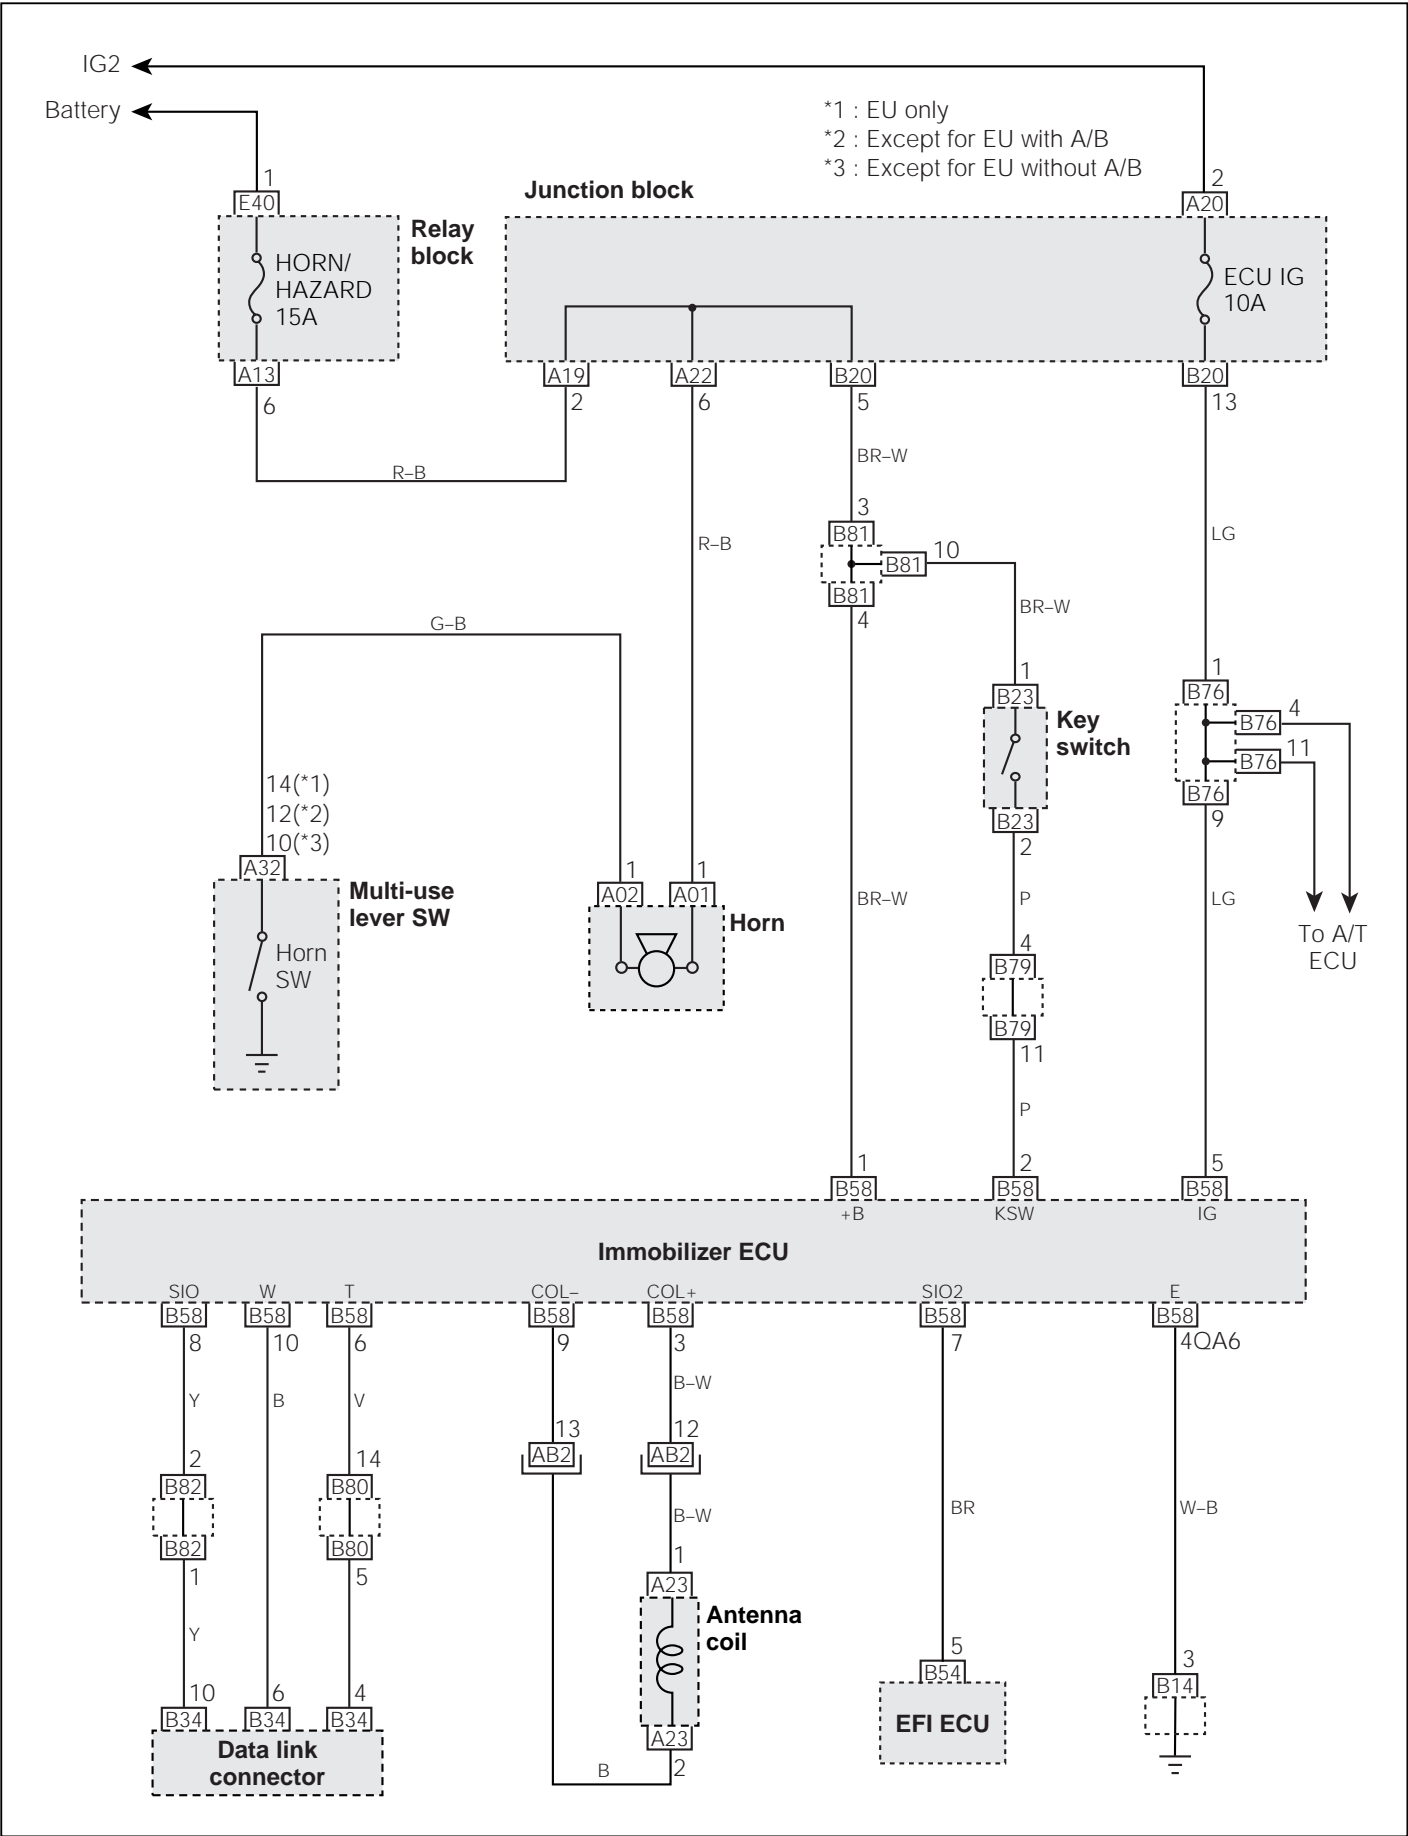IMMOBILIZER SYSTEM & HORN (RHD)




IMMOBILIZER SYSTEM & HORN (LHD)

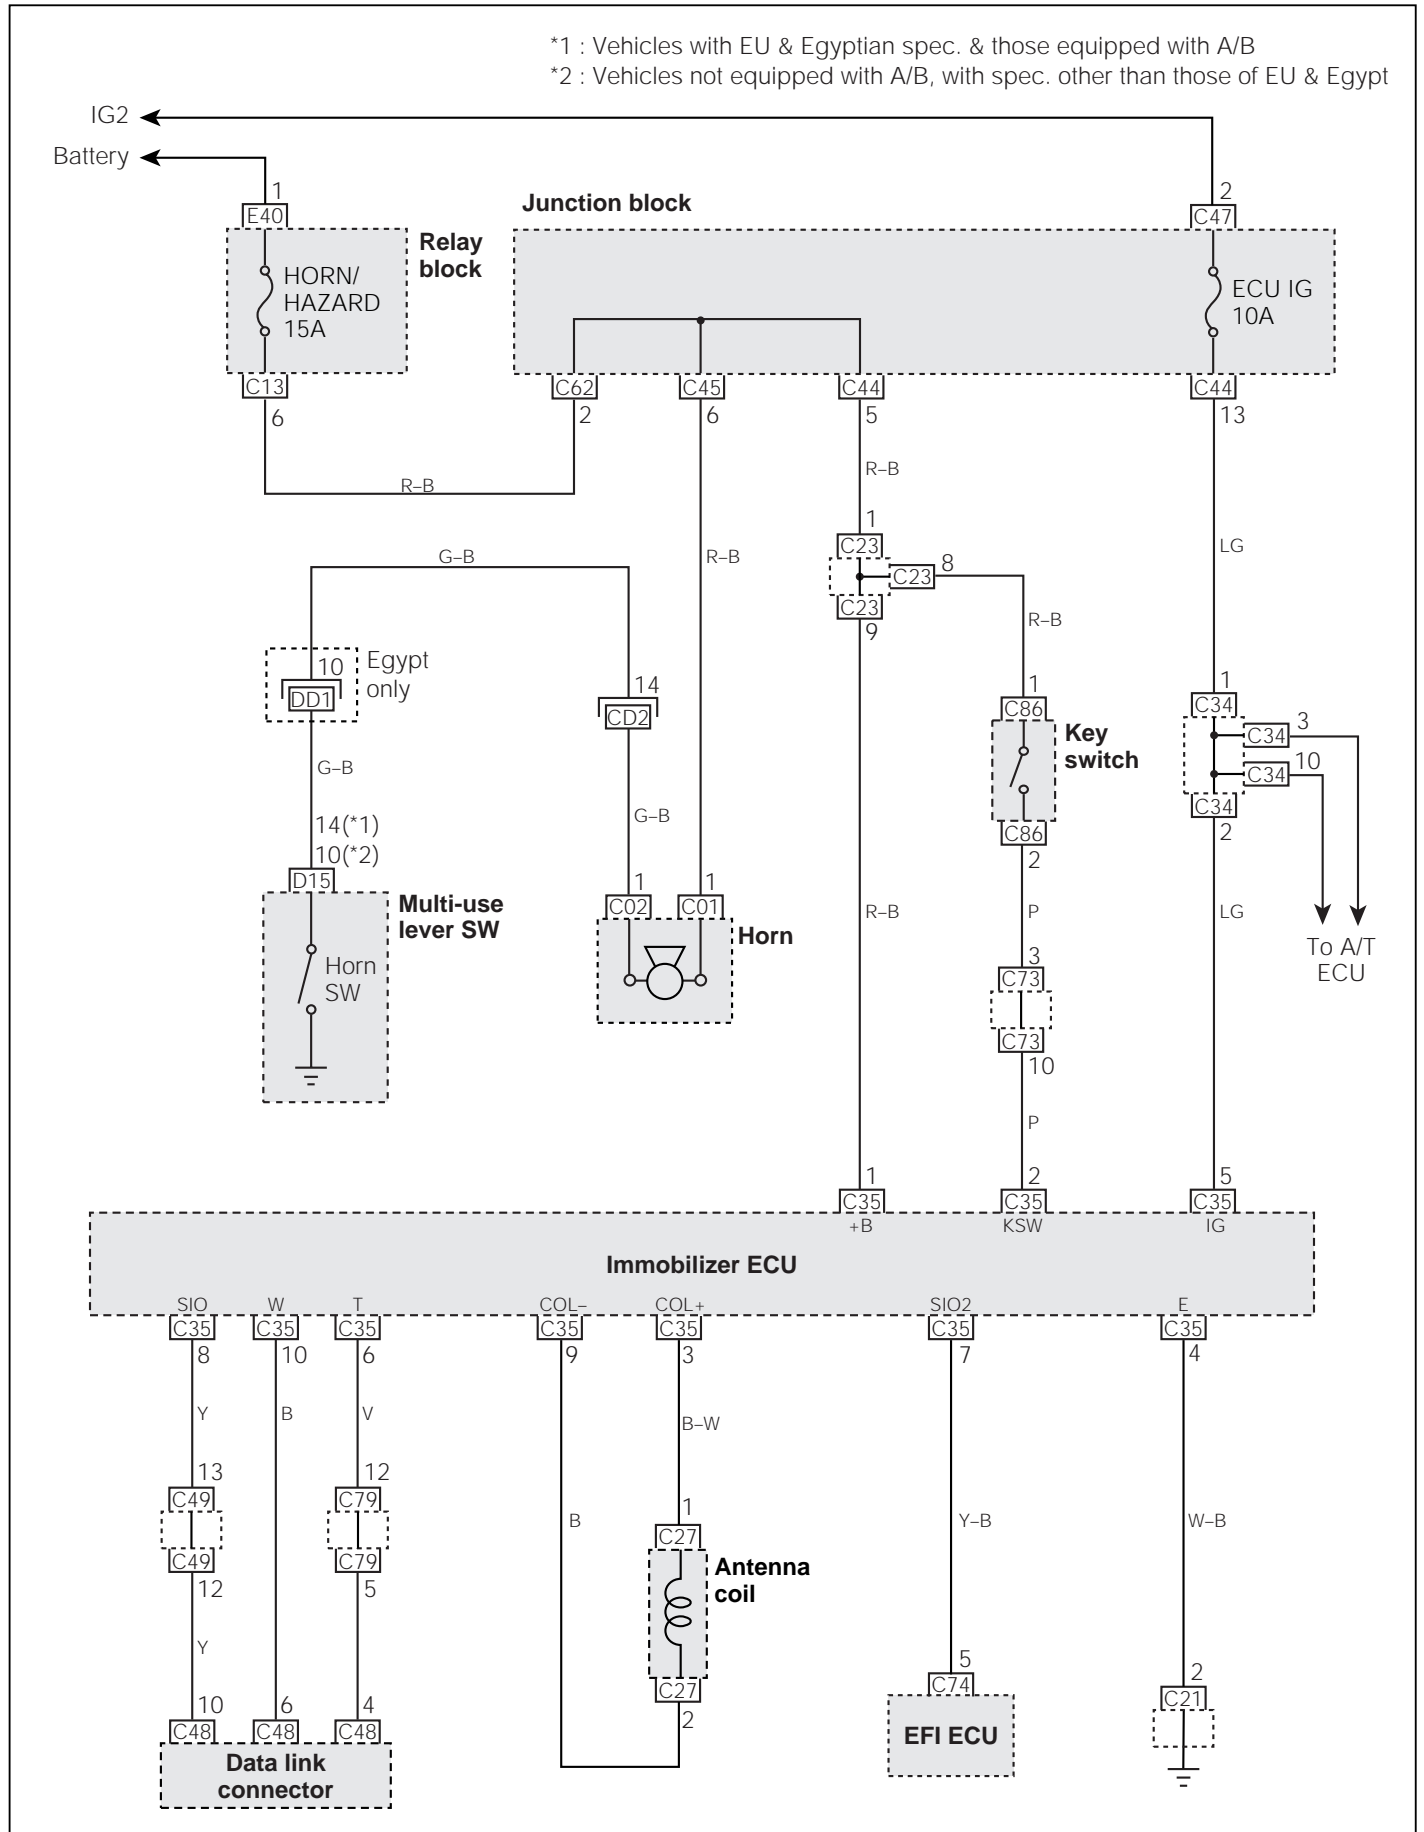


HW-94

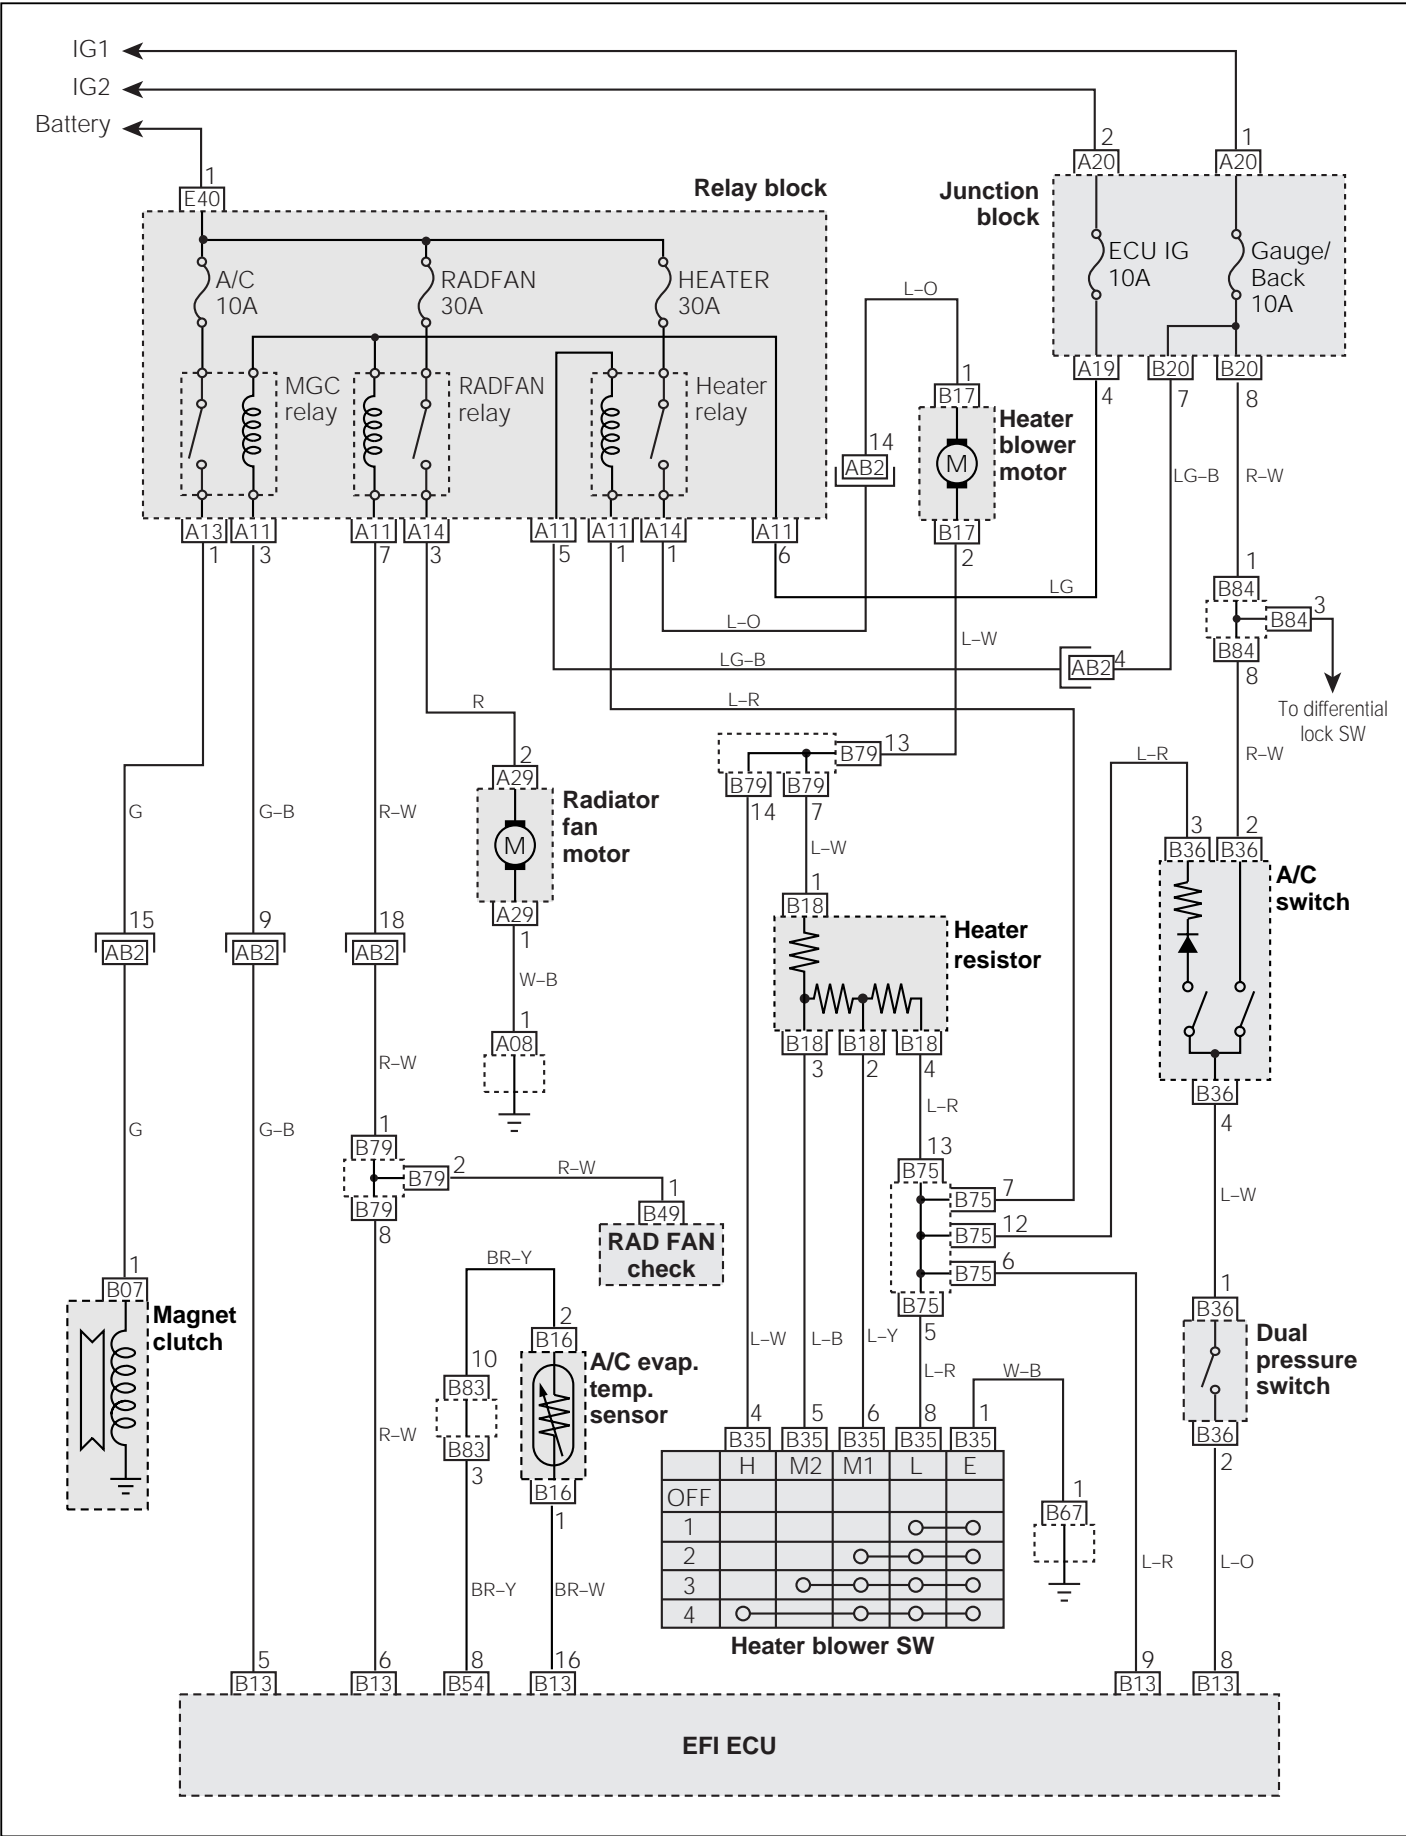
HEATER & VENTILATION (RHD / w/ HEATER RELAY)



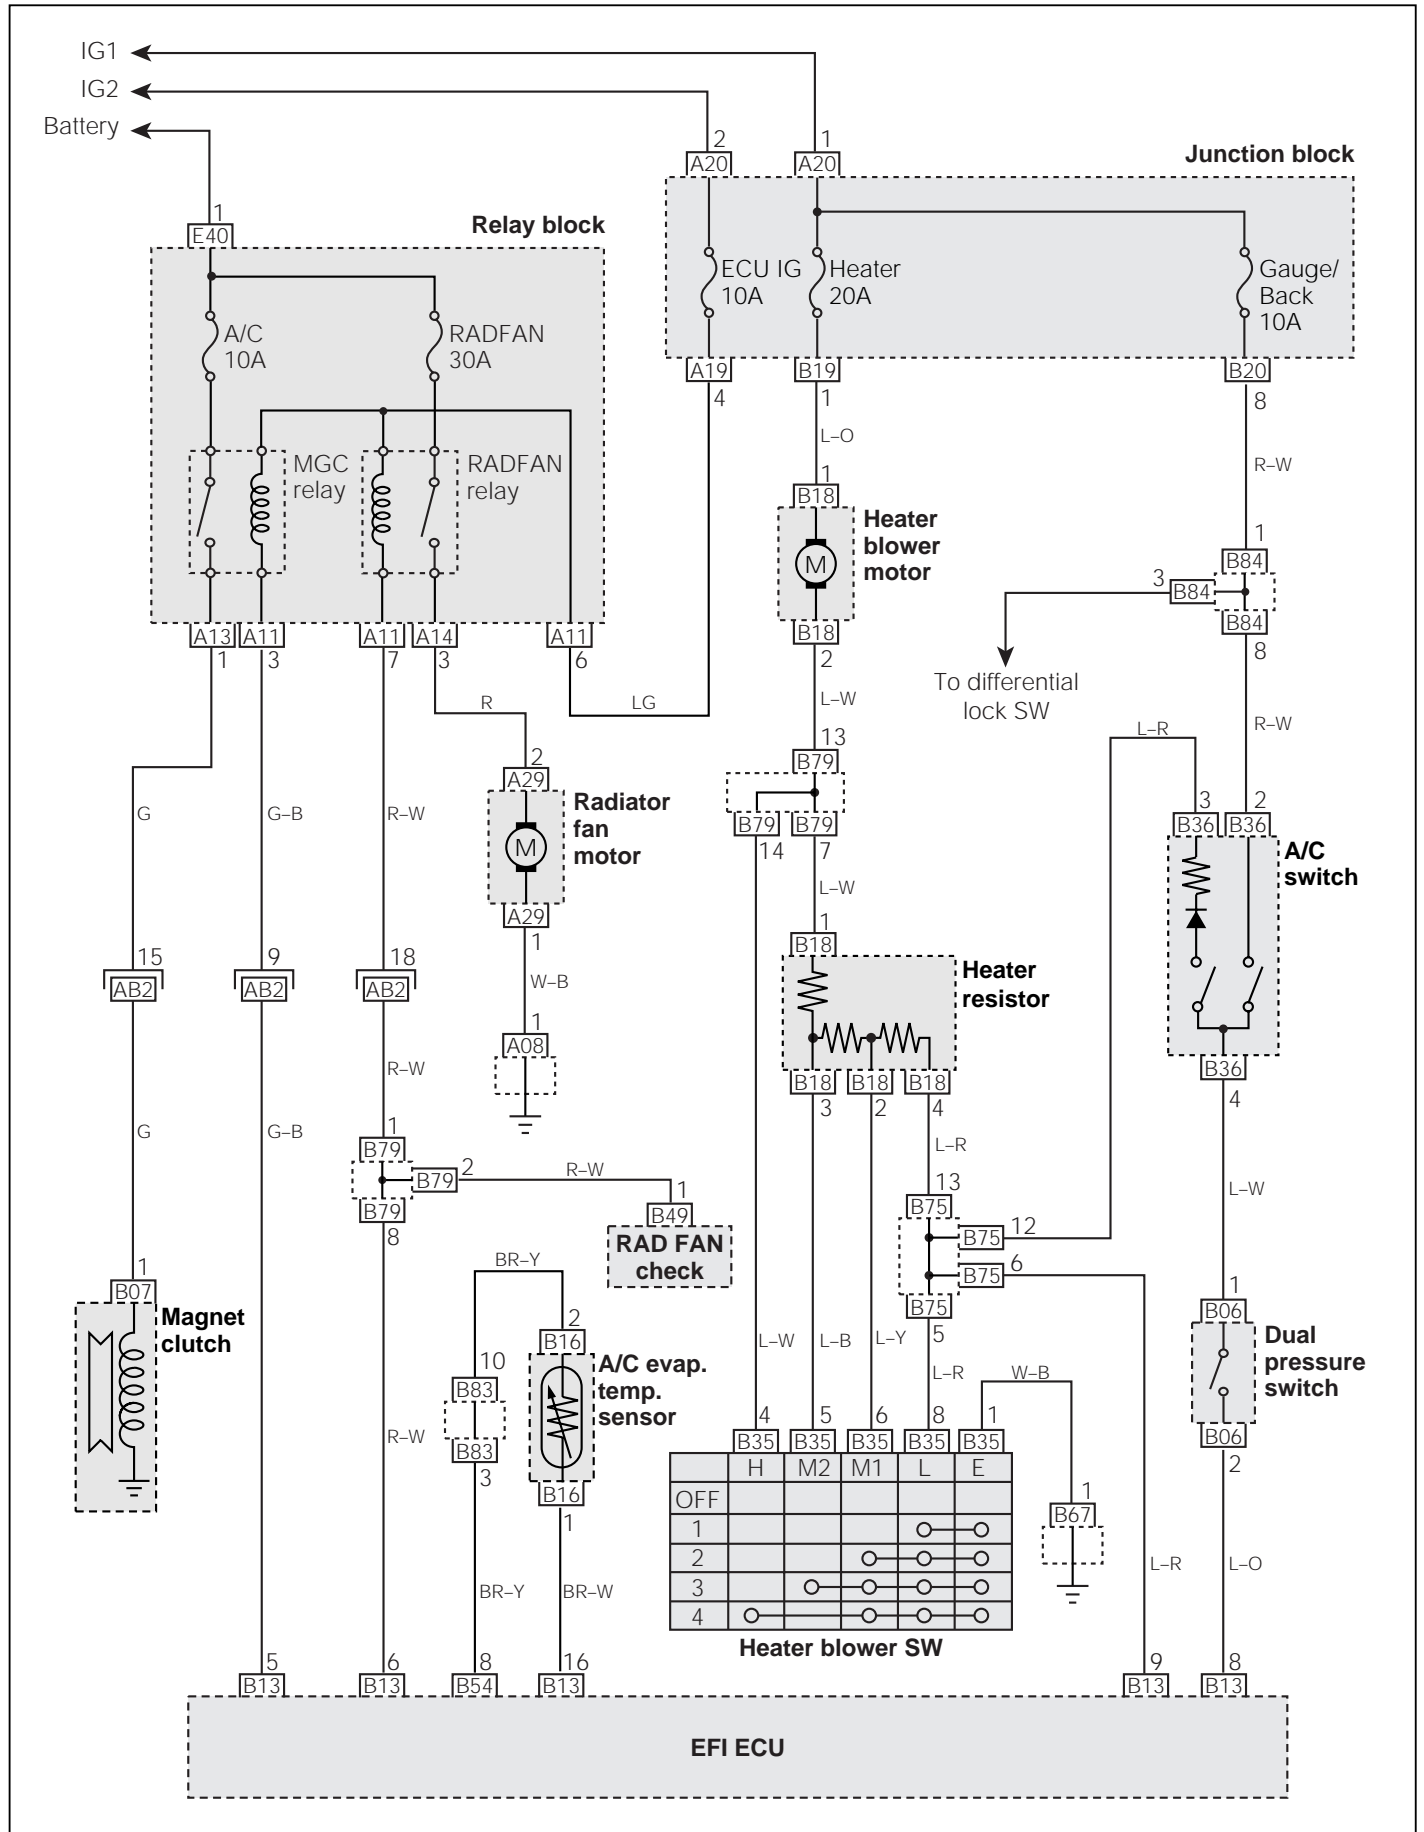
HEATER & VENTILATION (RHD / w/o HEATER RELAY)



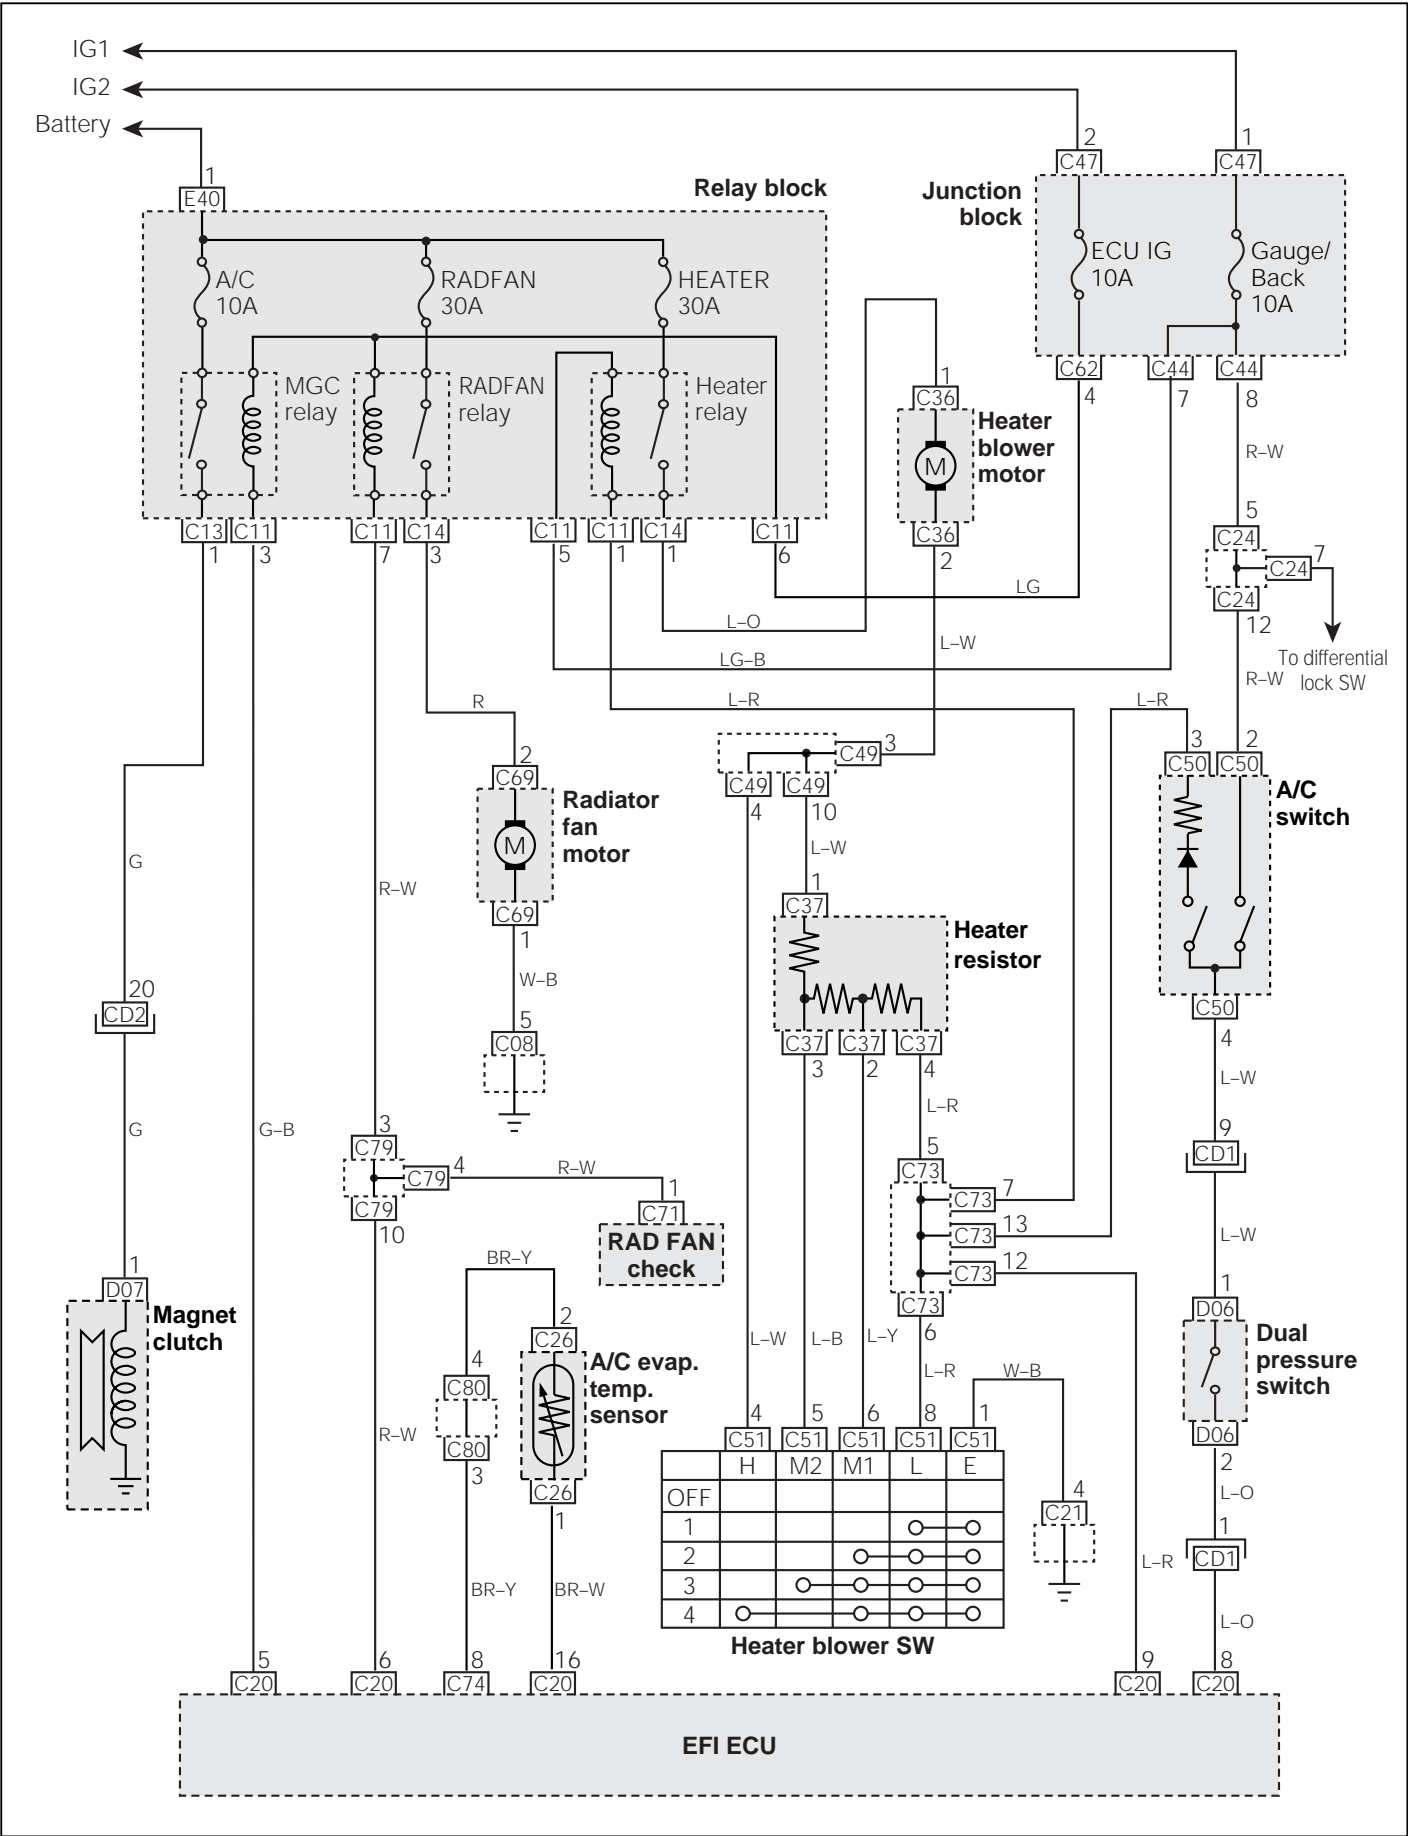
HEATER & VENTILATION (LHD / w/ HEATER RELAY)



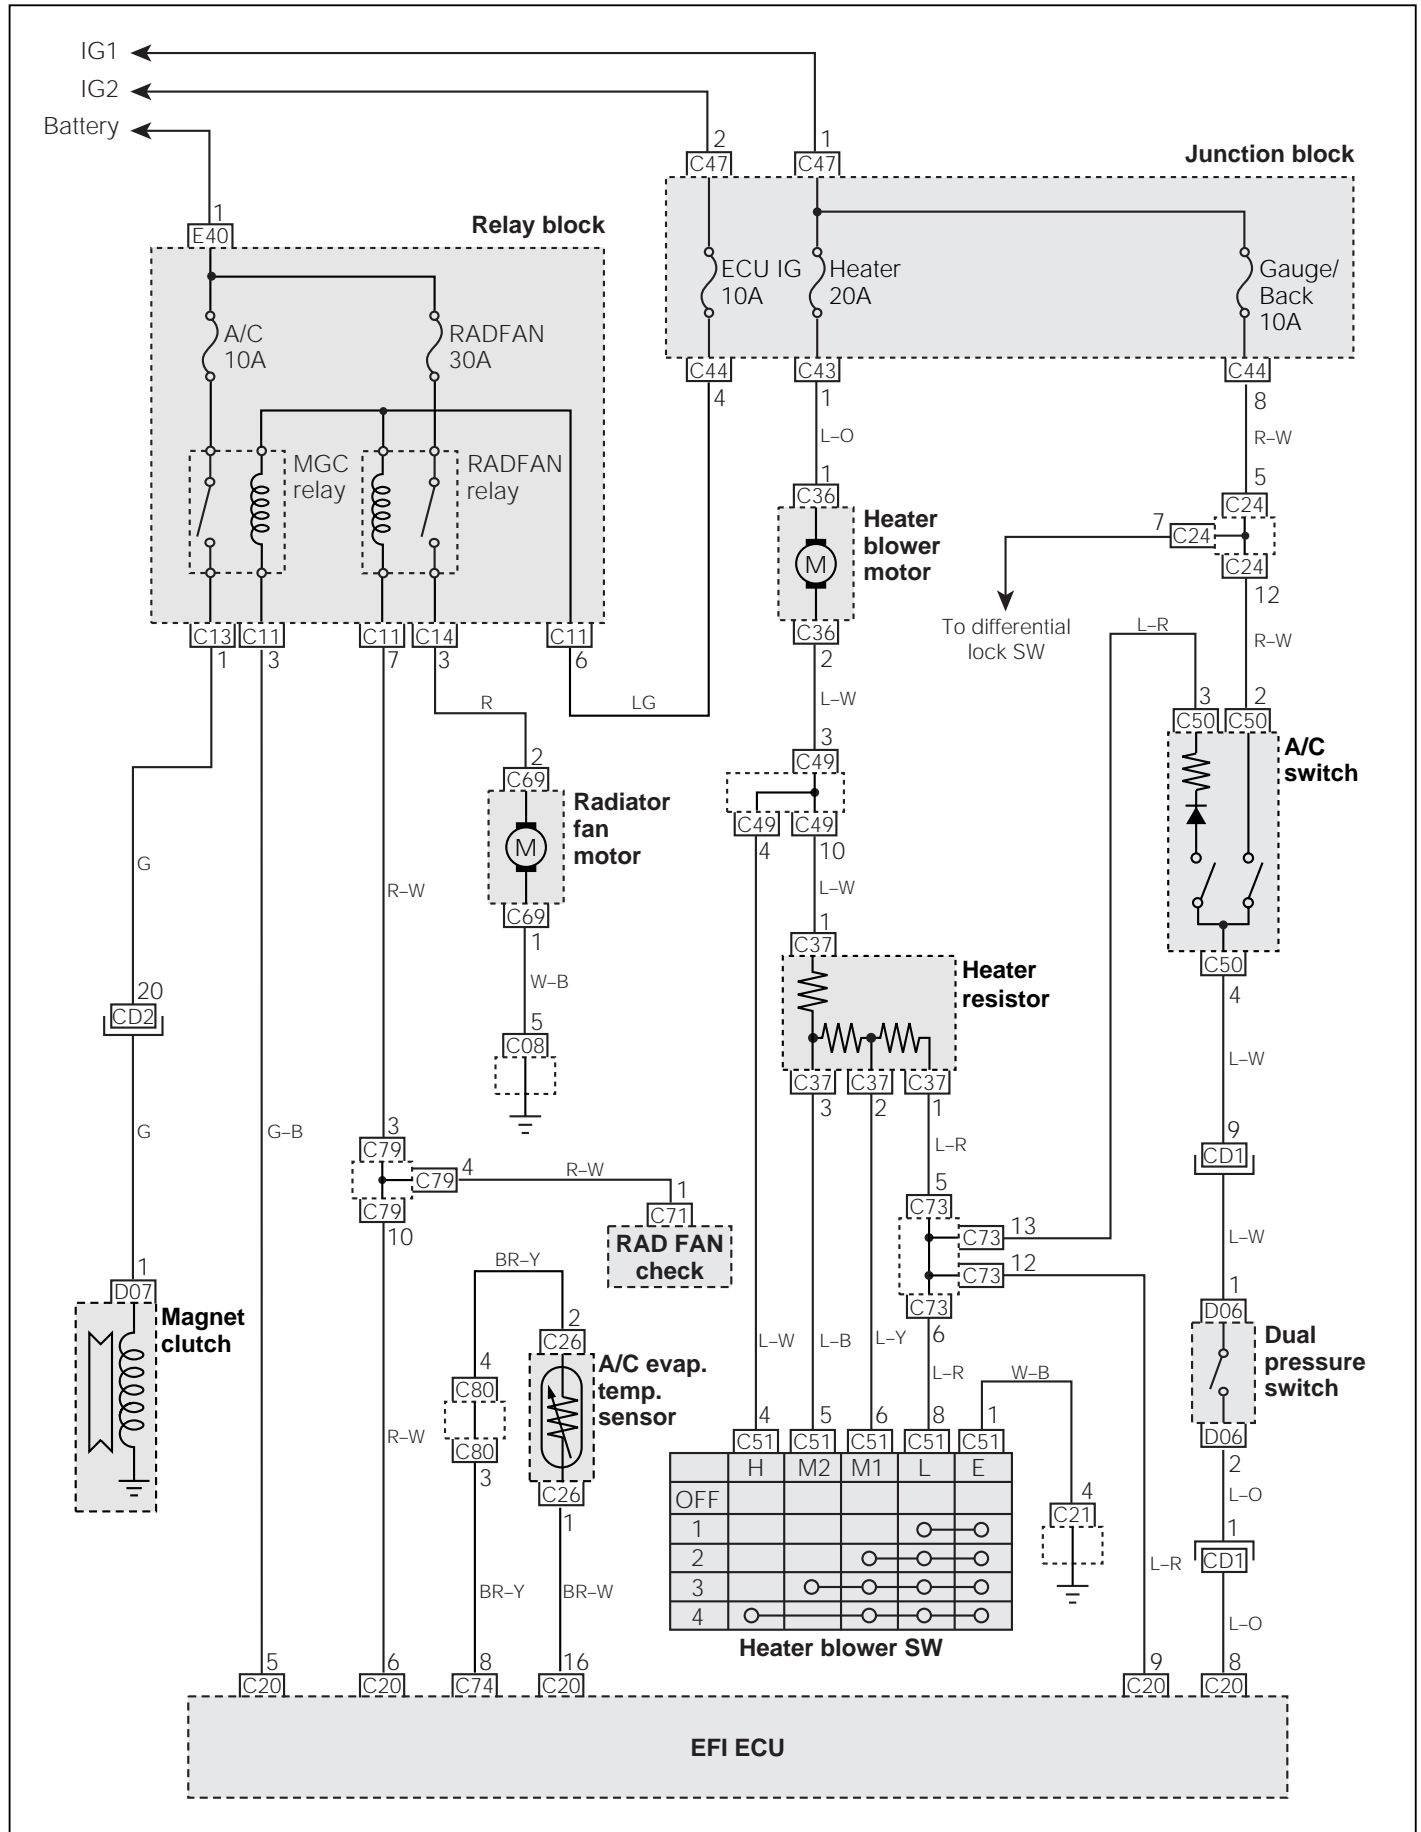HEATER & VENTILATION (LHD / w/o HEATER RELAY)




CLOCK (RHD)

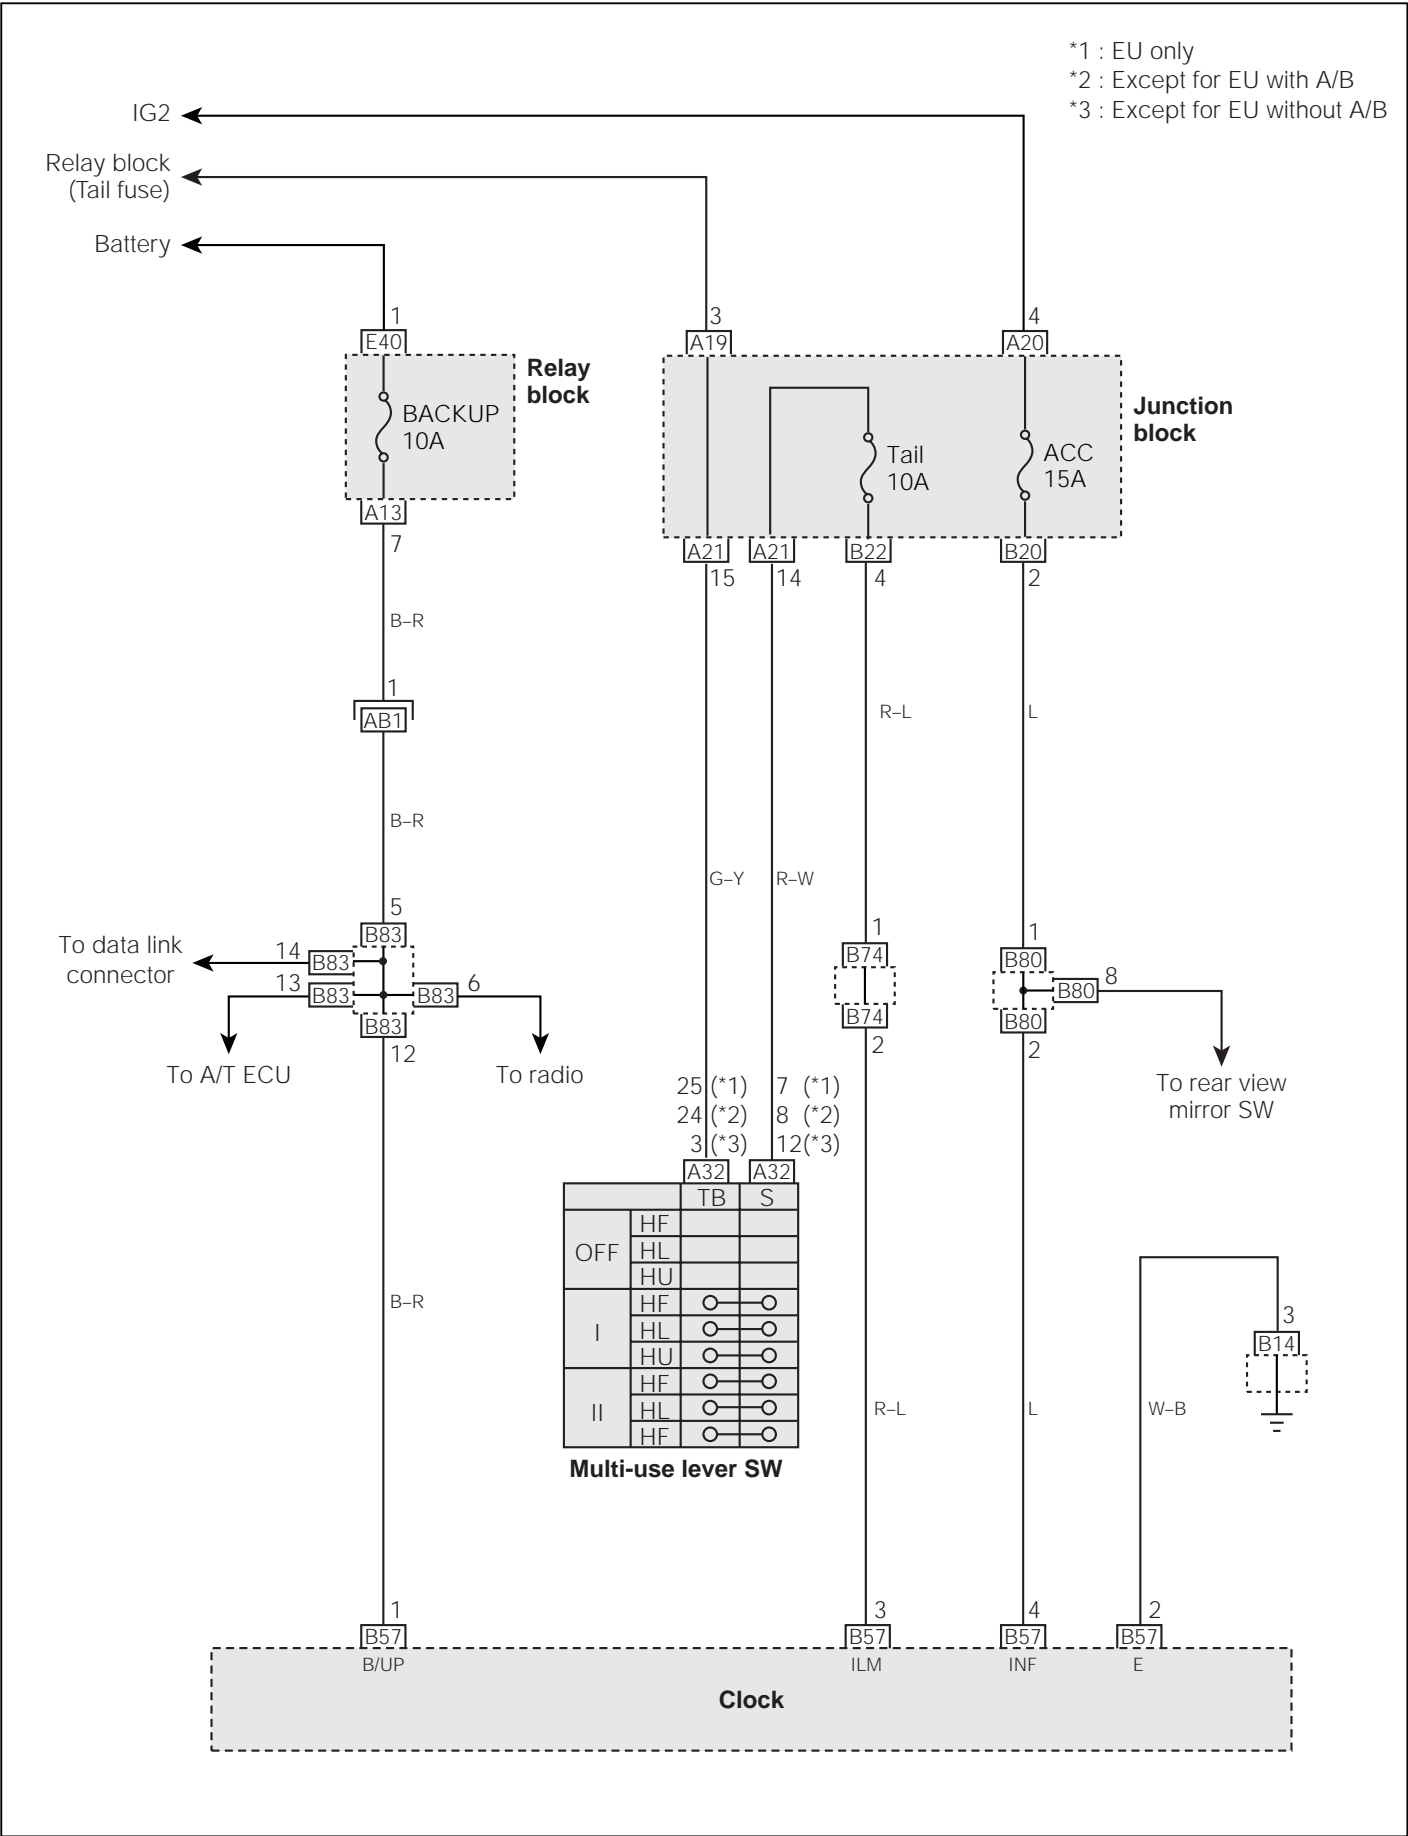


RADIO & CIGARETTE LIGHTER (RHD)



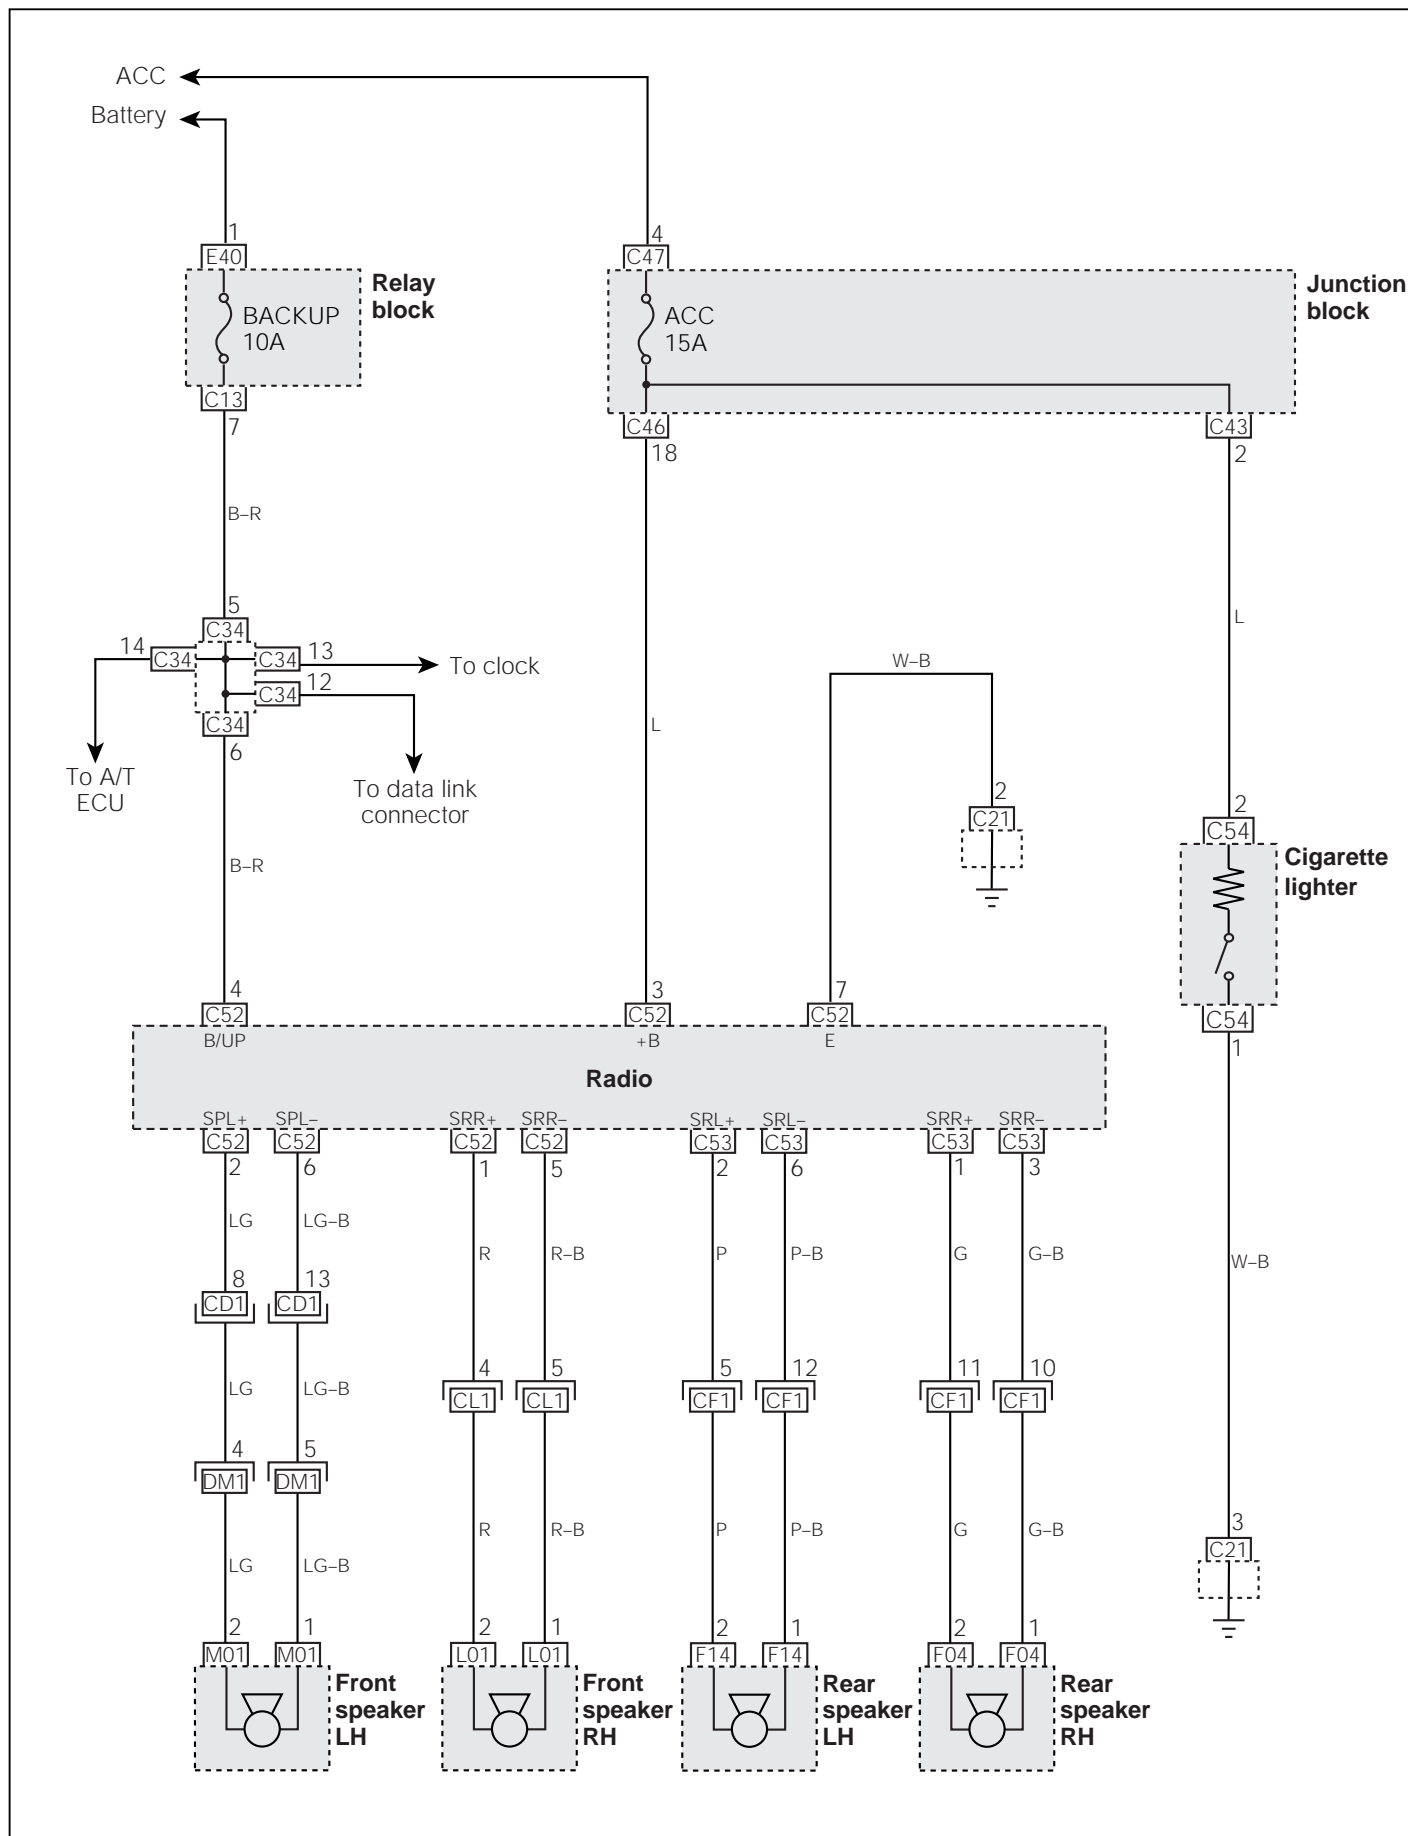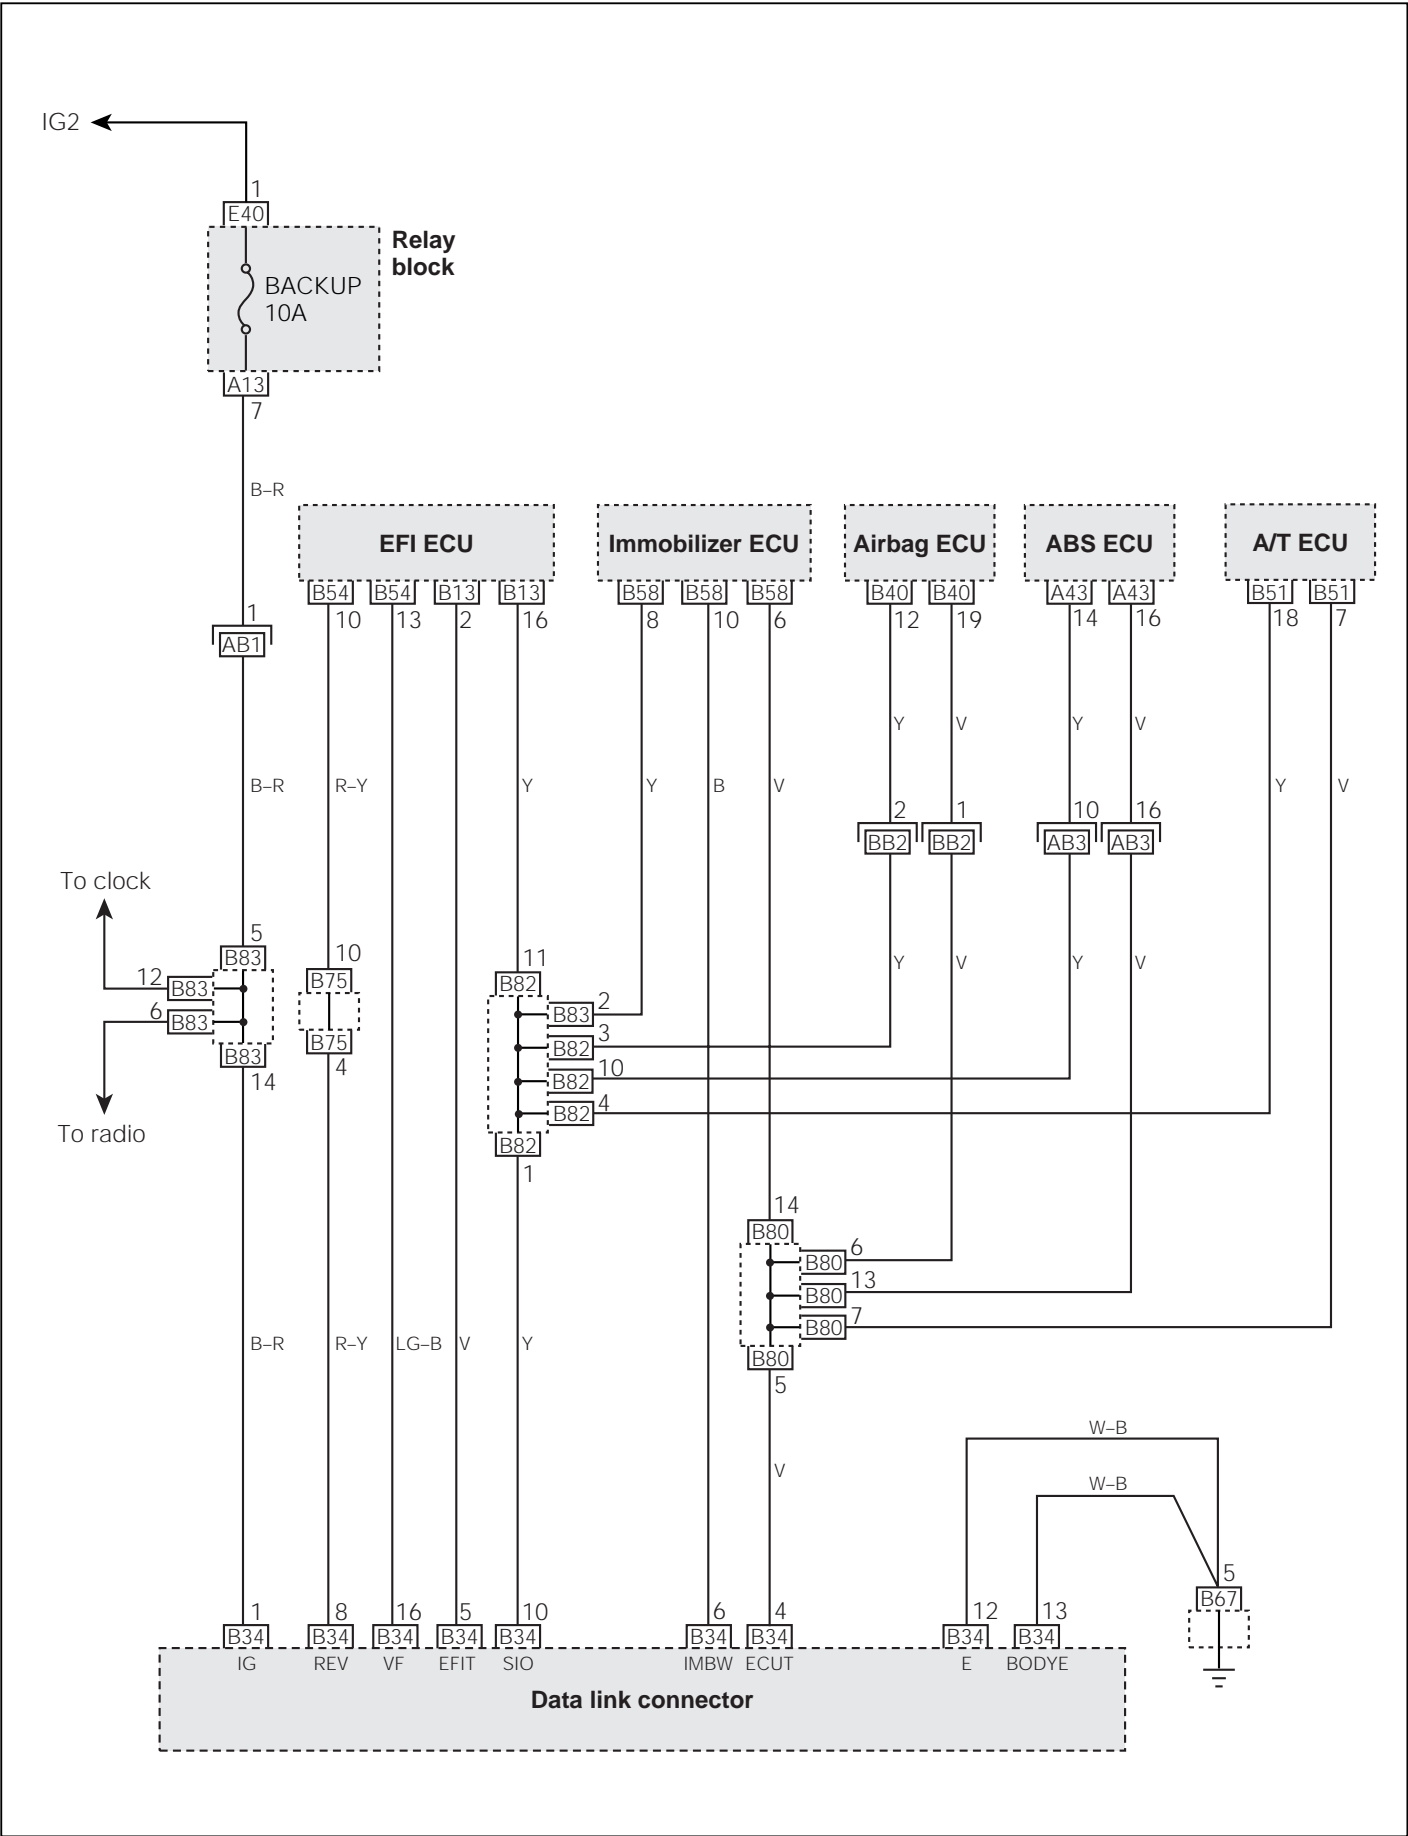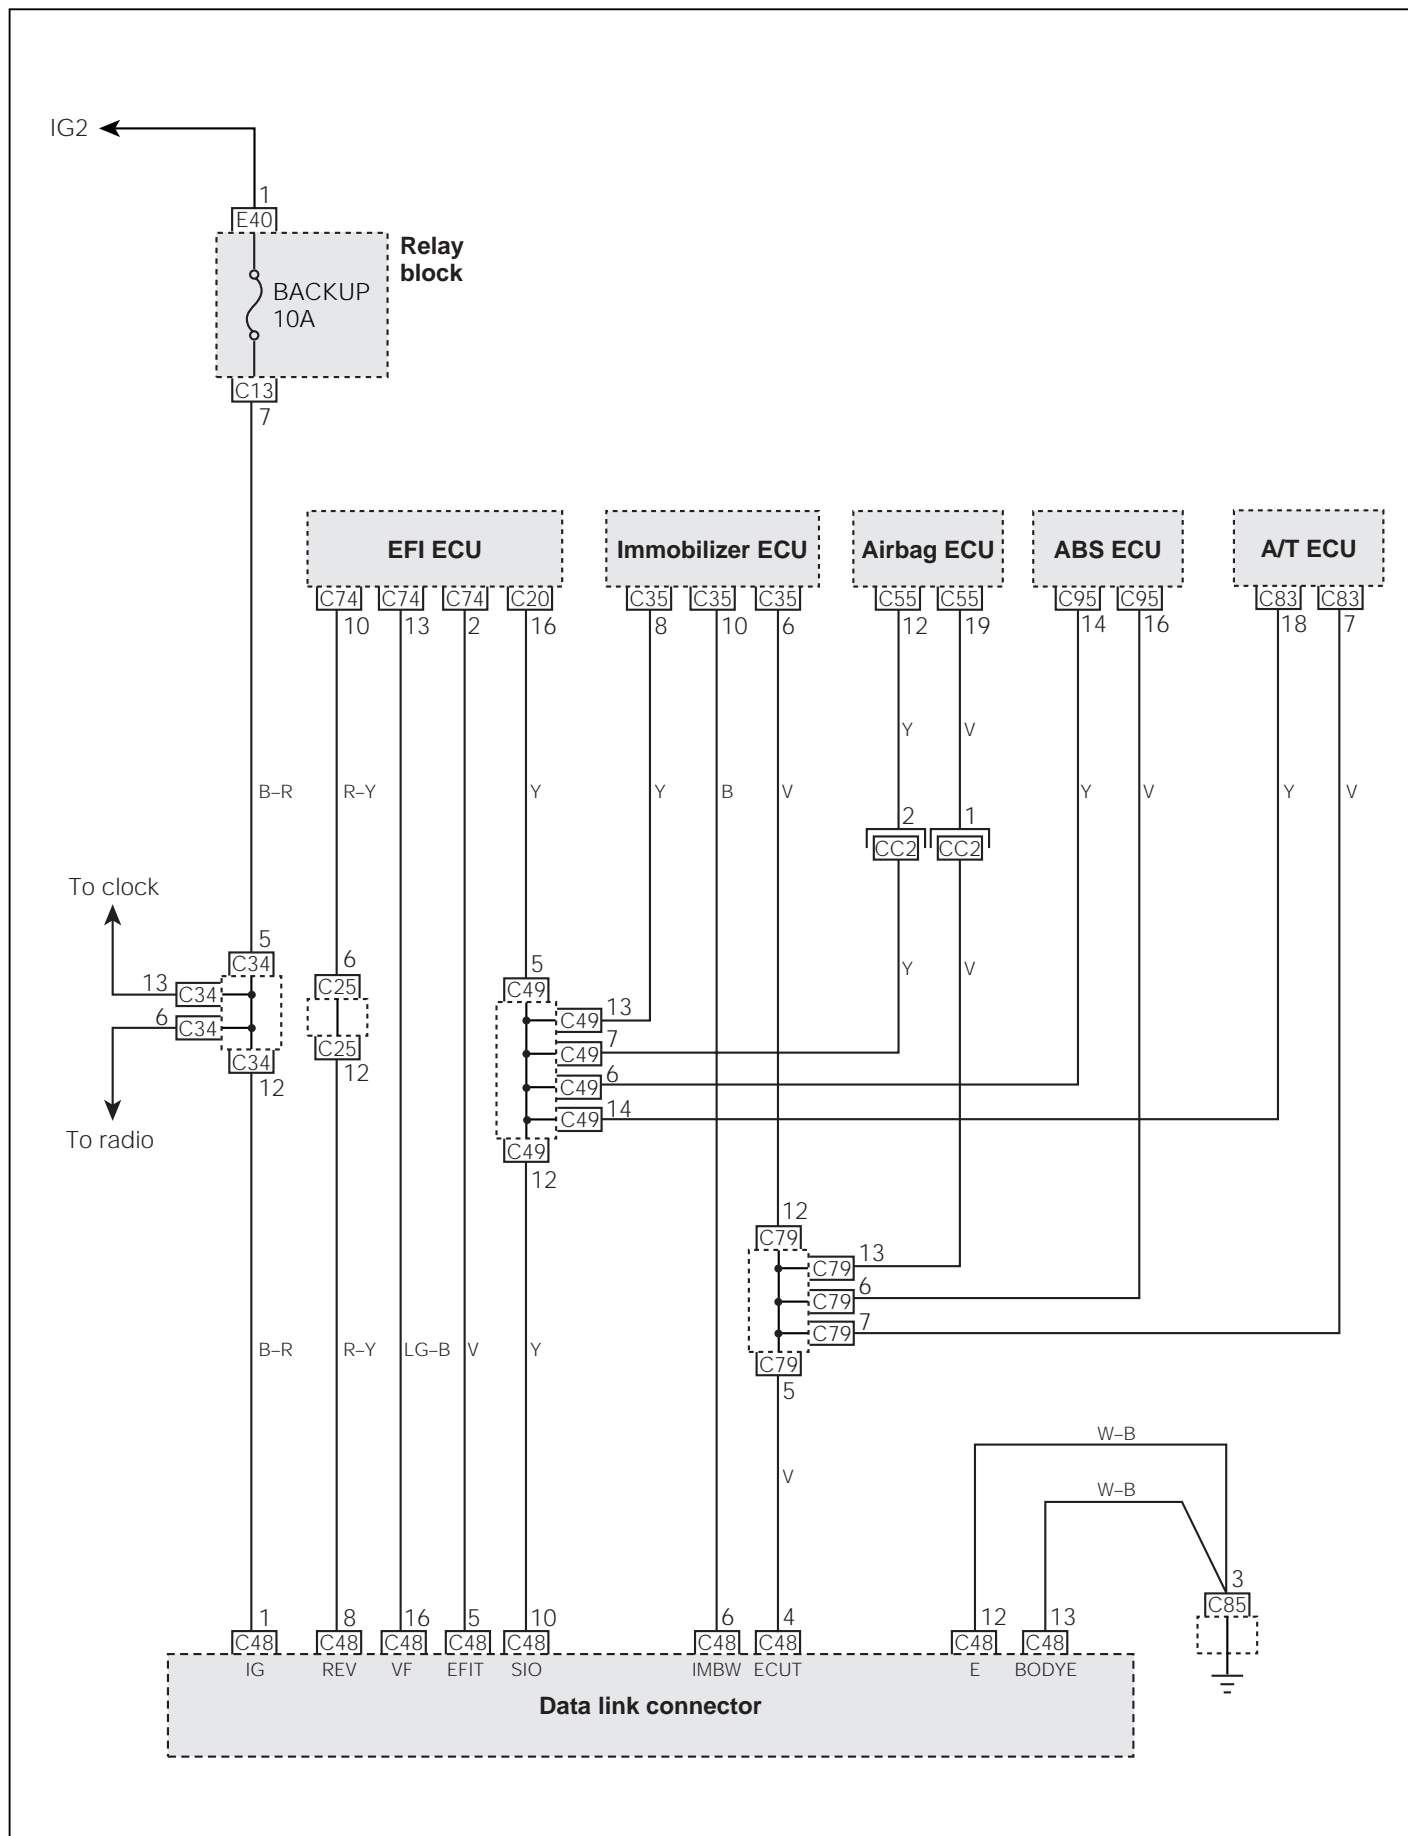
RADIO & CIGARETTE LIGHTER (LHD)



 
 
 
 

 
 

 
 
 
 
 
 
 
 
 
 
 
 
 
DATA LINK CONNEUTOR (RHD)



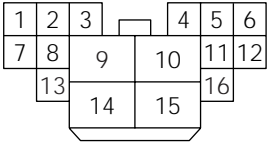
 
 
 
 
 
 
 
 
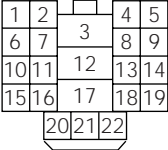
 
 
 
 
 
 

 
 
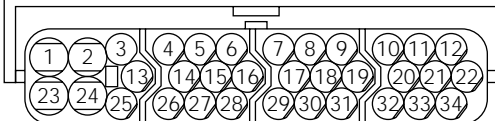
DATA LINK CONNEUTOR (LHD)



 
 
 
 
 
 
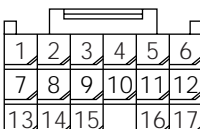
 
 
 
 
 
 
 

 
 
 
 
 
 

 
CONNEUTOR LIST -1

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
A01	Black		A11	Gray	
Horn			Relay block		
A02	Black		A12	Gray	
Horn			Relay block		
A03	Green		A13	Gray	
Front turn lamp RH			Relay block		
A04	Black	 	A14	Black	
Front fog lamp RH			Relay block		
A05	Black		A15	Black	
Headlamp RH			Brake oil switch		
A06	Gray		A16	Blue	
Headlamp leveling unit RH			T/F VSV 1		
A07	White		A17	Green	
Clearance lamp RH			T/F VSV 2		
A08	White		A18	Blue	
Earth junction connector			Junction connector		
A09	Gray		A19	Black	
Front ABS speed sensor RH			Junction block		
A10	White		A20	Black	
Side turn lamp RH			Junction block		





















CONNEUTOR LIST -2

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
A21	Black		A31	Blue	
Junction block			Junction connector		
A22	Black		A32	White	 (EU & Except for EU with A/B system)
Junction block			Turn switch		
A23	White		A32	White	 (EU & Except for EU with A/B system)
Antenna coil			Turn switch		
A24	Blue		A32	White	 (EU & Except for EU with A/B system)
Junction connector			Turn switch		
A25	Blue		A32	White	 (Except for EU without Airbag system)
Junction connector			Turn switch		
A26	White		A39	Black	
Earth junction connector			Stop lamp switch		
A27	White		A40	Black	
Rear view mirror switch			Flasher relay		
A28	Black		A41	Gray	
Ignition switch			Relay block		
A29	Black		A42	White	
Radiator fan motor			Sub fuse block		
A30	White		A43	Black	
Headlamp leveling switch			ABS ECU		





















CONNEUTOR LIST -3

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
B01	Green		B11	Black	
Front turn lamp LH			Front wiper motor		
B02	Black	 (EU only)  (Except for EU)	B12	White	
Front fog lamp LH			Side turn lamp LH		
B03	White		B13	White	
Clearance lamp LH			EFI ECU		
B04	White	 	B14	White	 
Earth junction connector			Earth junction connector		
B05	Gray		B15	Yellow	
Headlamp LH			Passenger's squib		
B06	Gray		B16	White	
Dual pressure switch			A/C evap. temp. sensor		
B07	White		B17	Black	
Magnet clutch			Blower motor		
B08	Gray		B18	Black	
Front speed sensor LH			Blower resistor		
B09	Black		B19	Blue	
Front washer motor			Junction block		
B10	White		B20	Blue	
Rear washer motor			Junction block		

               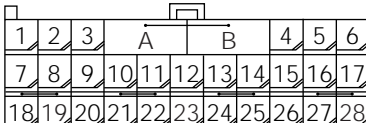                      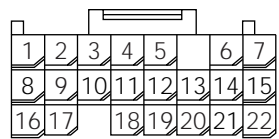  
 
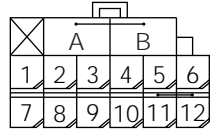
 
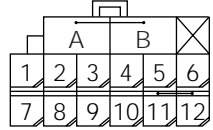
 
 
 
 
 
 
 
 
 
 
 
 

 
 
CONNTEUTOR LIST -4

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
B21	Blue		B29	Blue	 (With tachometer)
Junction block			Meter 18P		
B22	Blue		B34	Black	
Junction block			Data link connector		
B23	White		B35	Black	
Key switch			Blower switch		
B24	Yellow		B36	Black	
Driver's squib			A/C switch		
B25	Blue	 (EU only)	B37	White	 (Except for EU)
Defogger switch			Radio		
B27	White	 (EU only)	B38	White	 (Except for EU)
Rear wiper switch			Radio		
B29	Gray	 (Without tachometer)	B39	White	
Meter 18P			Cigarette lighter		
B29	Blue	 (Without tachometer)	B40	Yellow	
Meter 10P			Airbag ECU		
B29	White	 (Without tachometer)	B41	White	
Meter 13P			Backup lamp switch		
B29	White	 (With tachometer)	B42	Gray	
Meter 22P			Neutral start switch		

 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 
 
 
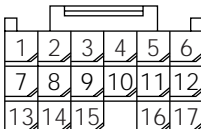
CONNEUTOR LIST -5

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
B43	White		B55	Black	
O/D OFF switch			A/T earth		
B44	Black		B56	Black	
Parking brake switch			Headlamp leveling unit LH		
B46	Black	 (EU only)	B57	White	
Differential lock switch			Clock		
B48	Black	 (EU only)	B58	White	
Front fog lamp switch			Immobilizer ECU		
B49	White		B59	Black	
Radiator fan motor check terminal			Rear fog lamp switch		
B50	White		B60	White	
A/F resistor			ITC ECU		
B51	Gray		B61	White	
A/T ECU			Keyless entry sensor		
B52	Gray		B62	Black	
A/T ECU			Option		
B53	Gray		B63	White	
A/T ECU			ITC ECU		
B54	White		B64	White	
EFI ECU			Asy tray		





















CONNEUTOR LIST -6

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
B67	White		B77	Blue	
Earth junction block			Junction connector		
B68	Yellow		B78	White	
Airbag ECU			Junction connector		
B69	Yellow		B79	Blue	
Airbag ECU			Junction connector		
B70	Black		B80	White	
ABS G sensor			Junction connector		
B71	Black		B81	White	
Vehicle speed sensor			Junction connector		
B72	Blue		B82	Gray	
Junction connector			Junction connector		
B73	Gray		B83	White	
Junction connector			Junction connector		
B74	Blue		B84	Orange	
Junction connector			Junction connector		
B75	White		---	---	
Junction connector			-----		
B76	Orange		---	---	
Junction connector			-----		

CONNEUTOR LIST -7

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
C01	Black		C11	Gray	
Horn			Relay block		
C02	Black		C12	Gray	
Horn			Relay block		
C03	Green		C13	Gray	
Front turn lamp RH			Relay block		
C04	Black	 (EU only)  (Except for EU)	C14	Black	
Front fog lamp RH			Relay block		
C05	Black		C15	Black	
Headlamp RH			Front washer motor		
C06	Gray		C16	White	
Headlamp leveling unit RH			Rear washer motor		
C07	White		C17	Blue	
Clearance lamp RH			T/F VSV 1		
C08	White		C18	Green	
Earth junction connector			T/F VSV 2		
C09	Gray		C19	Black	
Front speed sensor RH			Ignition switch		
C10	White		C20	White	
Side turn lamp RH			EFI ECU		

                    CONNEUTOR LIST -8

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
C21	White		C28	White	 (With tachometer)
Earth junction connector			Meter 22P		
C22	Yellow		C28	Blue	 (With tachometer)
Passenger's squib			Meter 18P		
C23	Blue		C33	White	
Junction connector			Junction block		
C24	Blue		C34	Orange	
Junction connector			Junction block		
C25	Blue		C35	Gray	
Junction connector			Immobilizer ECU		
C26	White		C36	Black	
A/C evap. temp. sensor			Blower motor		
C27	White		C37	Black	
Antenna coil			Blower resistor		
C28	White	 (Without tachometer)	C38	White	
Meter 16P			Defogger switch		
C28	Blue	 (Without tachometer)	C39	White	
Meter 10P			Rear wiper switch		
C28	Gray	 (Without tachometer)	C40	Yellow	
Meter 13P			Driver's squib		

CONNEUTOR LIST -9

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
C41	Black		C51	Black	
Front fog lamp switch			Blower switch		
C42	Black		C52	White	
Rear fog lamp switch			Radio		
C43	Blue		C53	White	
Junction block			Radio		
C44	Blue		C54	White	
Junction block			Cigarette lighter		
C45	Black		C55	Yellow	
Junction block			Airbag ECU		
C46	Blue		C56	White	
Junction block			Backup lamp switch		
C47	Black		C57	Gray	
Junction block			Neutral start switch		
C48	Black		C58	White	
Data link connector			O/D OFF switch		
C49	White		C59	Black	
Junction connector			Parking brake switch		
C50	Black		C60	Black	
A/C switch			Front wiper motor		





















CONNEUTOR LIST -10

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
C61	Blue		C71	White	
Junction connector			Radiator fan motor check terminal		
C62	Black		C72	Blue	
Junction block			Junction connector		
C63	White		C73	White	
ITC ECU			Junction connector		
C64	Black		C74	White	
Clock			EFI ECU		
C65	Blue		C75	White	
Junction connector			Ash tray		
C66	White		C76	White	
ITC ECU			Resistor		
C67	Blue		C79	White	
Junction connector			Junction connector		
C68	Gray		C80	White	
Relay block			Junction connector		
C69	Black		C81	Blue	
Radiator fan motor			Junction connector		
C70	White		C82	Gray	
Sub fuse block			A/T ECU		

     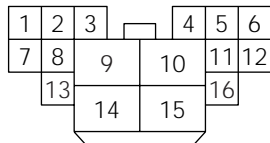         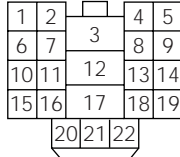     
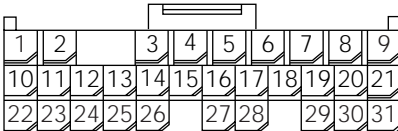
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 
 
CONNEUTOR LIST -11

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
C83	Gray		C93	Black	
A/T ECU			ABS G sensor		
C84	Gray		C94	Black	
A/T ECU			Vehicle speed sensor		
C85	White		C95	Black	
Earth junction connector			ABS ECU		
C86	Black		---	----	
Key switch			----		
C87	White		---	----	
Keyless entry sensor			----		
C88	Black		---	----	
A/T earth			----		
C89	Yellow		---	----	
Airbag ECU			----		
C90	Yellow		---	----	
Airbag ECU			----		
C91	Black		---	----	
Daylight relay			----		
C92	White		---	----	
Daylight relay			----		

 

 
 
 
 
 
 

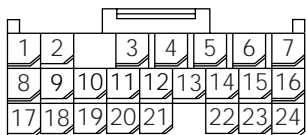

 



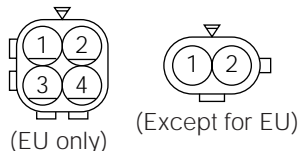

 

 
CONNEUTOR LIST -12

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
D01	Green		D11	Blue	
Front turn lamp LH			Junction connector		
D02	Black		D12	Blue	
Front fog lamp LH			Junction connector		
D03	White		D13	Black	
Clearance lamp LH			Junction block		
D04	White		D14	Blue	
Earth junction connector			Junction block		
D05	Gray		D15	White	 (Vehicles with EU & Egyptian spec. & those equipped with A/B)
Headlamp LH			Turn switch		
D06	Gray		D15	White	 (Vehicles with EU & Egyptian spec. & those equipped with A/B)
Dual pressure switch			Turn switch		
D07	White		D15	White	 (Vehicles with EU & Egyptian spec. & those equipped with A/B)
Magnet clutch			Turn switch		
D08	Gray		D15	White	 (Vehicles not equipped with A/B, with spec. other than those of EU & Egypt)
Front speed sensor LH			Turn switch		
D09	Black		D19	White	
Brake oil switch			Rear view mirror switch		
D10	White		D20	White	
Side turn lamp LH			Headlamp leveling unit LH		

 
 
 

 

 





 





 

CONNEUTOR LIST -13

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
D21	White		E01	White	
Earth junction connector			EFI ECU		
D22	Blue		E02	White	
Junction connector			Resistor		
D23	White		E03	Gray	
Stop lamp switch			Fuel injector No.4		
D24	Black		E04	Brawn	
Flasher relay			Fuel injector No.3		
D25	Black		E05	Black	
Differential lock switch			Intake air temp. sensor		
D26	White		E06	Black	
A/F resistor			Throttle sensor		
D27	White		E07	Black	
Daylight earth			ISC		
D28	White		E08	Blue	
Dimmer relay			Purge VSV		
D29	Gray		E09	Gray	
Headlamp leveling unit RH			Alternator		
---	----		E10	Black	
-----			cam position sensor		

 

 
 
 
 
 
 

 
 
 
 

 
 
 
 
 
 
CONNEUTOR LIST -14

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
E11	Gray		E21	White	
Water temp. sender gauge			Ignition coil 4		
E12	Gray		E22	Black	
Rear O2 sensor			Oil pressure switch		
E13	White		E23	Black	
Engine earth			Crank angle sensor		
E14	Gray		E24	Black	
Fuel injector No.2			Pressure sensor		
E15	Brawn		E25	White	
Fuel injector No.1			EFI ECU		
E16	Black		E26	Gray	
Oil control valve			Igniter unit		
E17	Black		E27	Gray	
P/S pressure sensor			Radiator thermo. control		
E18	White		E28	Gray	
Ignition coil 1			Front O2 sensor		
E19	White		E30	Gray	
Ignition coil 2			Igniter unit		
E20	White		E31	White	
Ignition coil 3			Engine earth		

 
 
 
 

 
 
 
 
 
 
 
 
 
CONNEUTOR LIST -15

No.	COLOR	CONNECTOR DIAGRAM		No.	COLOR	CONNECTOR DIAGRAM	
CONNECTION				CONNECTION			
E32	Orange			E43	White		
Junction connector				Starter			
E33	Yellow			E44	White		
Junction connector				Engine earth			
E35	Yellow			---	----		
Junction connector				-----			
E36	Orange			---	----		
Junction connector				-----			
E37	Gray			---	----		
Knock sensor				-----			
E38	Gray			---	----		
Relay block				-----			
E39	White			---	----		
Body earth				-----			
E40	White			---	----		
Relay block				-----			
E41	White			---	----		
Starter				-----			
E42	White			---	----		
Alternator				-----			

 
 
 
 
 
 
 

 
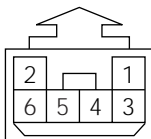
 
 
 

 

 

 

CONNEUTOR LIST -16

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
F01	White		F11	White	
Junction block			Luggage room lamp		
F02	White		F12	White	
Front courtesy switch RH			Backdoor courtesy switch		
F03	White		F13	White	
Rear courtesy switch RH			Rear combination lamp LH		
F04	White		F14	White	
Rear speaker RH			Rear speaker LH		
F05	White		F15	White	
Body earth			Backup lamp RH		
F06	White		F16	White	
Accessory socket (+)			Rear fog lamp		
F07	White		F17	Black/White/	 (EU only) (Except for EU)
Accessory socket (-)			License plate lamp RH		
F08	White		F19	Black	 (EU only)
Rear combination lamp RH			License plate lamp LH		
F09	White		F20	White	
Front courtesy switch LH			Backup lamp LH		
F10	White		F21	White	
Rear courtesy switch LH			Junction connector		

CONNEUTOR LIST -17

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
F22	White		J01	White	
Junction connector			Front speaker RH		
F23	White		J02	White	
Driver's seatbelt switch			Front driver's doorlock switch		
F24	Orange		J03	White	
Diode			Rear view mirror unit RH		
F25	Yellow		J04	White	
Pretensioner RH			Front driver's power window motor		
F26	Yellow		J05	White	
Pretensioner LH			Power window master switch		
F27	Black		J07	Black	
Passenger's seatbelt switch			Front driver's doorlock motor		
F28	Gray		---	----	
Rear speed sensor RH			-----		
F29	White		---	----	
Rear speed sensor LH			-----		
---	----		---	----	
-----			-----		
---	----		---	----	
-----			-----		

















CONNEUTOR LIST -18

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
K01	White		M01	White	
Front speaker LH			Front speaker LH		
K02	Black		M02	White	
Front passenger's doorlock motor			Front driver's doorlock switch		
K03	White		M03	White	
Rear view mirror unit LH			Rear view mirror unit LH		
K04	Blue		M04	White	
Front passenger's power window motor			Front driver's power window motor		
K05	White		M05	White	
Front passenger's power window switch			Power window master switch		
L01	White		M06	Black	
Front passenger's speaker			Front driver's doorlock motor		
L02	Black		---	---	
Front passenger's doorlock motor					
L03	White		---	---	
Rear view mirror unit RH					
L04	White		---	---	
Front passenger's power window motor					
L05	White		---	---	
Front passenger's power window switch					

CONNEUTOR LIST -19

No.	COLOR	CONNECTOR DIAGRAM	No.	COLOR	CONNECTOR DIAGRAM
CONNECTION			CONNECTION		
N01	Black		Q01	White	
Rear doorlock motor RH			High mounted stop lamp (LED)		
N02	White		Q02	White	
Rear power window switch RH			High mounted stop lamp (Bulb)		
N03	White		R01	Blue	
Rear power window motor RH			Interior lamp		
O01	Black		T01	Black	
Rear doorlock motor LH			Turbine cam sensor		
O02	White		T02	Gray	
Rear power window switch LH			A/T solenoid		
O03	White		T03	Black	
Rear power window motor LH			Port cam sensor		
P01	Black		U01	Black	
Backdoorlock motor			Fuel pump		
P02	White		W01	Black	
Rear wiper motor			Defogger wire (+)		
P03	White		W02	Black	
Body earth			Defogger wire (-)		
---	----		W03	White	
-----			body earth		

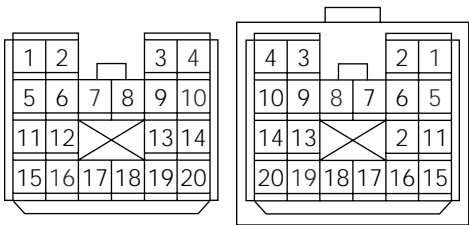 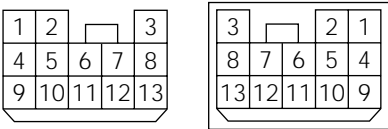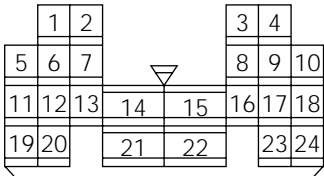 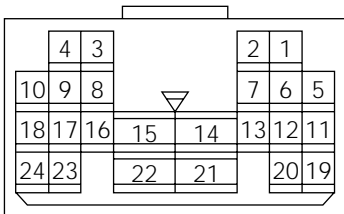  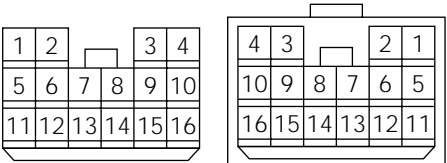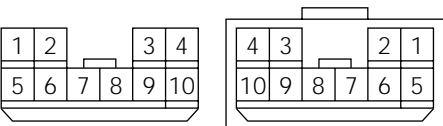 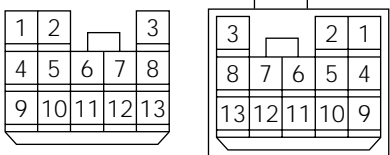  CONNEUTOR LIST -20

Connector No.		Connector No.	
Connector color	CONNECTOR DIAGRAM	Connector color	CONNECTOR DIAGRAM
AB1		AF1	
White		White	
		AJ1	
		White	
AB2		AJ2	
		White	
White		BB1	
		Black	
		BB2	
		White	
AB3		BE1	
		Blue	
Black		BF1	
		White	
AB4		BF2	
		White	
Black		BF3	
		Yellow	
AE1		BF4	
Gray		Yellow	

CONNEUTOR LIST -21

Connector No.	CONNECTOR DIAGRAM		Connector No.	CONNECTOR DIAGRAM	
Connector color			Connector color		
BK1			CD2		
White					
BR1			White		
White					
BT1			CD3		
Gray					
BT2			White		
White					
BT3			CE1		
Black			Blue		
CC1			CE2		
Black			Gray		
CC2			CF1		
Black			White		
CD1			CF2		
			White		
			CF3		
			Yellow		
White			CF4		
			Yellow		


CONNEUTOR LIST -22

Connector No. Connector color	CONNECTOR DIAGRAM	Connector No. Connector color	CONNECTOR DIAGRAM
CL1 White		EE1 Black	
CR1 White		FN1 White	
CT1 Black		FO1 White	
CT2 Gray		FP1 Blue	
CT3 White		FQ1 White	
DD1 White		FU1 White	
		PQ1 Blue	
DF1 White		PW1 White	
DM1 White		----	-----
DM2 White		----	-----


MEMO


Dotted lines for writing content.

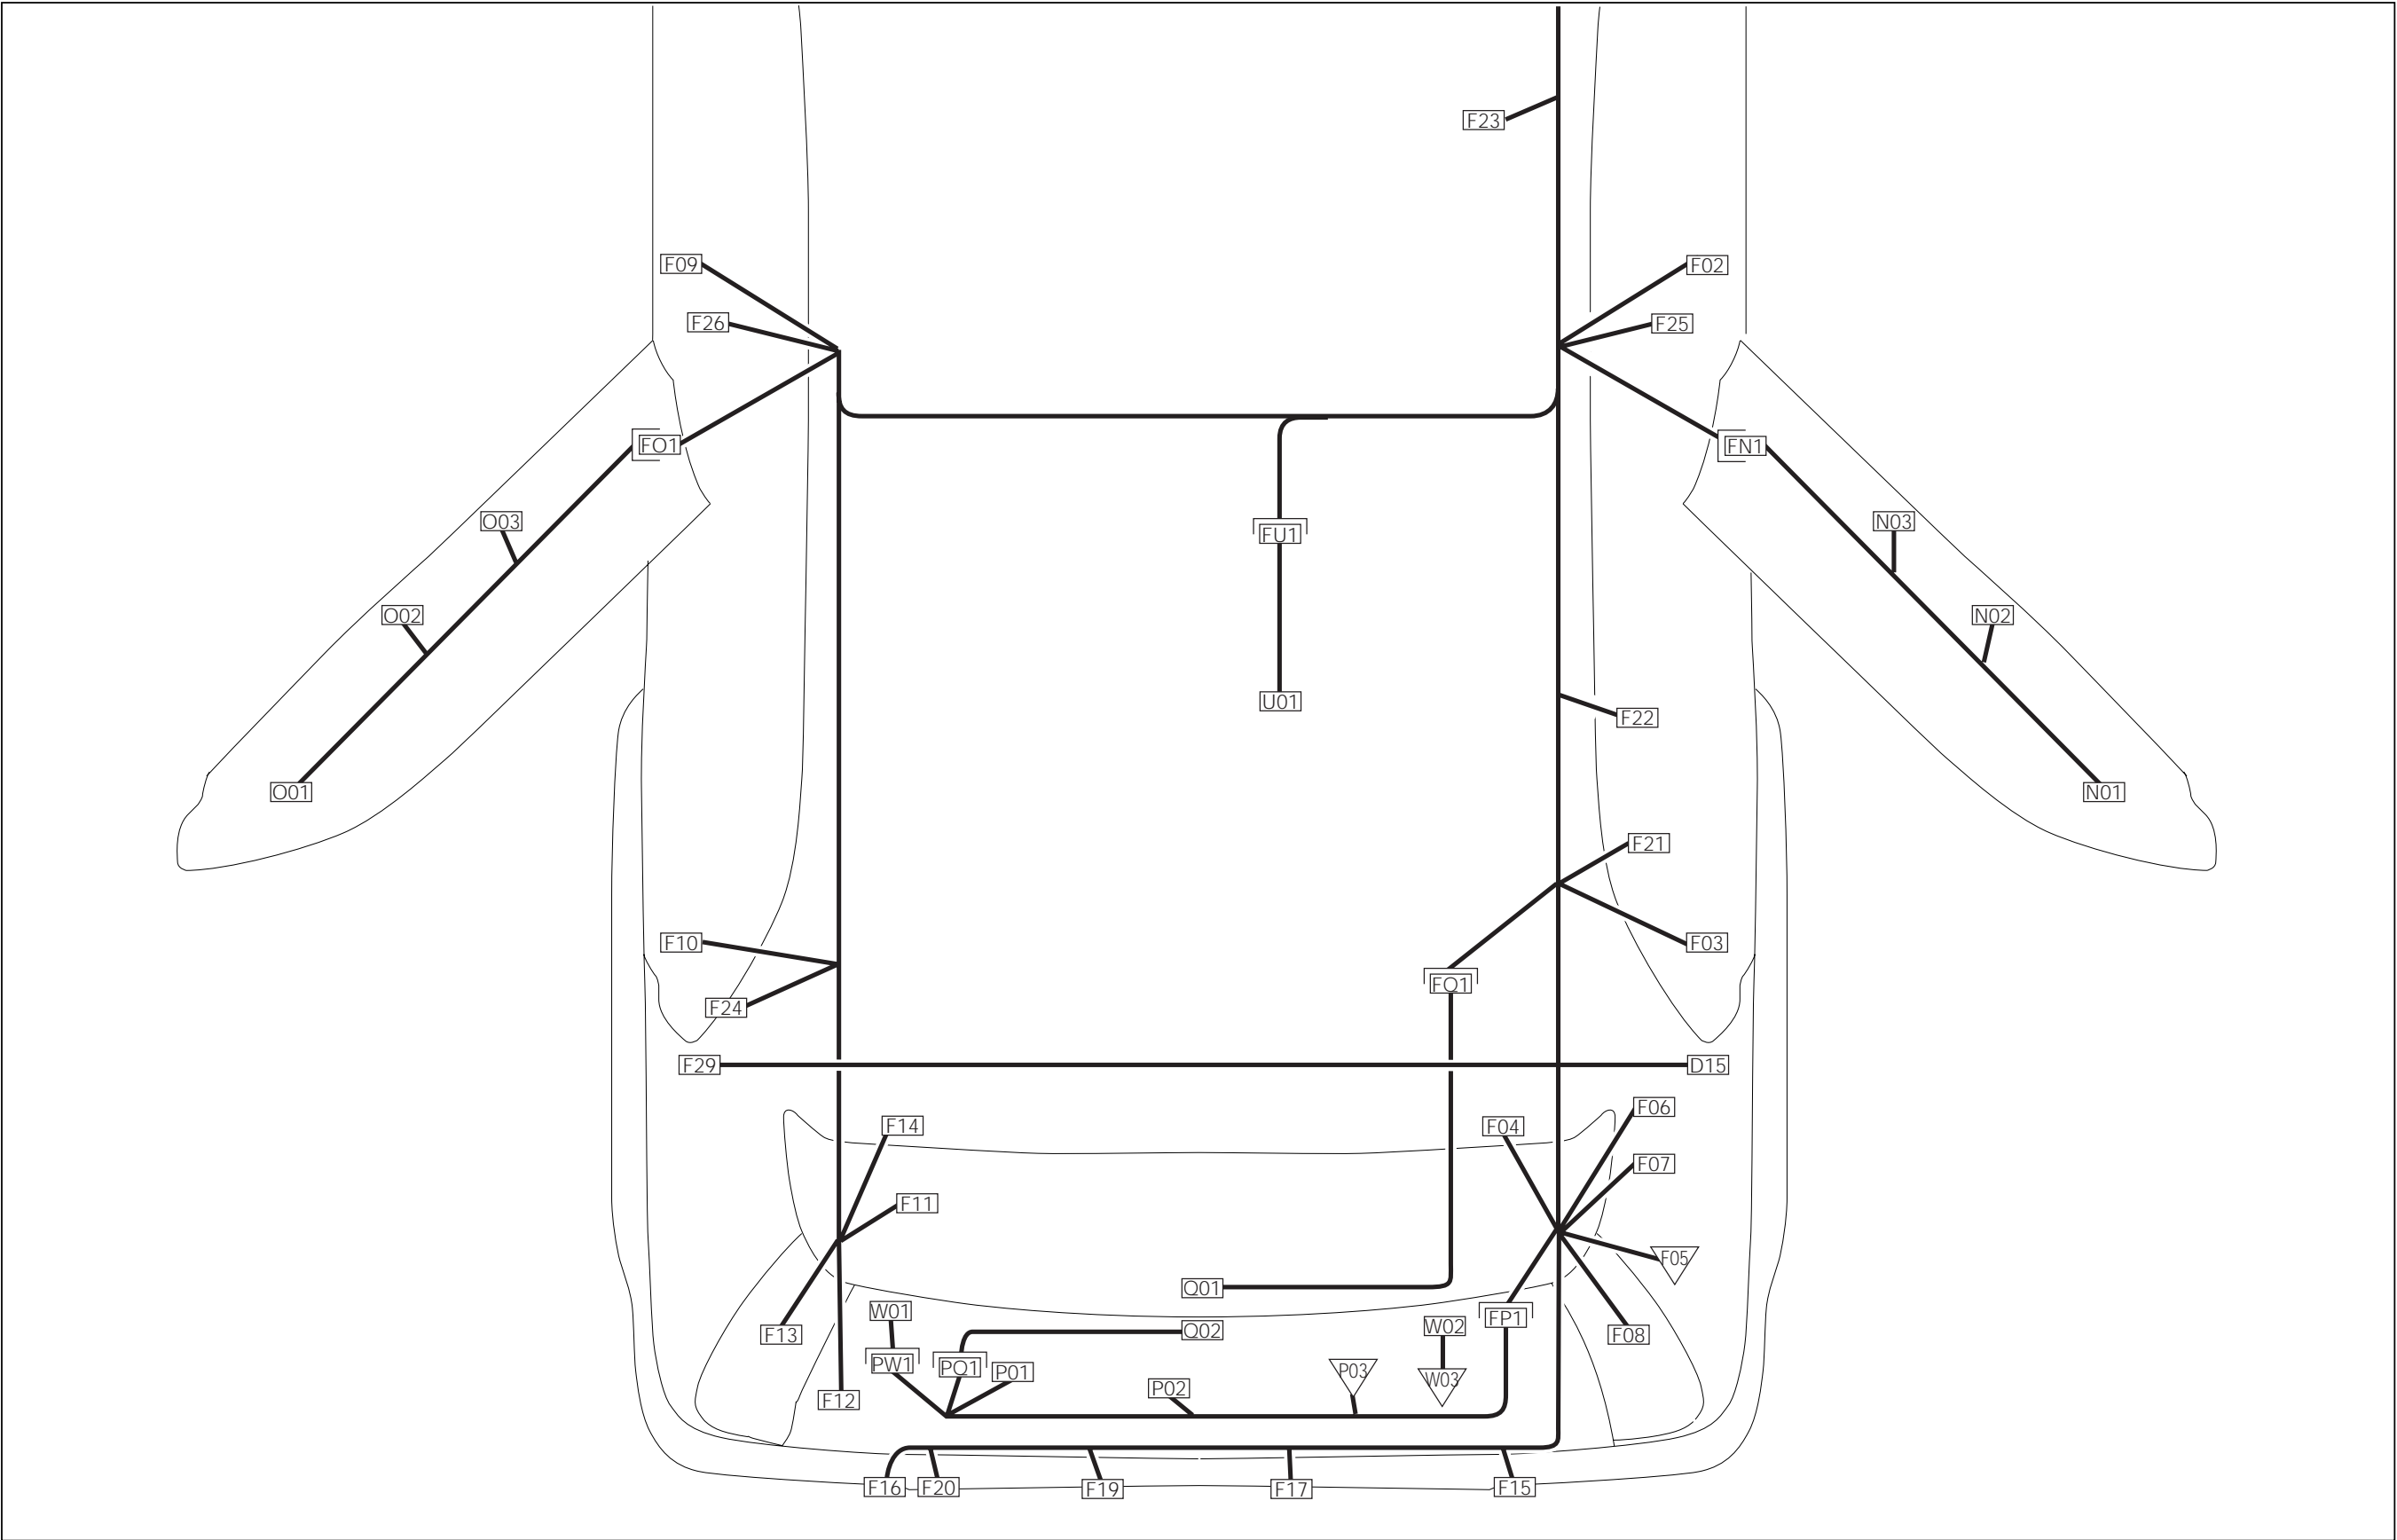RHD VEHICLE -2



LHD VEHICLE -1

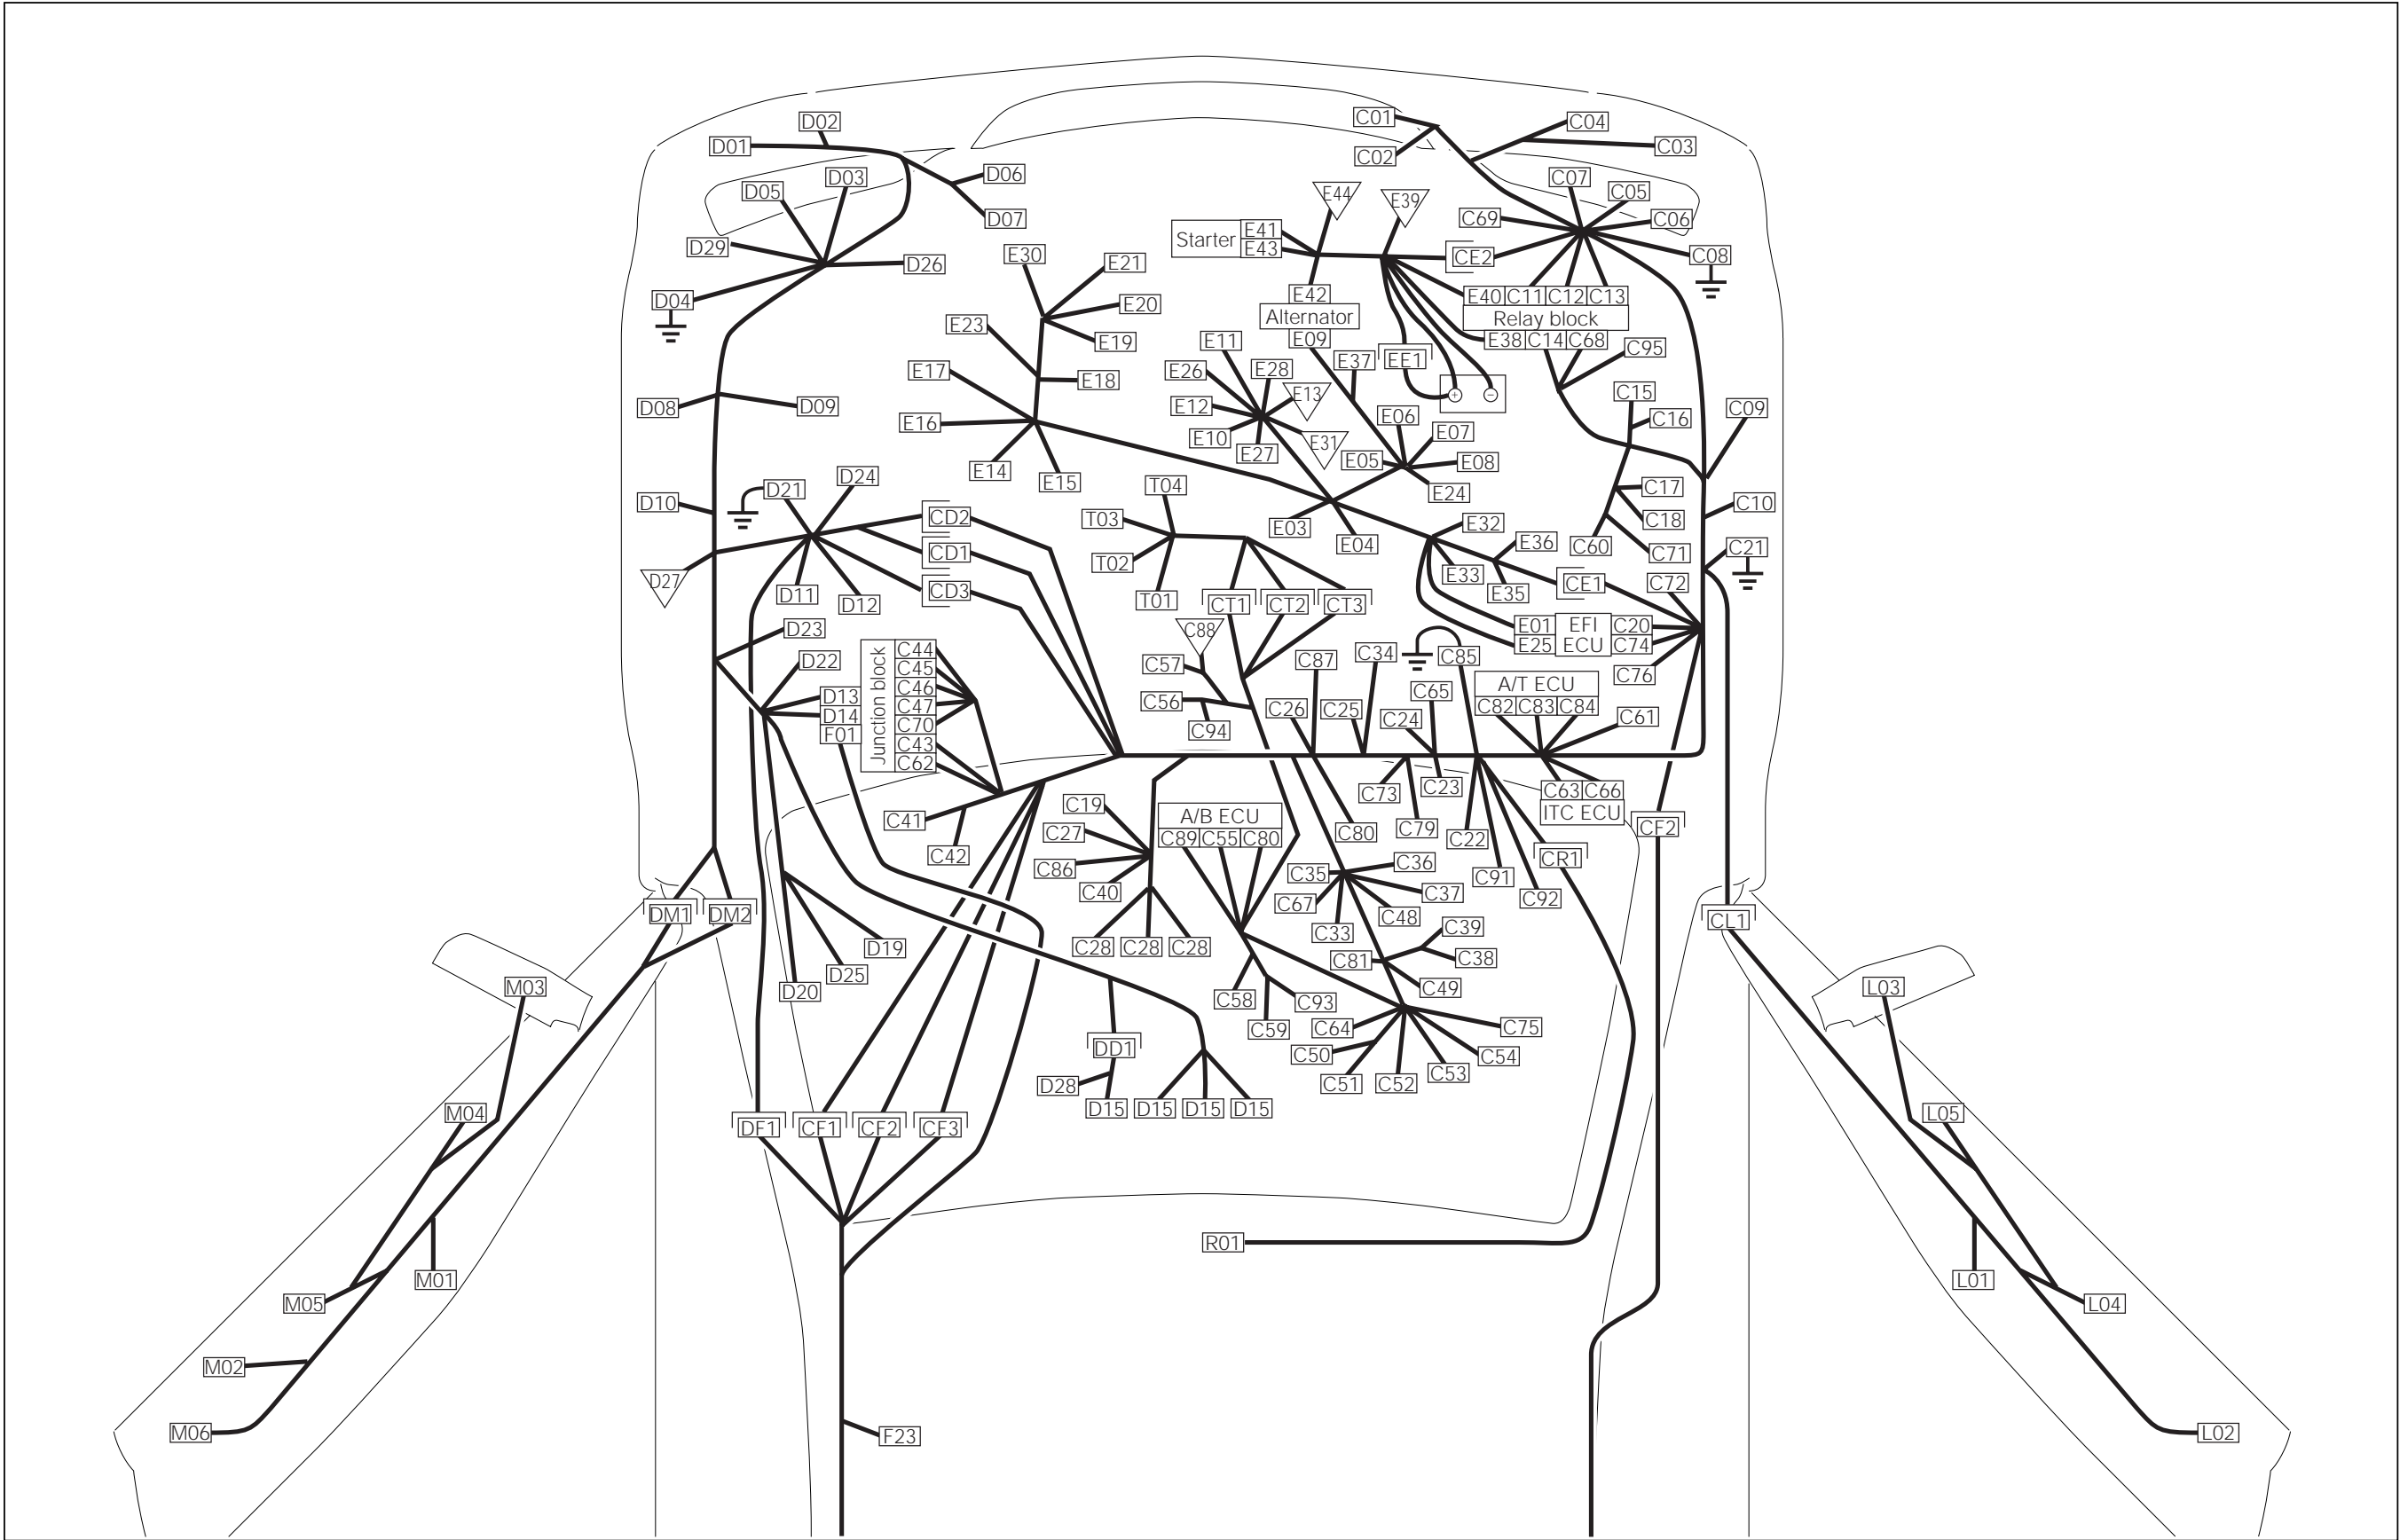

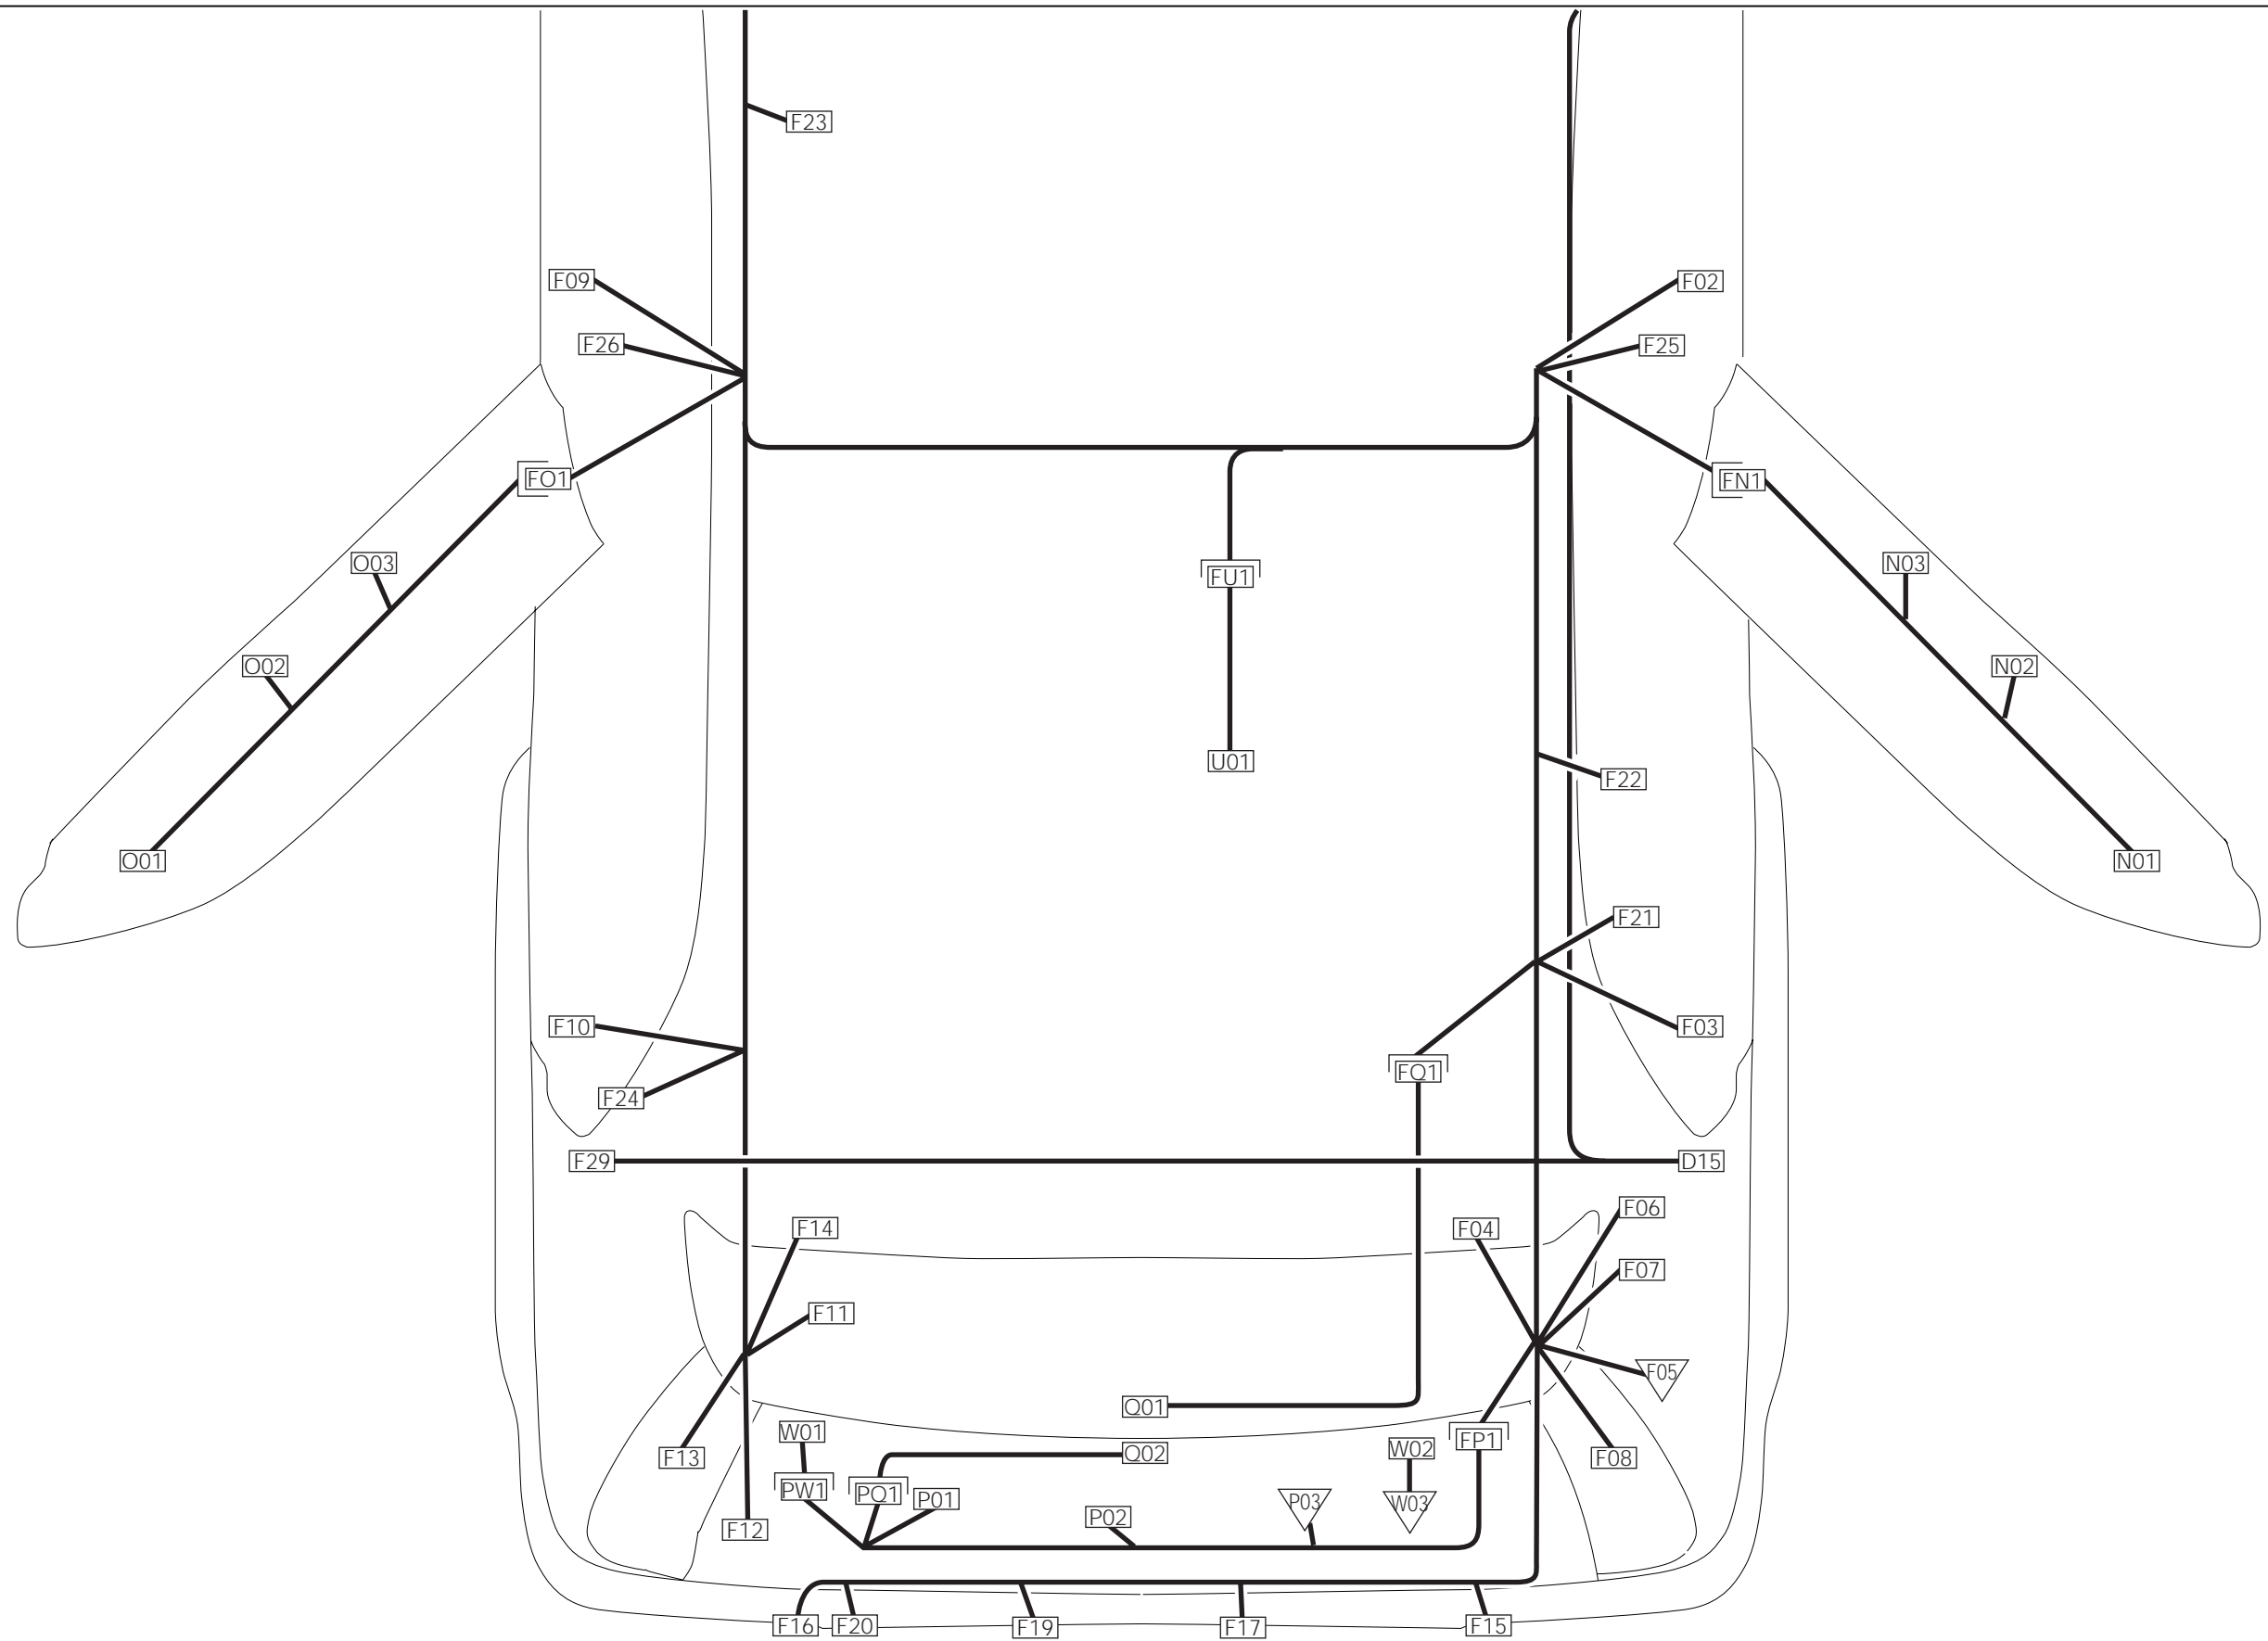

TO NEXT SECTION

HW00129