

Ignition Switch - Sedona


INSPECTION

- 1. Disconnect the connector under the steering column.
- 2. Check the switch continuity between the terminals specified below.
- 3. If continuity is not within specification, replace the switch.

Terminal		B ₁	B ₂	ACC	IG ₁	IG ₂	ST	K ₁	K ₂
Position	Lock								
	Remove/Insert							○ — ○	
ACC		○ —		○ —				○ — ○	
ON		○ —	○ —	○ —	○ —			○ — ○	
ST		○ —	○ —	○ —	○ —		○ —	○ — ○	

G00402613

Fig. 1: Ignition Switch Test Chart
Courtesy of KIA MOTORS AMERICA, INC.

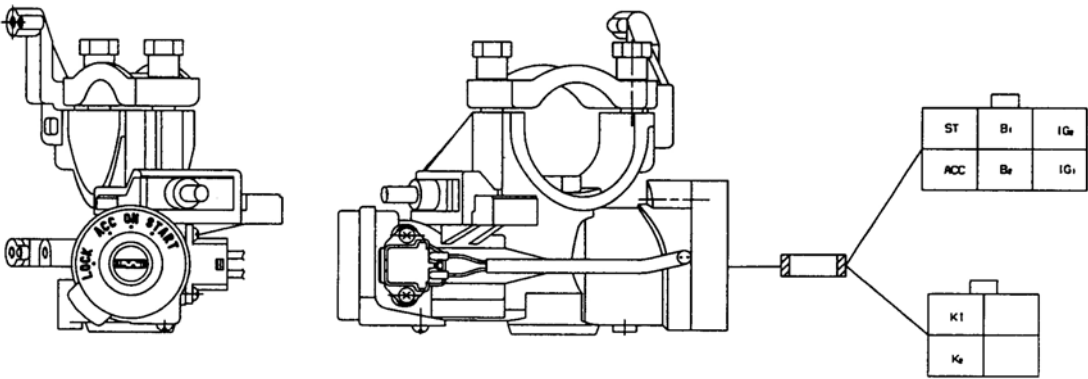

G00402614

Fig. 2: Illustrating Switch Connector Pinout
Courtesy of KIA MOTORS AMERICA, INC.