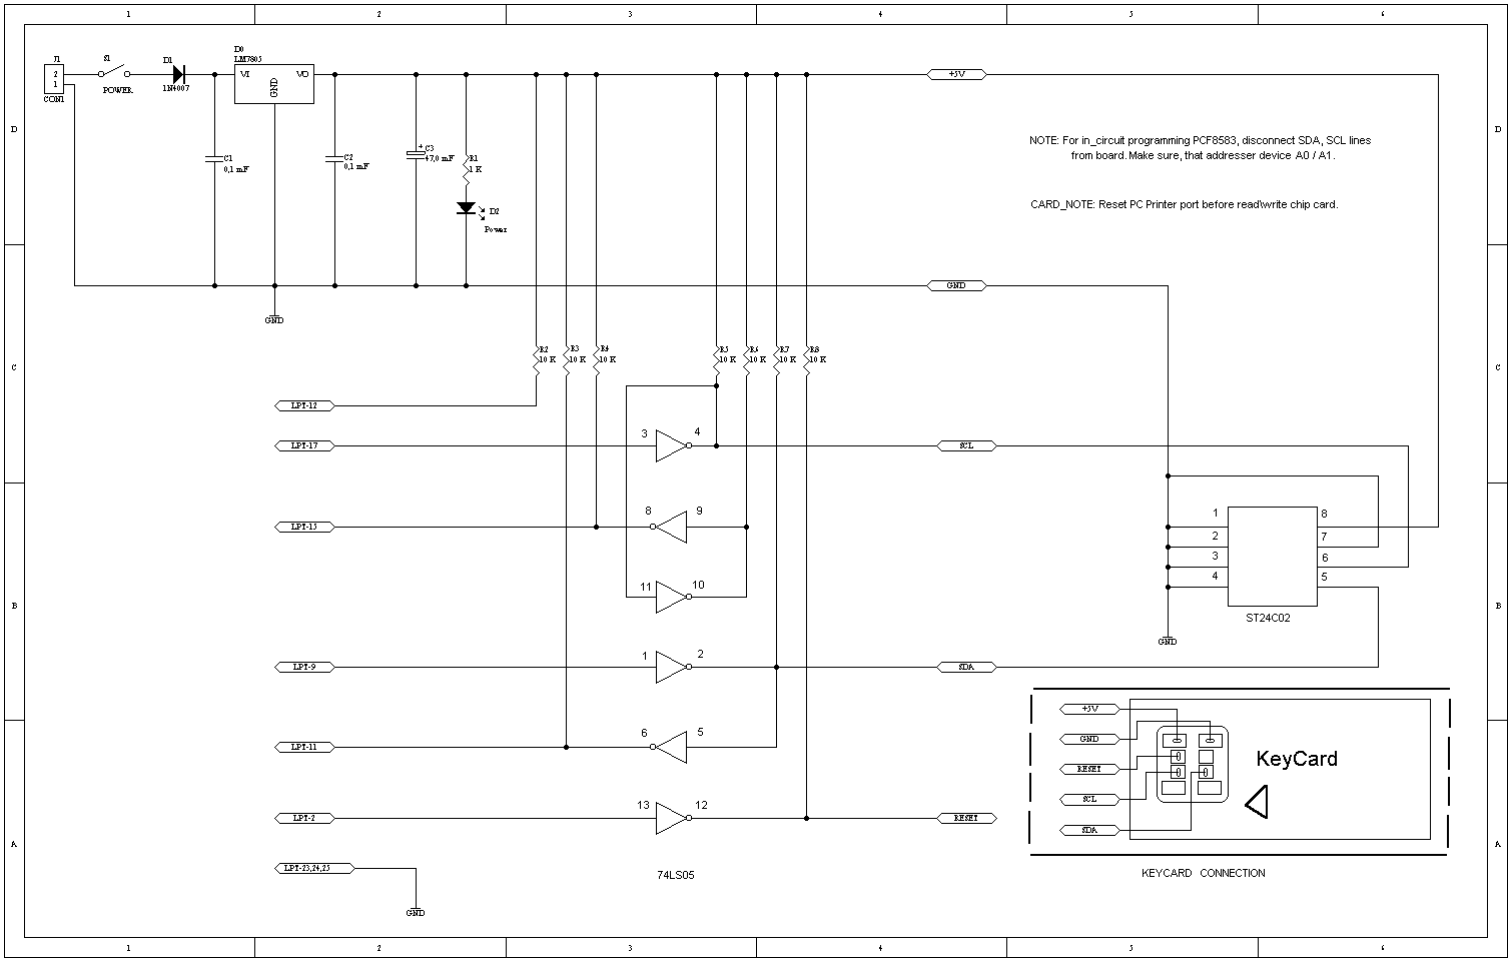
J1
CON1
S1
POWER.
D1
1N4007
D0
LM7805
VI
VO
GND
C1
0,1 mF
C2
0,1 mF
C3
47,0 mF
R1
1 K
D2
Power
+5V
GND
NOTE: For in_circuit programming PCF8583, disconnect SDA, SCL lines
from board. Make sure, that addresser device A0 / A1.
CARD_NOTE: Reset PC Printer port before read\write chip card.
R2
10 K
R3
10 K
R4
10 K
R5
10 K
R6
10 K
R7
10 K
R8
10 K
LPT-12
LPT-17
LPT-13
LPT-9
LPT-11
LPT-2
LPT-23,24,25
SCL
SDA
RESET
ST24C02
74LS05
KeyCard
KEYCARD CONNECTION