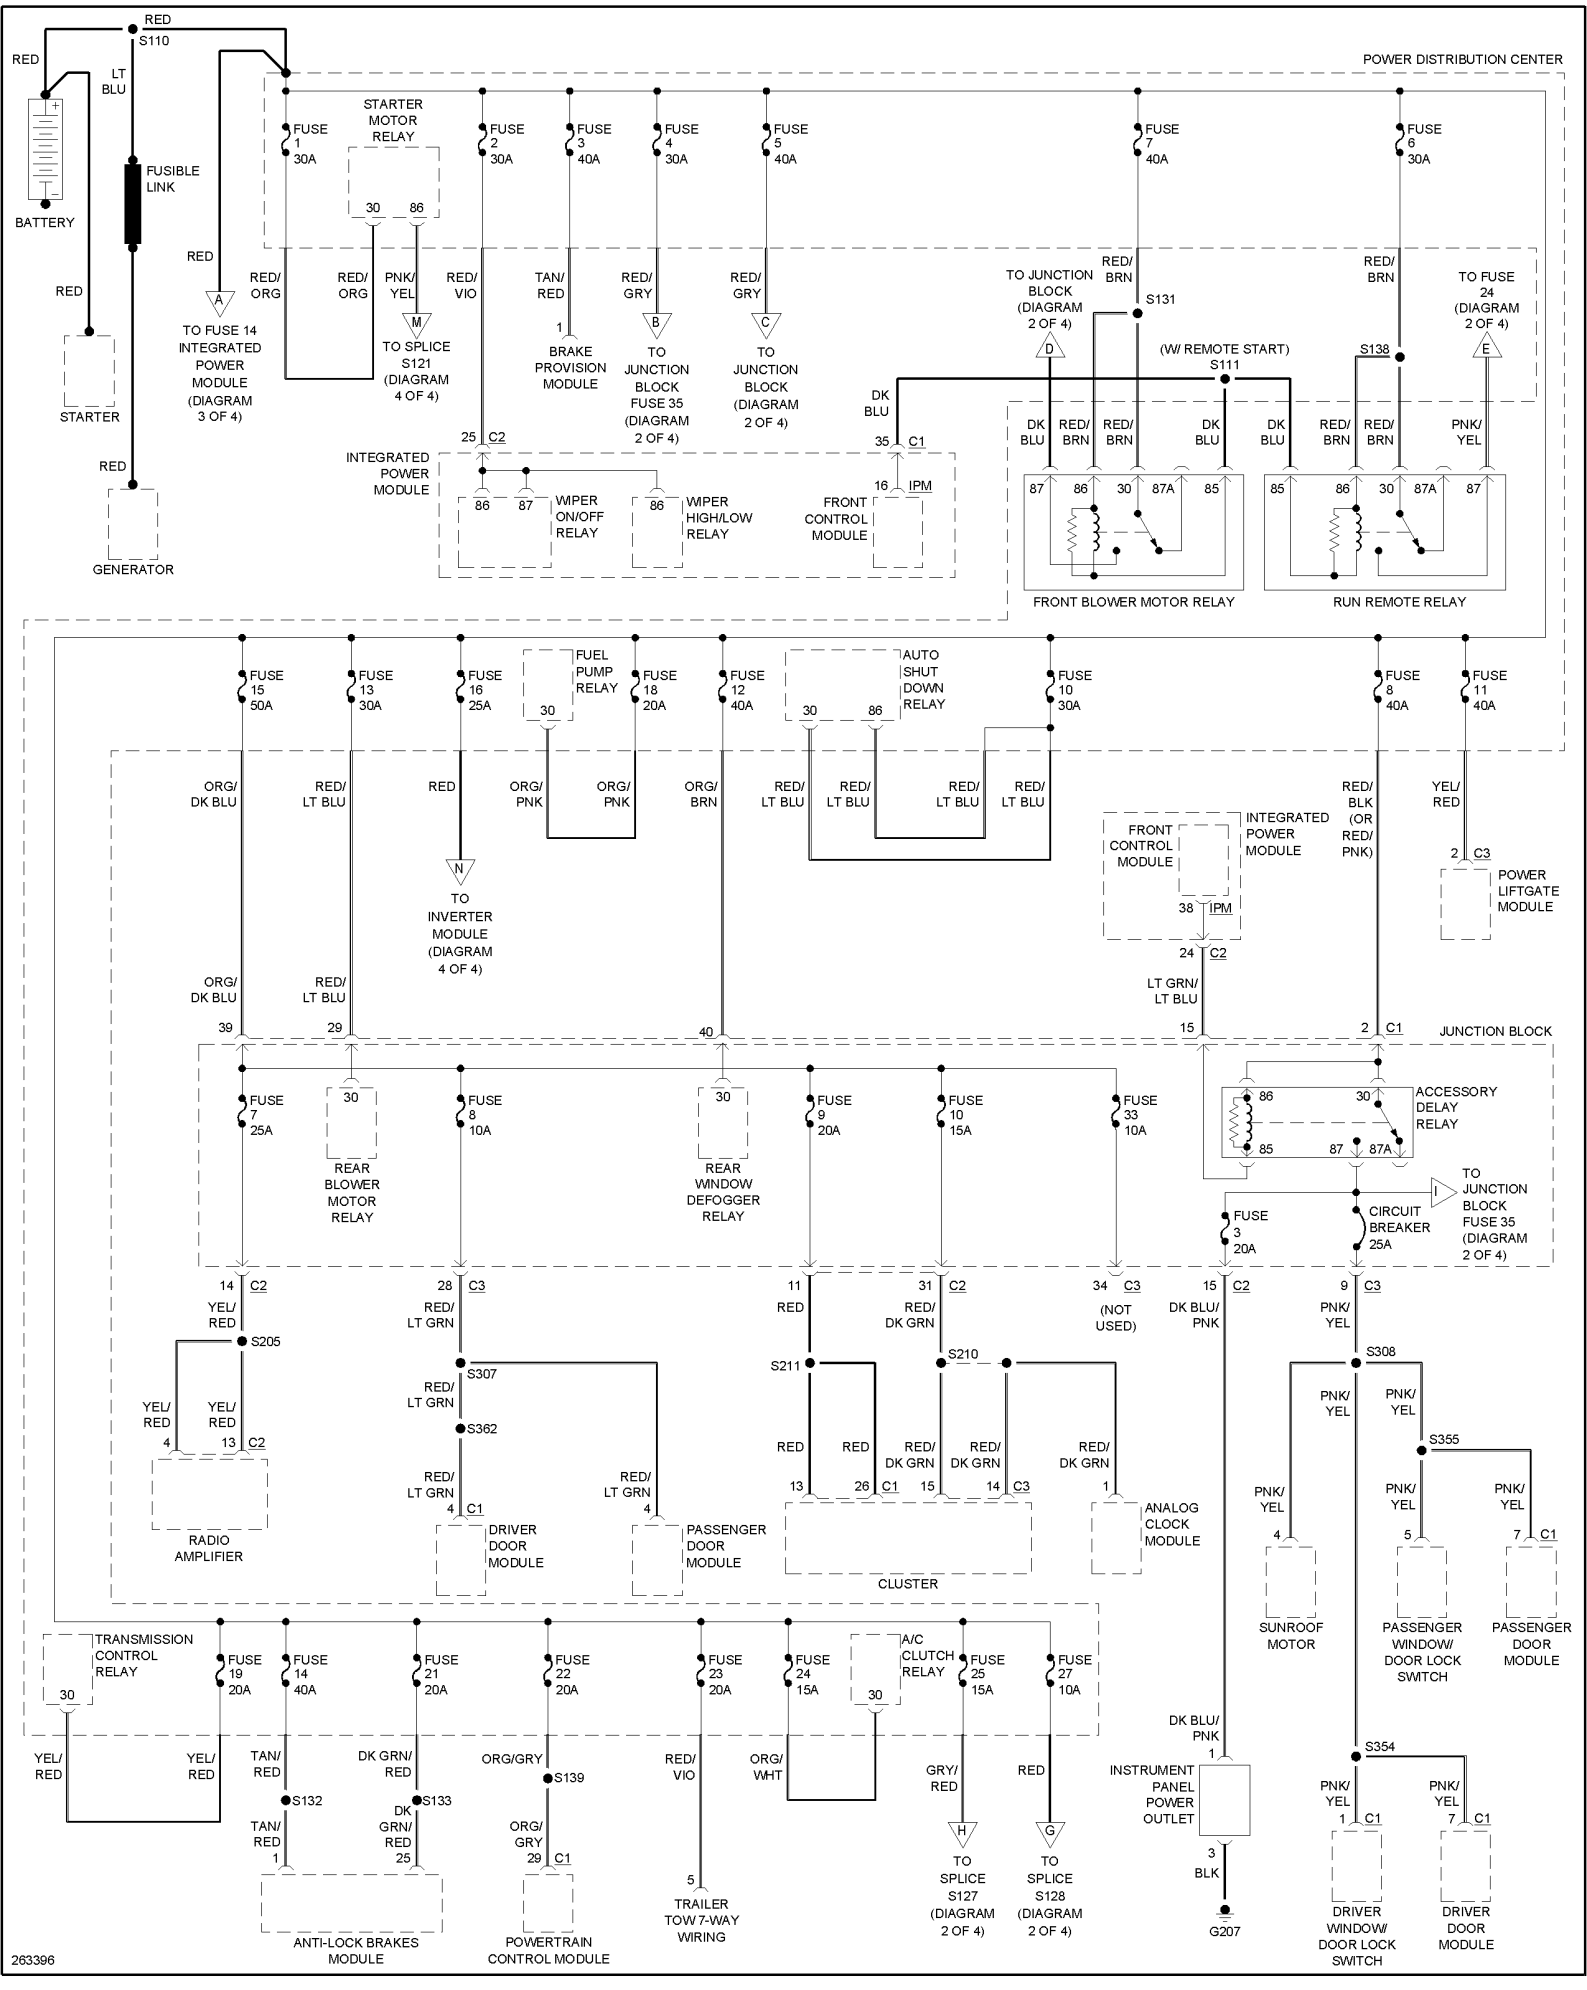
POWER DISTRIBUTION CENTER
RED
S110
LT BLU
FUSIBLE LINK
BATTERY
STARTER
GENERATOR
STARTER MOTOR RELAY
FUSE 1 30A
FUSE 2 30A
FUSE 3 40A
FUSE 4 30A
FUSE 5 40A
FUSE 7 40A
FUSE 6 30A
TO FUSE 14 INTEGRATED POWER MODULE (DIAGRAM 3 OF 4)
TO SPLICE S121 (DIAGRAM 4 OF 4)
BRAKE PROVISION MODULE
TO JUNCTION BLOCK FUSE 35 (DIAGRAM 2 OF 4)
TO JUNCTION BLOCK (DIAGRAM 2 OF 4)
TO JUNCTION BLOCK (DIAGRAM 2 OF 4)
S131
(W/ REMOTE START) S111
S138
TO FUSE 24 (DIAGRAM 2 OF 4)
INTEGRATED POWER MODULE
WIPER ON/OFF RELAY
WIPER HIGH/LOW RELAY
FRONT CONTROL MODULE
IPM
FRONT BLOWER MOTOR RELAY
RUN REMOTE RELAY
FUSE 15 50A
FUSE 13 30A
FUSE 16 25A
FUEL PUMP RELAY
FUSE 18 20A
FUSE 12 40A
AUTO SHUT DOWN RELAY
FUSE 10 30A
FUSE 8 40A
FUSE 11 40A
TO INVERTER MODULE (DIAGRAM 4 OF 4)
INTEGRATED POWER MODULE
POWER LIFTGATE MODULE
JUNCTION BLOCK
FUSE 7 25A
REAR BLOWER MOTOR RELAY
FUSE 8 10A
REAR WINDOW DEFOGGER RELAY
FUSE 9 20A
FUSE 10 15A
FUSE 33 10A
ACCESSORY DELAY RELAY
FUSE 3 20A
CIRCUIT BREAKER 25A
TO JUNCTION BLOCK FUSE 35 (DIAGRAM 2 OF 4)
RADIO AMPLIFIER
DRIVER DOOR MODULE
PASSENGER DOOR MODULE
CLUSTER
ANALOG CLOCK MODULE
(NOT USED)
S205
S307
S362
S210
S211
SUNROOF MOTOR
PASSENGER WINDOW/ DOOR LOCK SWITCH
PASSENGER DOOR MODULE
S355
S308
TRANSMISSION CONTROL RELAY
FUSE 19 20A
FUSE 14 40A
FUSE 21 20A
FUSE 22 20A
FUSE 23 20A
FUSE 24 15A
A/C CLUTCH RELAY
FUSE 25 15A
FUSE 27 10A
ANTI-LOCK BRAKES MODULE
POWERTRAIN CONTROL MODULE
TRAILER TOW 7-WAY WIRING
TO SPLICE S127 (DIAGRAM 2 OF 4)
TO SPLICE S128 (DIAGRAM 2 OF 4)
INSTRUMENT PANEL POWER OUTLET
G207
S354
DRIVER WINDOW/ DOOR LOCK SWITCH
DRIVER DOOR MODULE
263396