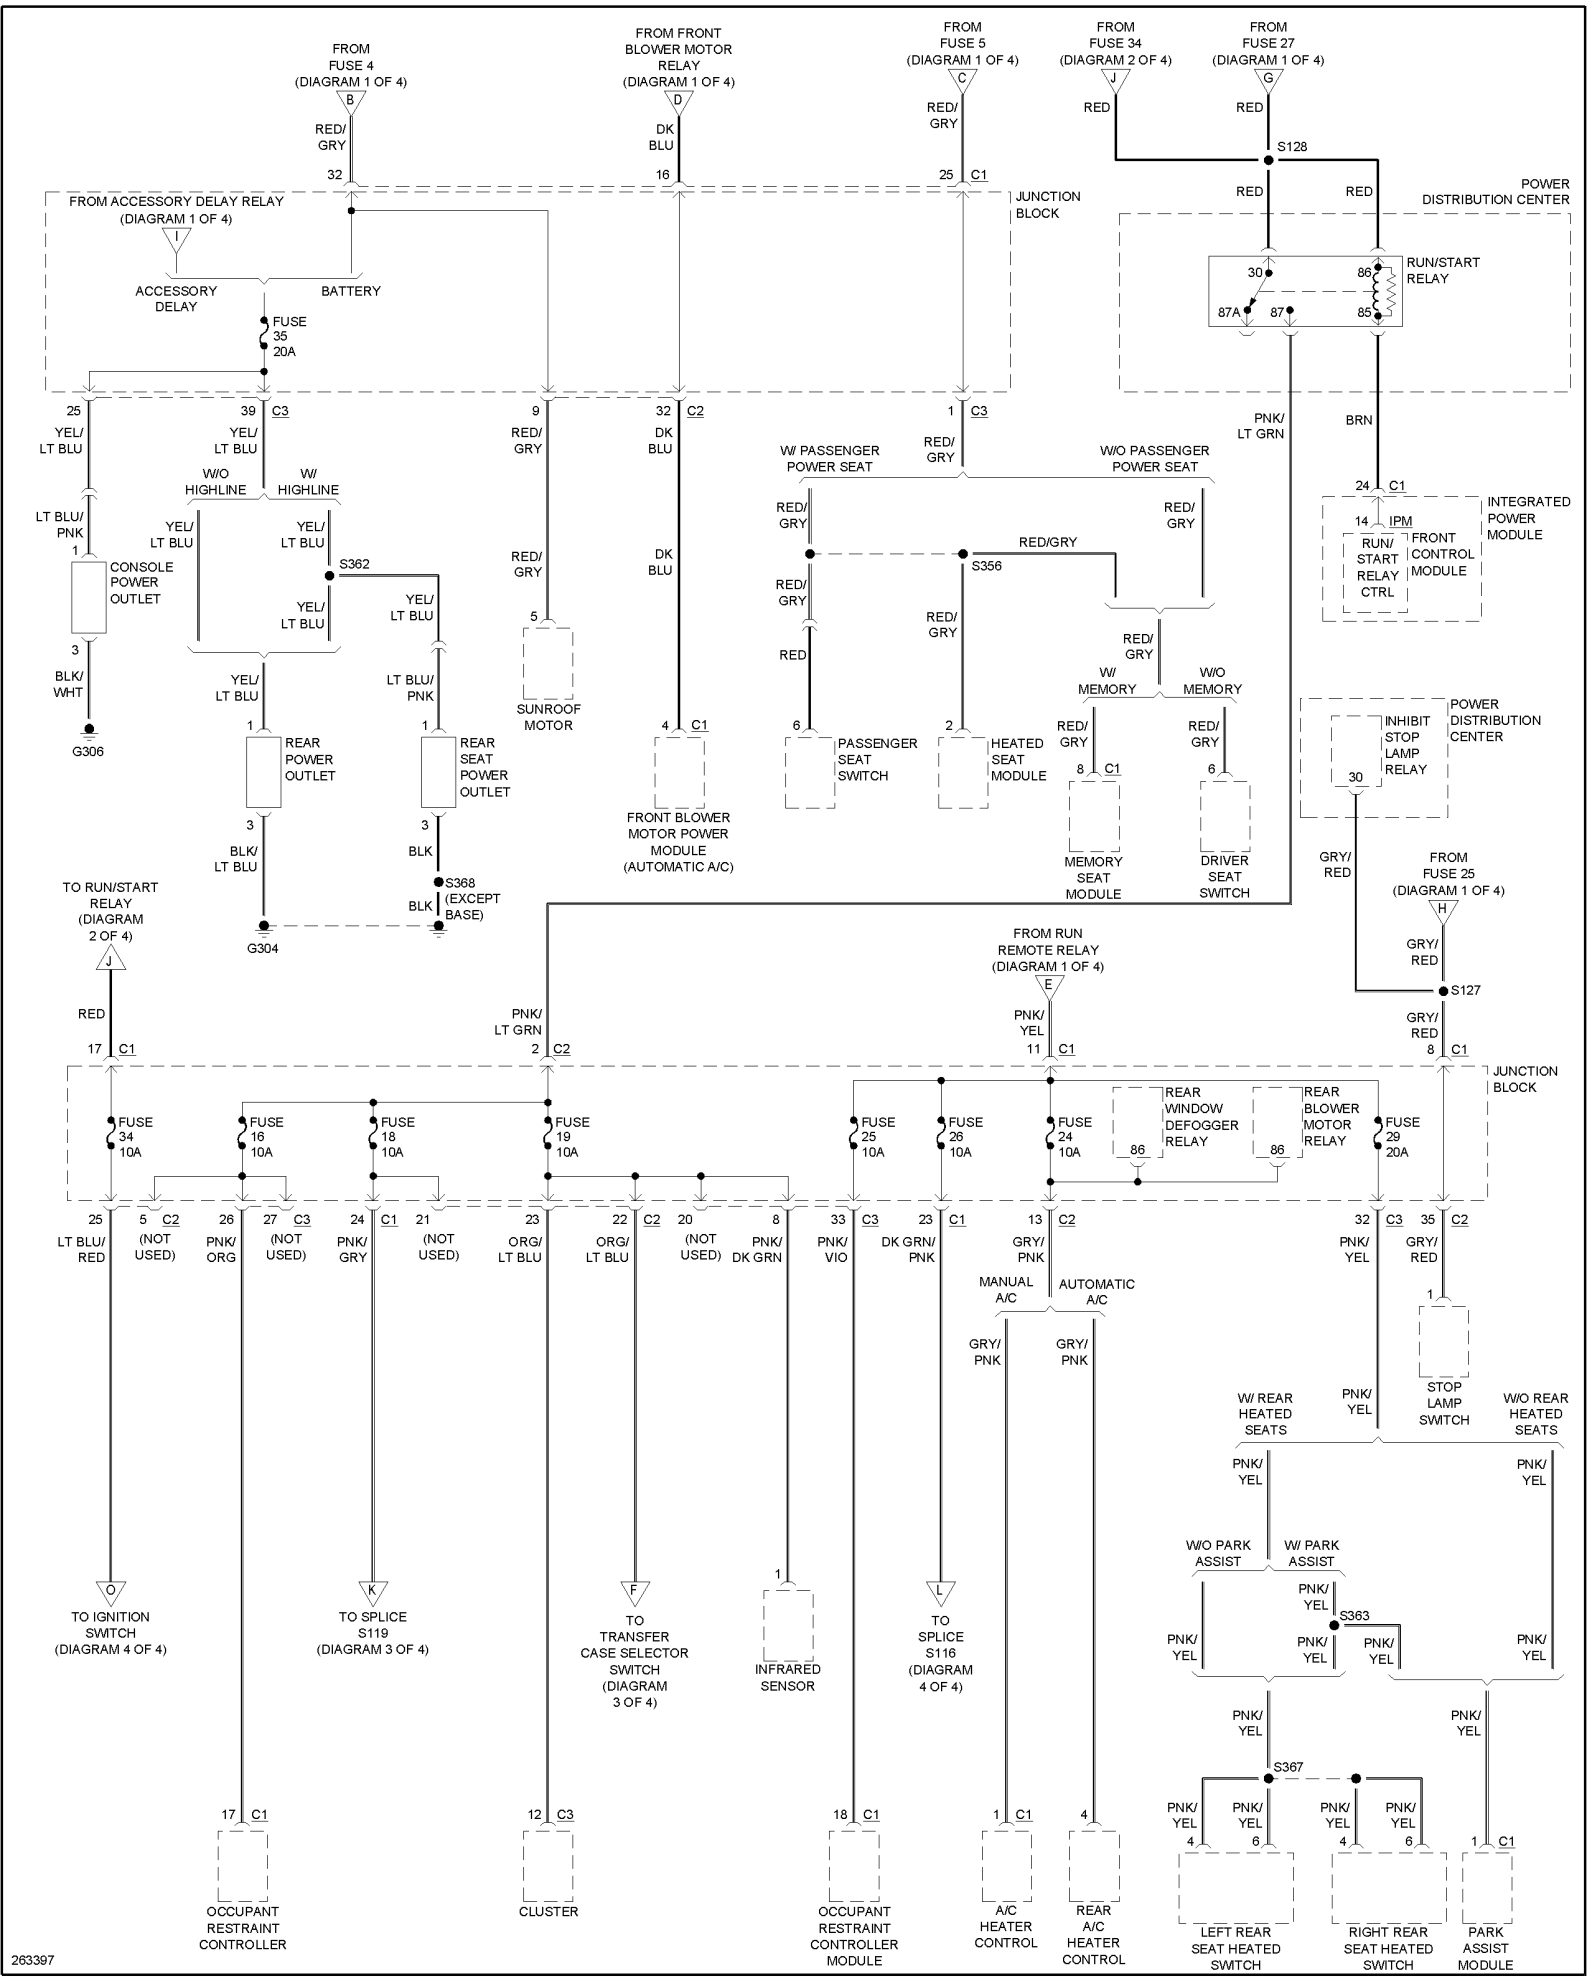
FROM FUSE 4 (DIAGRAM 1 OF 4)
FROM FRONT BLOWER MOTOR RELAY (DIAGRAM 1 OF 4)
FROM FUSE 5 (DIAGRAM 1 OF 4)
FROM FUSE 34 (DIAGRAM 2 OF 4)
FROM FUSE 27 (DIAGRAM 1 OF 4)
RED/ GRY
DK BLU
RED/ GRY
RED
RED
S128
JUNCTION BLOCK
POWER DISTRIBUTION CENTER
FROM ACCESSORY DELAY RELAY (DIAGRAM 1 OF 4)
ACCESSORY DELAY
BATTERY
FUSE 35 20A
RUN/START RELAY
30
86
87A
87
85
YEL/ LT BLU
YEL/ LT BLU
RED/ GRY
DK BLU
RED/ GRY
PNK/ LT GRN
BRN
W/ PASSENGER POWER SEAT
W/O PASSENGER POWER SEAT
W/O HIGHLINE
W/ HIGHLINE
LT BLU/ PNK
CONSOLE POWER OUTLET
S362
S356
RED/GRY
INTEGRATED POWER MODULE
IPM
RUN/ START RELAY CTRL
FRONT CONTROL MODULE
BLK/ WHT
G306
SUNROOF MOTOR
RED
W/ MEMORY
W/O MEMORY
POWER DISTRIBUTION CENTER
INHIBIT STOP LAMP RELAY
REAR POWER OUTLET
REAR SEAT POWER OUTLET
PASSENGER SEAT SWITCH
HEATED SEAT MODULE
MEMORY SEAT MODULE
DRIVER SEAT SWITCH
FRONT BLOWER MOTOR POWER MODULE (AUTOMATIC A/C)
BLK/ LT BLU
BLK
S368 (EXCEPT BASE)
G304
GRY/ RED
FROM FUSE 25 (DIAGRAM 1 OF 4)
TO RUN/START RELAY (DIAGRAM 2 OF 4)
FROM RUN REMOTE RELAY (DIAGRAM 1 OF 4)
S127
PNK/ LT GRN
PNK/ YEL
JUNCTION BLOCK
FUSE 34 10A
FUSE 16 10A
FUSE 18 10A
FUSE 19 10A
FUSE 25 10A
FUSE 26 10A
FUSE 24 10A
REAR WINDOW DEFOGGER RELAY
REAR BLOWER MOTOR RELAY
FUSE 29 20A
LT BLU/ RED
(NOT USED)
PNK/ ORG
(NOT USED)
PNK/ GRY
(NOT USED)
ORG/ LT BLU
ORG/ LT BLU
(NOT USED)
PNK/ DK GRN
PNK/ VIO
DK GRN/ PNK
GRY/ PNK
PNK/ YEL
GRY/ RED
MANUAL A/C
AUTOMATIC A/C
GRY/ PNK
GRY/ PNK
STOP LAMP SWITCH
W/ REAR HEATED SEATS
W/O REAR HEATED SEATS
W/O PARK ASSIST
W/ PARK ASSIST
S363
S367
TO IGNITION SWITCH (DIAGRAM 4 OF 4)
TO SPLICE S119 (DIAGRAM 3 OF 4)
TO TRANSFER CASE SELECTOR SWITCH (DIAGRAM 3 OF 4)
INFRARED SENSOR
TO SPLICE S116 (DIAGRAM 4 OF 4)
OCCUPANT RESTRAINT CONTROLLER
CLUSTER
OCCUPANT RESTRAINT CONTROLLER MODULE
A/C HEATER CONTROL
REAR A/C HEATER CONTROL
LEFT REAR SEAT HEATED SWITCH
RIGHT REAR SEAT HEATED SWITCH
PARK ASSIST MODULE
263397