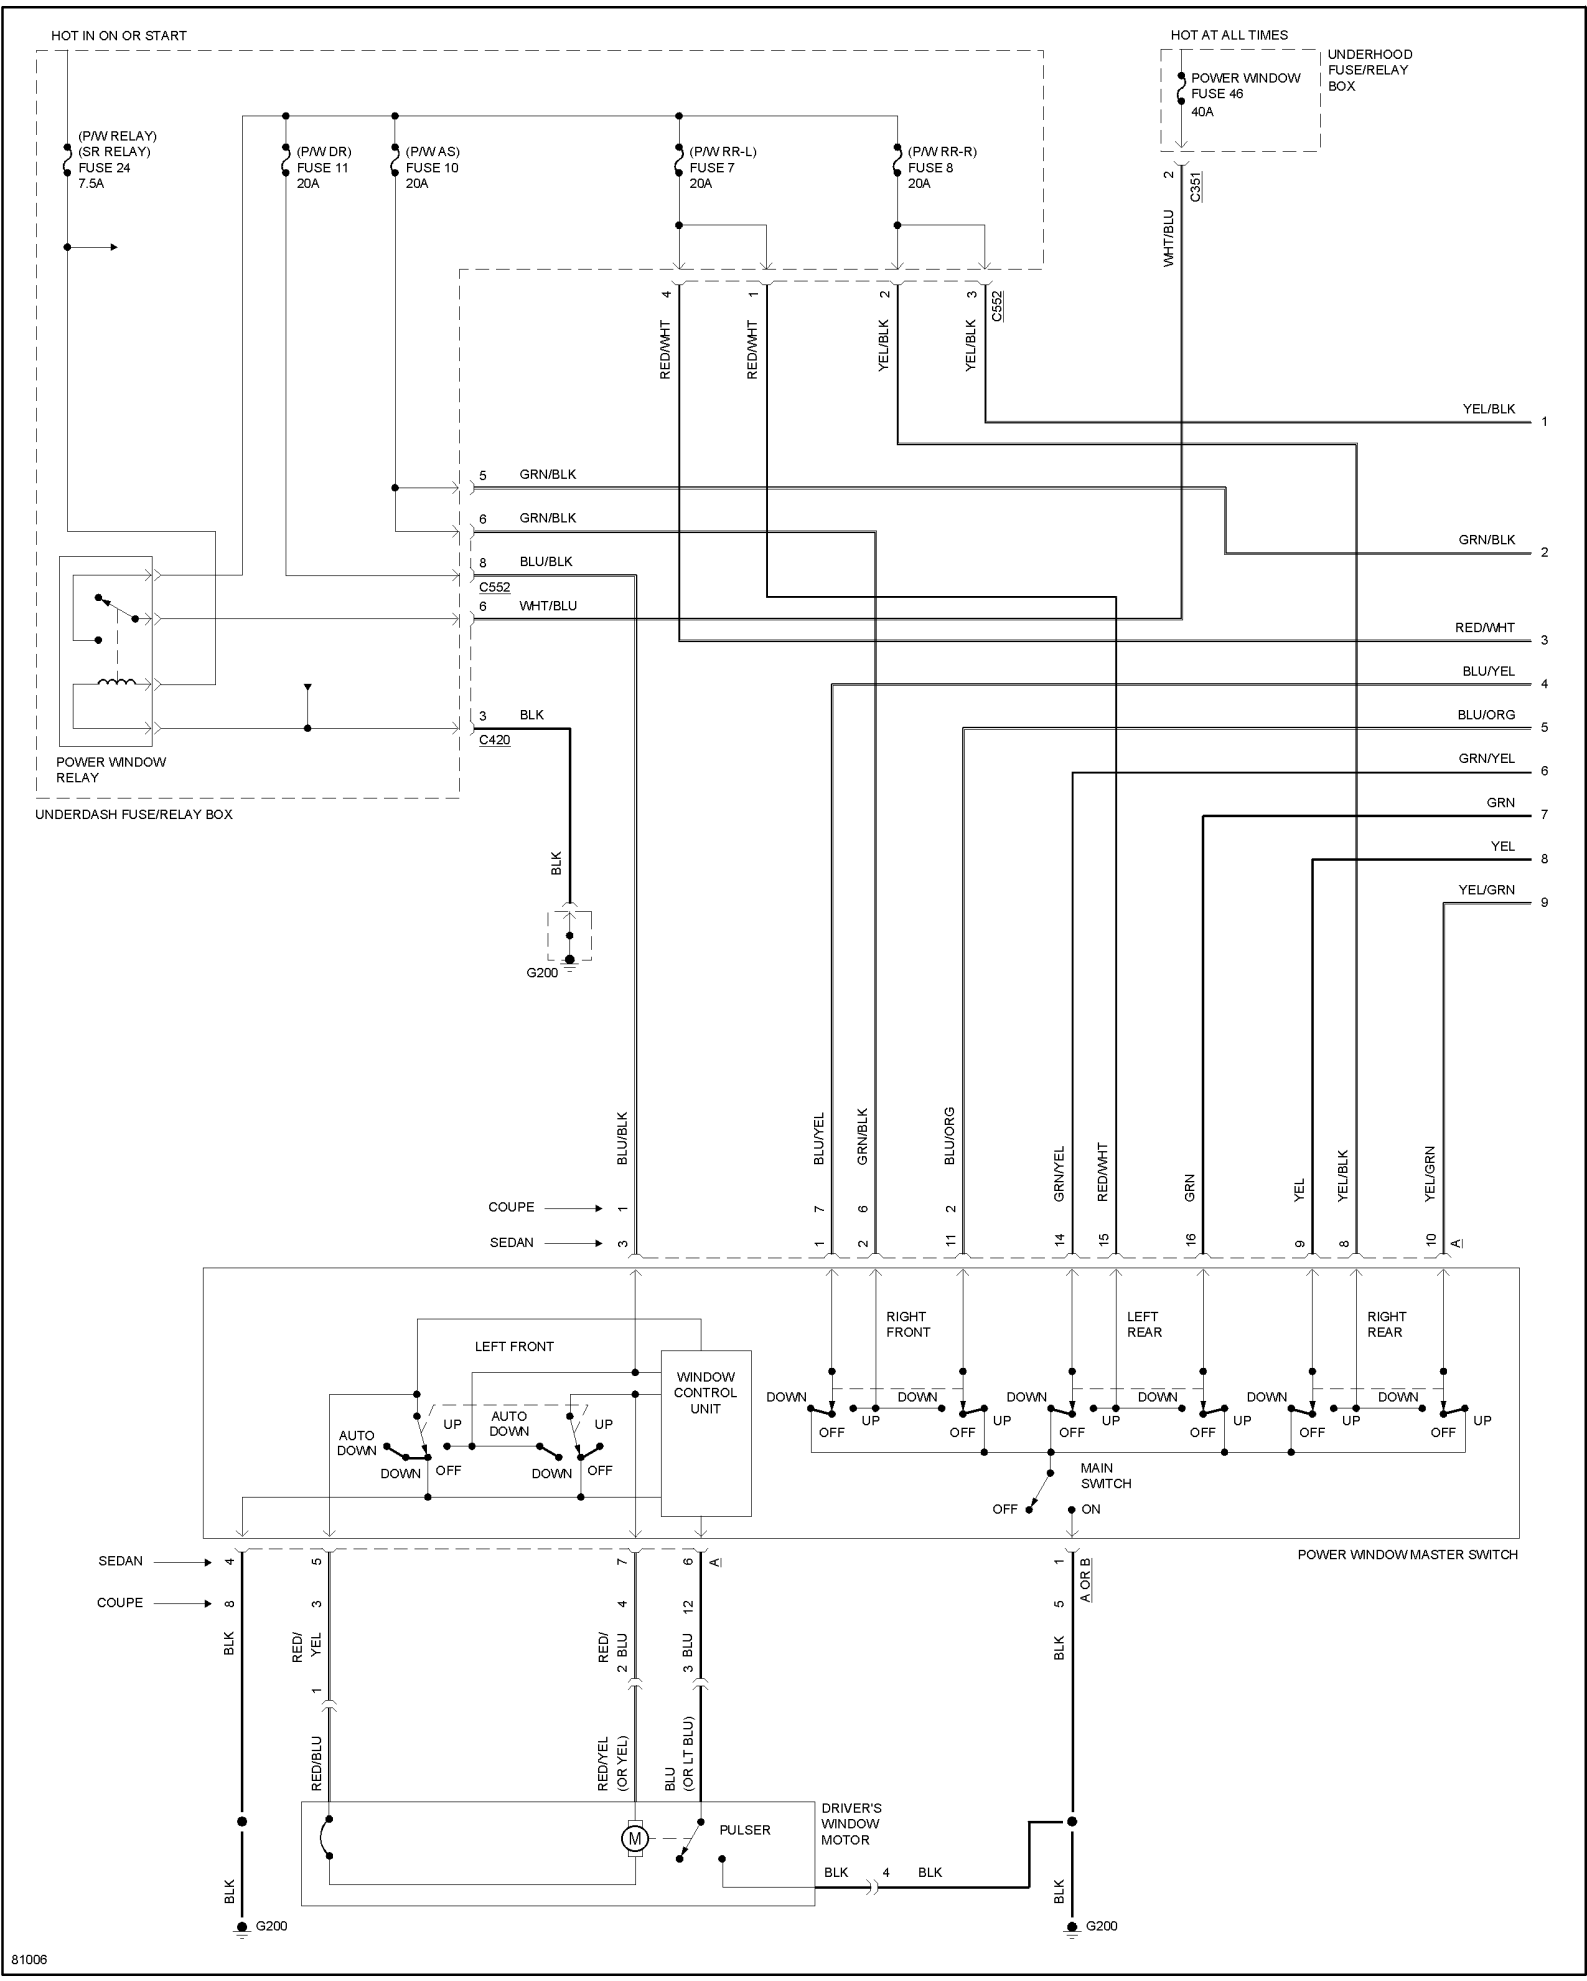
HOT IN ON OR START
HOT AT ALL TIMES
UNDERHOOD FUSE/RELAY BOX
POWER WINDOW FUSE 46 40A
(P/W RELAY) (SR RELAY) FUSE 24 7.5A
(P/W DR) FUSE 11 20A
(P/W AS) FUSE 10 20A
(P/W RR-L) FUSE 7 20A
(P/W RR-R) FUSE 8 20A
C351
WHT/BLU
C552
RED/WHT
YEL/BLK
GRN/BLK
BLU/BLK
WHT/BLU
BLK
C420
POWER WINDOW RELAY
UNDERDASH FUSE/RELAY BOX
G200
BLU/YEL
BLU/ORG
GRN/YEL
GRN
YEL
YEL/GRN
COUPE
SEDAN
LEFT FRONT
WINDOW CONTROL UNIT
AUTO DOWN
DOWN
OFF
UP
RIGHT FRONT
LEFT REAR
RIGHT REAR
MAIN SWITCH
ON
POWER WINDOW MASTER SWITCH
A OR B
RED/YEL
RED/BLU
RED/YEL (OR YEL)
BLU (OR LT BLU)
PULSER
DRIVER'S WINDOW MOTOR
M
81006