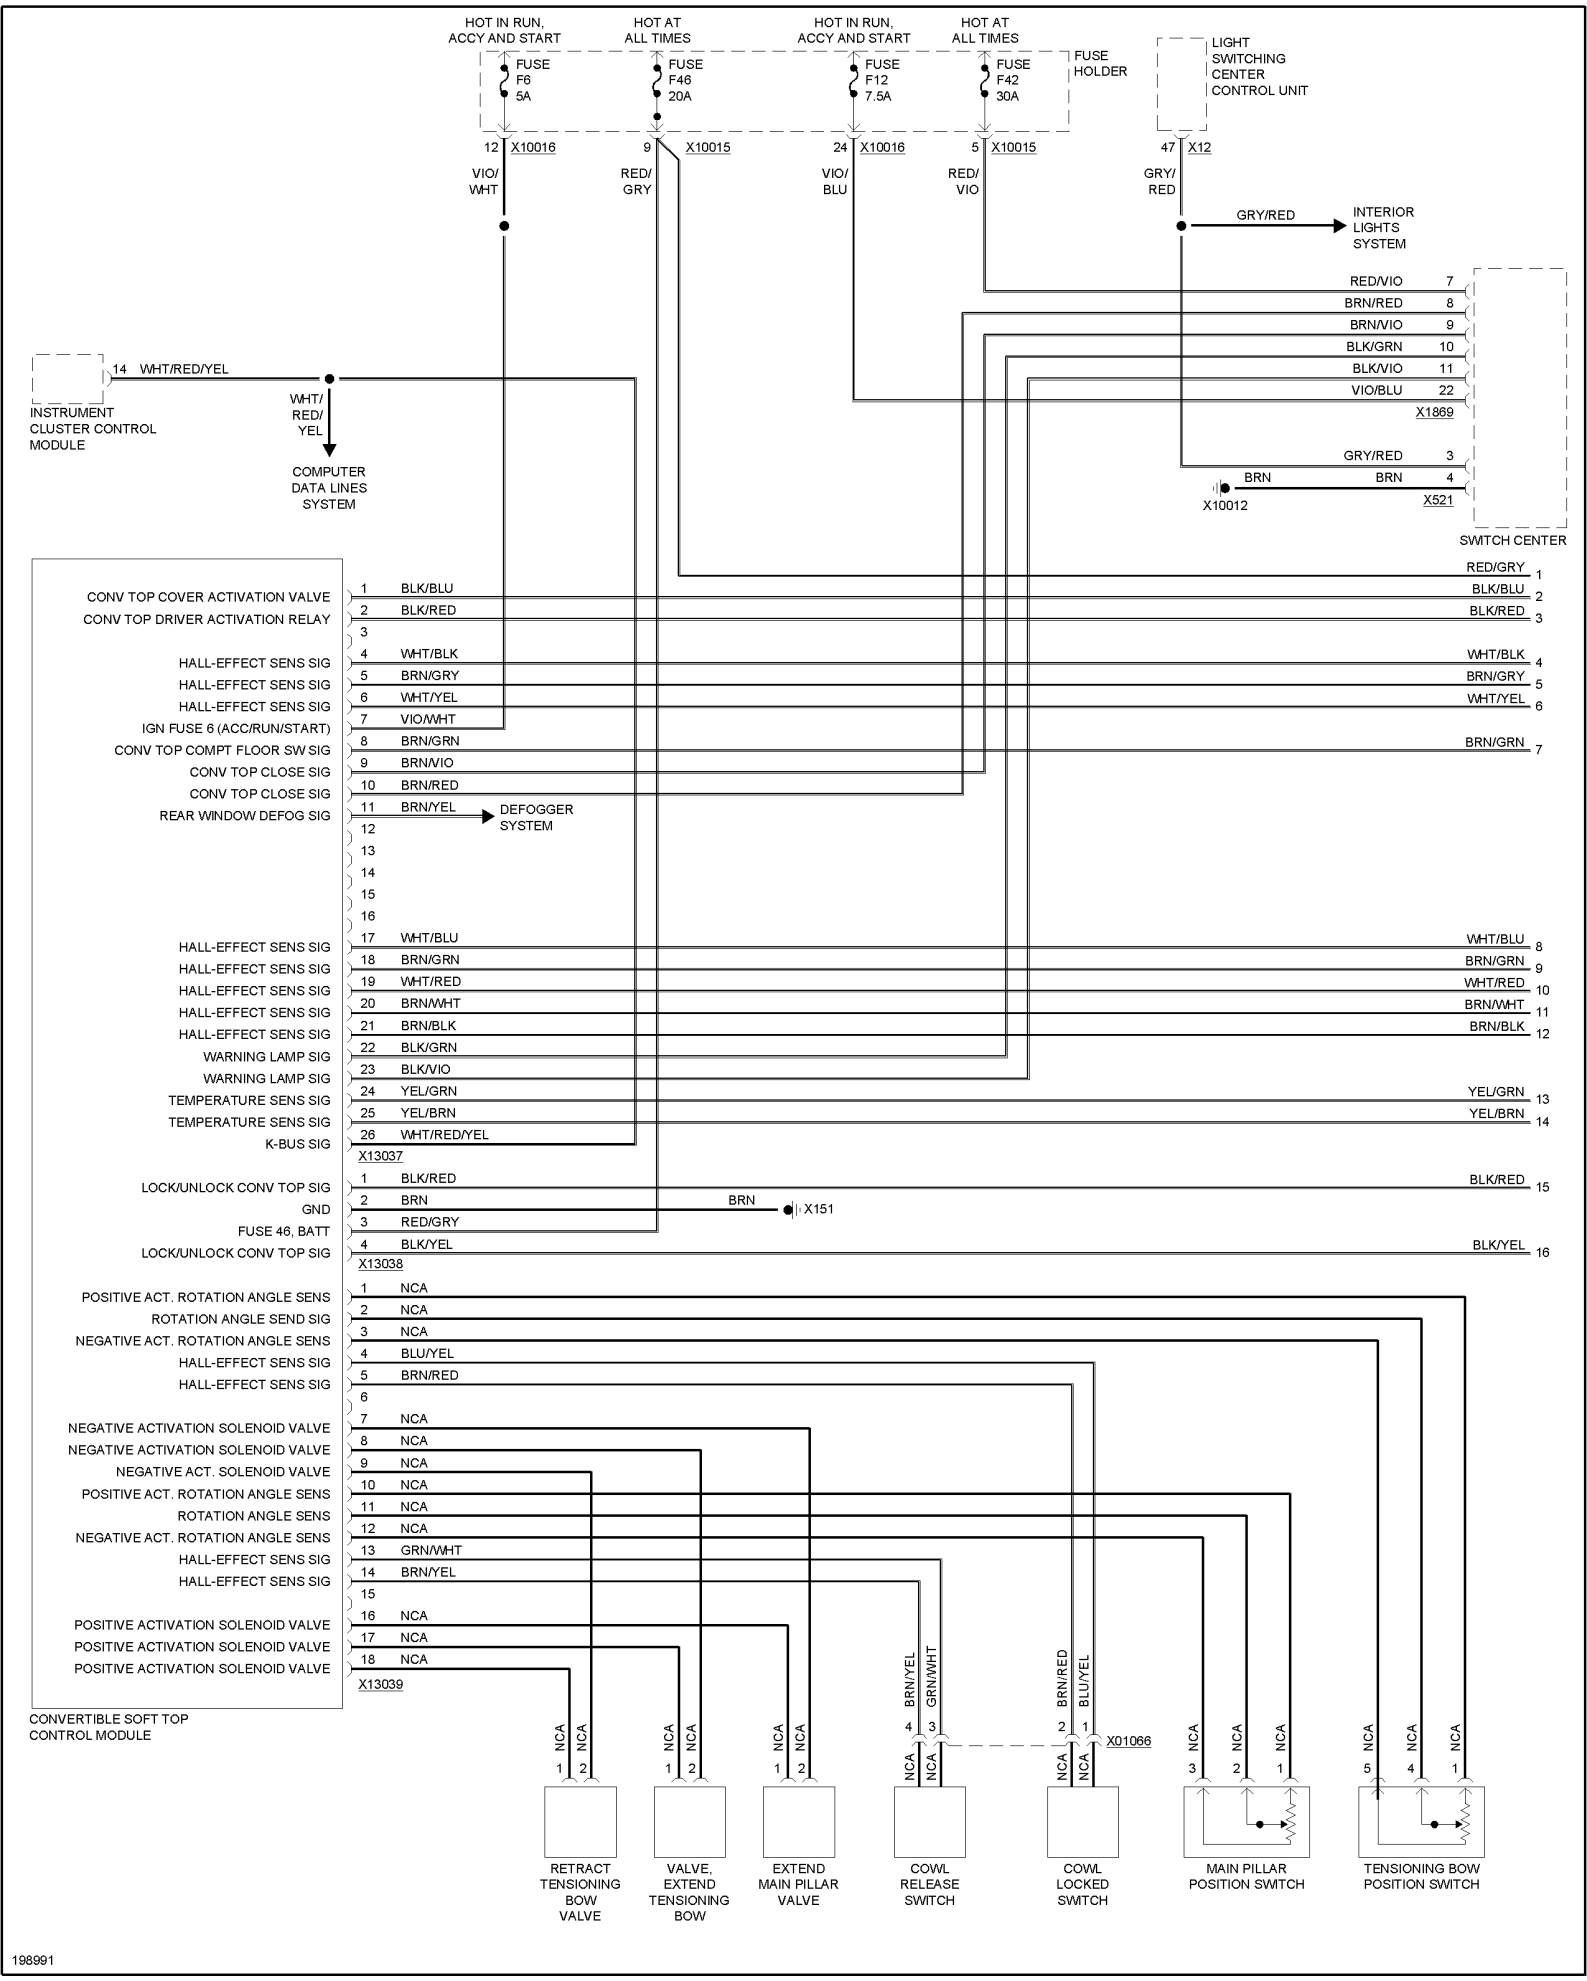
HOT IN RUN, ACCY AND START
HOT AT ALL TIMES
HOT IN RUN, ACCY AND START
HOT AT ALL TIMES
FUSE F6 5A
FUSE F46 20A
FUSE F12 7.5A
FUSE F42 30A
FUSE HOLDER
LIGHT SWITCHING CENTER CONTROL UNIT
12 X10016
9 X10015
24 X10016
5 X10015
47 X12
VIO/WHT
RED/GRY
VIO/BLU
RED/VIO
GRY/RED
GRY/RED
INTERIOR LIGHTS SYSTEM
RED/VIO 7
BRN/RED 8
BRN/VIO 9
BLK/GRN 10
BLK/VIO 11
VIO/BLU 22
X1869
GRY/RED 3
BRN
BRN 4
X521
X10012
SWITCH CENTER
14 WHT/RED/YEL
INSTRUMENT CLUSTER CONTROL MODULE
WHT/RED/YEL
COMPUTER DATA LINES SYSTEM
CONV TOP COVER ACTIVATION VALVE 1 BLK/BLU
CONV TOP DRIVER ACTIVATION RELAY 2 BLK/RED
3
HALL-EFFECT SENS SIG 4 WHT/BLK
HALL-EFFECT SENS SIG 5 BRN/GRY
HALL-EFFECT SENS SIG 6 WHT/YEL
IGN FUSE 6 (ACC/RUN/START) 7 VIO/WHT
CONV TOP COMPT FLOOR SW SIG 8 BRN/GRN
CONV TOP CLOSE SIG 9 BRN/VIO
CONV TOP CLOSE SIG 10 BRN/RED
REAR WINDOW DEFOG SIG 11 BRN/YEL
DEFOGGER SYSTEM
12
13
14
15
16
HALL-EFFECT SENS SIG 17 WHT/BLU
HALL-EFFECT SENS SIG 18 BRN/GRN
HALL-EFFECT SENS SIG 19 WHT/RED
HALL-EFFECT SENS SIG 20 BRN/WHT
HALL-EFFECT SENS SIG 21 BRN/BLK
WARNING LAMP SIG 22 BLK/GRN
WARNING LAMP SIG 23 BLK/VIO
TEMPERATURE SENS SIG 24 YEL/GRN
TEMPERATURE SENS SIG 25 YEL/BRN
K-BUS SIG 26 WHT/RED/YEL
X13037
RED/GRY 1
BLK/BLU 2
BLK/RED 3
WHT/BLK 4
BRN/GRY 5
WHT/YEL 6
BRN/GRN 7
WHT/BLU 8
BRN/GRN 9
WHT/RED 10
BRN/WHT 11
BRN/BLK 12
YEL/GRN 13
YEL/BRN 14
LOCK/UNLOCK CONV TOP SIG 1 BLK/RED
GND 2 BRN
FUSE 46, BATT 3 RED/GRY
LOCK/UNLOCK CONV TOP SIG 4 BLK/YEL
X13038
BRN
X151
BLK/RED 15
BLK/YEL 16
POSITIVE ACT. ROTATION ANGLE SENS 1 NCA
ROTATION ANGLE SEND SIG 2 NCA
NEGATIVE ACT. ROTATION ANGLE SENS 3 NCA
HALL-EFFECT SENS SIG 4 BLU/YEL
HALL-EFFECT SENS SIG 5 BRN/RED
6
NEGATIVE ACTIVATION SOLENOID VALVE 7 NCA
NEGATIVE ACTIVATION SOLENOID VALVE 8 NCA
NEGATIVE ACT. SOLENOID VALVE 9 NCA
POSITIVE ACT. ROTATION ANGLE SENS 10 NCA
ROTATION ANGLE SENS 11 NCA
NEGATIVE ACT. ROTATION ANGLE SENS 12 NCA
HALL-EFFECT SENS SIG 13 GRN/WHT
HALL-EFFECT SENS SIG 14 BRN/YEL
15
POSITIVE ACTIVATION SOLENOID VALVE 16 NCA
POSITIVE ACTIVATION SOLENOID VALVE 17 NCA
POSITIVE ACTIVATION SOLENOID VALVE 18 NCA
X13039
CONVERTIBLE SOFT TOP CONTROL MODULE
BRN/YEL
GRN/WHT
BRN/RED
BLU/YEL
X01066
NCA
RETRACT TENSIONING BOW VALVE
VALVE, EXTEND TENSIONING BOW
EXTEND MAIN PILLAR VALVE
COWL RELEASE SWITCH
COWL LOCKED SWITCH
MAIN PILLAR POSITION SWITCH
TENSIONING BOW POSITION SWITCH
198991