

TMS370 v1.7 ERRATA SHEET

- TMS374C003A already supported
- Serial Ports comm1-comm8 available
- CP2101 USB drivers compatible (Comm -> USB converters, Virtual Com Port Drivers)

Follow next steps to update hardware and software:

1. "START" -> "Control panel" -> "Add/Remove programs"
2. Remove previous version of tms370 control software
3. Install new version 1.7 tms370.exe
4. Un-mount (open/ remove) update jumper to enter update mode **
5. Power ON tms370 programmer board
6. "START" -> "update370.exe"
7. Select comm1 or comm2 serial port and start the update program
8. Power OFF tms370 programmer board
9. Mount (short/ insert) update jumper to leave update mode **
10. Start the tms370.exe control software***

*NOTE: Version 1.7 compatible with Win95/98 OS

**NOTE See TMS370 User's Manual for details

TMS370 v1.7 hardware update SW requirements:

- Free Comm1, Comm2 Serial ports
- tms370uf.hex file in current directory /size 22186/
- tms370_update.exe

***NOTE Click menu item "Help" -> "About" -> "Version"

Make sure, that TMS370 control software 1.7 displayed

TMS375C006, TMS370C702 time instability error fix:

- Replace ceramic resonator to quartz crystal resonator 1 Mhz to fix frequency instability

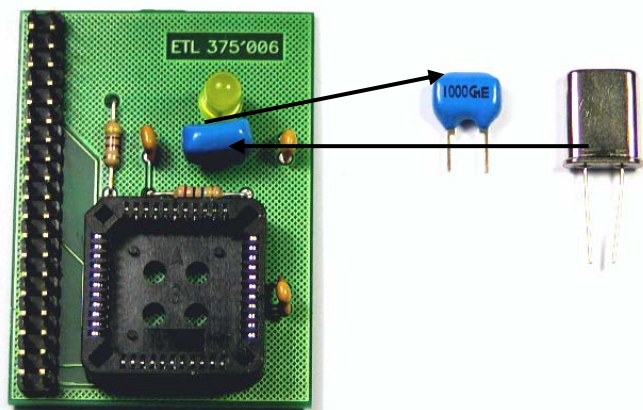


Figure 1.